



XCITE Owner's Manual

1100-6-FT Linear Exciter System

- 1107-4-T/C Exciter Head
 - 1104-MOD4 Master Controller
 - 1001P Field Test Power Supply
 - 2522 Load Cell
-

Copyright 1997
Xcite Systems Corporation

This document contains proprietary information of Xcite Systems Corporation and is tendered subject to the conditions that the information (a) be retained in confidence (b) not be reproduced or copied in whole or in part and (c) not be used or incorporated into any product except under an express written agreement with Xcite Systems Corporation.

Table of Contents

- 1. Warranty P-7**
 - 1.1. Xcite Products P-7
 - 1.2. Third Party Hardware Products P-7
 - 1.3. IMPORTANT LIMITATIONS P-7
 - 1.4. NOTICE OF LIMITED WARRANTY P-8
- 2. Receiving P-8**
 - 2.1. Receiving Inspection Procedure P-8
 - 2.2. Shipping Container P-8

1100-4, 1100-6 and 1100-7 Linear Exciter System
Setup and Operation

- 1. Introduction S&O-1**
- 2. System Description S&O-1**
- 3. Setup Procedure S&O-2**
 - 3.1. Mounting the 1106-4-T/C, 1107-4-T/C or 1114-4-T/C Exciter Head S&O-2
 - 3.2. 1201B or 1301B Hydraulic Power Supply Commissioning Procedure ... S&O-2
 - 3.3. 1001P Field Test Power Supply Commissioning Procedure S&O-3
 - 3.4. Starting the Hydraulic Power Supply S&O-4
 - 3.5. Hydraulic Hookup S&O-5
 - 3.6. Cable Hookup S&O-5
- 4. Operation Procedure S&O-5**
 - 4.1. Switch Settings S&O-5
- 5. Shutdown Procedures S&O-6**
- 6. Troubleshooting S&O-7**
- 7. Storage Instructions S&O-7**

1100, 1200 and 1300 Exciter Heads

- 1. Introduction EH-1**
- 2. Theory of Operation EH-2**
 - 2.1. Introduction EH-2
 - 2.2. Circuit Description (Electric) EH-2
 - 2.2.1. Head EH-2
 - 2.2.2. Displacement Kit EH-2
 - 2.3. Circuit Description (Hydraulic) EH-2
 - 2.3.1. Head EH-2
 - 2.3.2. Displacement Kit EH-3
- 3. Major Components EH-3**
 - 3.1. Cylinder EH-3
 - 3.2. Servovalve EH-3

3.3.	Load Cell	EH-3
3.4.	Displacement Transducer Kit	EH-4
4.	Operation	EH-4
4.1.	Operating Precautions	EH-5
5.	Care and Maintenance	EH-6
5.1.	Each Usage	EH-6
5.2.	Each Month	EH-6
5.3.	Periodic	EH-6
6.	Specifications	EH-6

1001P Field Test Power Supply

1.	Introduction	FTPS-1
2.	Theory of Operation	FTPS-1
2.1.	Hydraulic System	FTPS-1
2.2.	Electrical System	FTPS-2
3.	Description	FTPS-3
3.1.	Pressure Gauge	FTPS-3
3.2.	Power Indicator Lamp	FTPS-3
3.3.	Emergency Stop Switch and Remote Emergency Stop Connector	FTPS-3
3.4.	Hydraulic Supply and Return Connectors	FTPS-3
3.5.	HPC Control Connector	FTPS-4
3.6.	Oil Level/ Temperature Gauge	FTPS-4
3.7.	Voltage Selector Switch	FTPS-4
3.8.	Fuses	FTPS-4
3.9.	Oil Level/ Temperature Switch	FTPS-4
3.10.	Filter Switch	FTPS-4
4.	Preliminary to Operation	FTPS-4
5.	Care and Maintenance	FTPS-5
5.1.	General	FTPS-5
5.2.	Field Test Reservoir Draining/ Refilling Procedure	FTPS-6
5.3.	Change Oil Filter	FTPS-6
6.	Troubleshooting	FTPS-6
7.	Specifications	FTPS-7
8.	Drawings	FTPS-7

Master Controller

1.	Introduction	MC-1
2.	Theory of Operation	MC-1
2.1.	Configurations	MC-1

	2.1.1.	Single Loop	MC-1
	2.1.2.	Dual Loop	MC-1
3.	Description		MC-2
	3.1.	Front Panel	MC-3
	3.1.1.	Static Signal Level Meter (M-101)	MC-3
	3.1.2.	Static Set Point (R301)	MC-3
	3.1.3.	Dynamic Signal Level Meter (M-102)	MC-3
	3.1.4.	Dynamic Set Point (R303)	MC-3
	3.1.5.	Excitation Mode (SW304)	MC-3
	3.1.6.	Interlock (L301)	MC-4
	3.1.7.	Dither - ON/ OFF (SW308)	MC-4
	3.1.8.	Static Set Point (R301)	MC-4
	3.1.9.	Static Gain	MC-4
	3.1.10.	Load Cell	MC-5
	3.1.11.	Calibrate/ Operate (SW307)	MC-5
	3.1.12.	Power (SW301)	MC-5
	3.1.13.	Pump	MC-6
	3.1.14.	Dynamic Set Point (R303)	MC-6
	3.1.15.	Frequency Range - HIGH/ LOW (SW309)	MC-6
	3.2.	Rear Panel	MC-6
	3.2.1.	Exciter Head (J305)	MC-6
	3.2.2.	Displacement (J311)	MC-6
	3.2.3.	Calibration Resistor (J304)	MC-6
	3.2.4.	Static Preload (SW310)	MC-6
	3.2.5.	Interlock (J306)	MC-7
	3.2.6.	Power (J307)	MC-7
	3.2.7.	Fuse (F301)	MC-7
	3.2.8.	Program Input (J308)	MC-7
	3.2.9.	Controlled Variable - Static	MC-8
	3.2.10.	Controlled Variable - Dynamic	MC-8
	3.2.11.	Compression Output (J310)	MC-9
	3.2.12.	Standby Level (R313)	MC-9
	3.2.13.	Load Cell Output (J303)	MC-9
	3.2.14.	Power Amp - INT/ EXT (SW312)	MC-9
	3.2.15.	Power Amp - Input (J312)	MC-9
	3.2.16.	EXT Set Point - Static (J313)	MC-10
	3.2.17.	EXT Set Point - Dynamic (J314)	MC-11
4.	Operation		MC-11
	4.1.	Concept of Operation	MC-11
	4.2.	System Interconnection	MC-12
	4.3.	Operation - Force Control	MC-12
	4.3.1.	Set Controls	MC-12
	4.3.2.	Depress the Power Switch	MC-13

4.3.3.	Adjust Load Cell	MC-13
4.3.4.	Depress Pump Start Button	MC-13
4.4.	Operation - Displacement Control	MC-14
4.4.1.	Set Controls	MC-14
4.5.	Operation - External Variable	MC-15
4.6.	Computer Control - External Set Points (Static and Dynamic)	MC-15
5.	Theory of Operation	MC-16
5.1.	Circuit Descriptions	MC-16
5.1.1.	VR101 (Voltage Regulator)	MC-16
5.1.2.	SW310 (Preload Switch)	MC-16
5.1.3.	A109 (Amplifier)	MC-16
5.1.4.	A104 and A105 (Static Control Loop)	MC-17
5.1.5.	A401 and A402 (Dynamic Loop)	MC-17
5.1.6.	A107 (Inverter Buffer)	MC-18
5.1.7.	A106 and U103 (Peak Detector Circuit)	MC-18
6.	Specifications	MC-19
7.	Drawings	MC-19
8.	Parts List	MC-21
9.	Calibration	MC-26
9.1.	Equipment Needed	MC-26
9.2.	Master Controller	MC-27
9.2.1.	Meter Zero Adjustments	MC-27
9.2.2.	+/-15 Volt Supply Check	MC-27
9.2.3.	+/- 60 Volt Supply Verification	MC-28
9.2.4.	Load Cell Excitation Voltage Verification	MC-28
9.2.5.	Master Controller Board 110-04 Calibration Procedure	MC-28
9.2.6.	Master Controller Board 110-02 Calibration Procedure	MC-31
9.2.7.	Master Controller Board 110-01 Calibration Procedure	MC-31
9.3.	Exciter Head Calibration Procedure	MC-38
9.3.1.	Load Cell Amplifier Calibration	MC-38
9.3.2.	Static Loop Gain Calibration	MC-40
9.3.3.	Static Set Point Level Calibration	MC-42
9.3.4.	High Frequency Dynamic Level Calibration	MC-42
9.3.5.	Low Frequency Dynamic Calibration	MC-43
9.4.	Displacement Calibration Procedure	MC-44
9.4.1.	LVDT Symmetry Verification and Adjustment	MC-44
9.4.2.	Displacement Zero Calibration	MC-45
9.4.3.	Displacement Scaling Calibration	MC-45
9.4.4.	Final External Static Control Variable Calibration	MC-45
9.4.5.	Dynamic Displacement Calibration	MC-45
9.4.6.	External Static and Dynamic Set Point Calibration	MC-46

1. Warranty

1.1. Xcite Products

Xcite Systems Corporation warrants that any Xcite manufactured product will conform to Xcite's written specifications applicable at the time of shipment and will be free from defects in material or workmanship for one year. During the Xcite warranty period, Xcite, or its agent, will repair or replace, at its option, any defective product when returned to the factory, freight prepaid by the buyer, and will return the product freight collect. Xcite assumes no liability for loss or damage during shipment to and from the factory. If insurance on the return shipment is required, it must be specified by the buyer.

1.2. Third Party Hardware Products

Xcite will transfer the original manufacturer's warranty for third party hardware (not manufactured by Xcite) to the buyer. The warranty policy of those companies in effect at the time of shipment will apply to their products, and Xcite assumes no additional responsibility. Xcite will indicate on its invoice the warranty terms relevant to specific Third Party Hardware items.

1.3. IMPORTANT LIMITATIONS

- 1.3.1.** The warranty period commences upon the day of shipment from Xcite without respect to any acceptance criteria or payment provisions in any particular contract.
- 1.3.2.** The warranty period does not apply to normal wear items or to damage caused by abuse, neglect or accident.
- 1.3.3.** Xcite's responsibility is limited to the above obligations, and Xcite cannot be held responsible for special or consequential or other damages.

ALL OTHER EXPRESS OR IMPLIED WARRANTIES, INCLUDING MERCHANTABILITY AND FITNESS FOR PURPOSE, ARE EXCLUDED.

1.4. NOTICE OF LIMITED WARRANTY

THE FOLLOWING ITEM(S) INCLUDED IN THIS XCITE PRODUCT OR SYSTEM ARE EXCLUDED FROM OUR ONE YEAR WARRANTY BECAUSE THEY ARE NORMAL WEAR ITEMS:

- 1) All system seals
- 2) Servovalve*

*The servovalve used on this system will be damaged if any particle(s) larger than 10 microns are permitted to enter the valve. Extreme care should be exercised when the hydraulic hoses are connected to ensure no foreign particles enter the connections. It is recommended to always wipe the hydraulic couplings with lint free towel before making connections. Always use the protective dust covers on the hoses (the dust covers can be connected together when operating the system). Any damage to the servovalve as a result of contamination is specifically excluded from warranty.

2. Receiving**2.1. Receiving Inspection Procedure**

Xcite Systems Corporation products are shipped in a manner designed to protect against all normal shipping hazards. Immediately upon receipt, inspect all equipment and note any visible damage. In accordance with the instructions in this manual, test its functional operation. Keep all documents in relation to this shipment. If shipping damage is apparent, file a claim with the carrier's claim agent and send a copy to Xcite Customer Service. Be sure to include the product name, model number and serial number on all correspondence.

2.2. Shipping Container

Shipping containers are supplied with all Xcite products. Store these containers and inserts in a dry area for possible later use.

1100-4, 1100-6 & 1100-7 Linear Exciter System Setup and Operation



1100-4, 1100-6 & 1100-7 Linear Exciter System

1. Introduction

The function of this system is to impart a controlled force into structures such as machine tools, automobiles and truck suspensions. The force generation is accomplished by a closed loop electrohydraulic system which can apply a static preload in addition to dynamic force up to 1200 Hz under either sine or random conditions.

The static control loop of the system utilizes either the built-in Displacement Transducer (LVDT) or strain gage load cell as feedback and controls the static position of the mass while the dynamic control loop utilizes the built-in load cell as feedback to measure and control the dynamic force applied to the structure under test.

2. System Description

1100-4 System	<ul style="list-style-type: none">● 1106-4-T/C Exciter Head● 1104-Mod4 Master Controller● 1001P Field Test Power Supply or 1201B or 1301B Laboratory Power Supply
1100-6 System	<ul style="list-style-type: none">● 1107-4-T/C Exciter Head● 1104-Mod4 Master Controller● 1001P Field Test Power Supply or 1201B or 1301B Laboratory Power Supply
1100-7 System	<ul style="list-style-type: none">● 1114-4-T/C Exciter Head● 1104-Mod4 Master Controller● 1001P Field Test Power Supply or 1201B or 1301B Laboratory Power Supply

This manual contains a section of detailed information on each of these components, and the user should familiarize himself or herself with this information before using the system.

If the user has purchased the Exciter Head and Master Controller without an Xcite Hydraulic Power Supply, any reference to the power supply in this manual applies to whatever source of hydraulic power the user has elected.

3. Setup Procedure

3.1. Mounting the 1106-4-T/C , 1107-4-T/C or 1114-4-T/C Exciter Head

- 3.1.1. The Exciter head may be mounted in any orientation but care must be taken to provide strain relief on hoses and cables if the unit is mounted at heights which would add significant loads to the hoses and cables.
- 3.1.2. The Exciter mounting base has clearance holes for mounting. Secure the unit so that it will not “walk” when exciting resonant frequencies of the structure.
- 3.1.3. **CAUTION!** Care must be taken that the Exciter is firmly and squarely attached to the back up fixturing. Any clearances or dead zones in the attachment or dynamics of any fixtures will cause distortion of the force waveform.

3.2. 1201B or 1301B Hydraulic Power Supply Commissioning Procedure

- 3.2.1. Remove all packing material from inside and outside the pump cabinet.
- 3.2.2. Remove the main power cable from inside of cabinet.
- 3.2.3. Fill oil reservoir with new, clean Mobile DTE-24 hydraulic fluid (or equal). Check oil sight gage for proper oil level.
- 3.2.4. Connect one of the exciter head 20 foot hoses to both the pressure out and return quick disconnects. This procedure effectively “short circuits” the output to the return and allows for all entrapped air in the pump to be removed on initial startup. Remove this connection after 5 to 10 minutes of running time.
- 3.2.5. Connect main power cable to main electrical service. The 1201B or 1301B Hydraulic Supply is wired for 230V, 60 Hz; 460V, 60 Hz or 380V, 50 Hz, 3 phase mains. The 3 phase wire colors are Red, Black and White. Ground (Green Wire) must be connected or ground loops will exist in instrumentation causing 60 Hz or 50 Hz signal noise.
- 3.2.6. Connect the 1104-MOD2 pump control cable (B-11921) to the hydraulic power supply and to the rear panel connector of the Master Controller.

- 3.2.7. Turn on the Main Power Switch (large red switch) located on the Hydraulic Power Supply.
- 3.2.8. Verify that the yellow *PHASE CORRECT* light is lit. If not, reverse the Red and Black wires at the main power connection. The pump will not start until the “phase correct” lamp is illuminated.

3.3. 1001P Field Test Power Supply Commissioning Procedure

- 3.3.1. Remove the covers from the front and rear of the unit.
- 3.3.2. Select either 115 VAC or 220 VAC with the *VOLTAGE SELECTOR* switch on the “Electrical Control Box #2” at the top, rear of the power supply. **See Drawing B-30116 located at the end of the Field Test Power Supply Manual Section.**
- 3.3.3. Connect the power cord to a 115 VAC (35 A service) or 220 VAC (20 A service) source. **Be sure to connect the black and white wires to the voltage source and the green wire to a solid ground lug. The red wire is NOT used.**
- 3.3.4. The power supply front panel green light should be illuminated indicating that power has been applied.
- 3.3.5. Remove the cap fitting on the hydraulic reservoir fill hose and insert the hose in a 5 gallon container of Mobil DTE-24 or DTE-25 clean oil and set the ball valve located at the rear, bottom of the pump cabinet to the *FILL* position. **See Drawing B-30112 located at the end of the Field Test Power Supply Manual Section.**
- 3.3.6. Turn on the *TRANSFER PUMP* switch located on the “Electrical Control Box #2” at the top, rear of the Power Supply. **See Drawing B-30116**
- 3.3.7. It will take approximately 5 minutes for the oil to reach the sight gage at the top of the reservoir. Be careful to NOT OVERFILL THE PUMP RESERVOIR! Fill to the top gradicule and turn off the *TRANSFER PUMP* switch.
- 3.3.8. Replace the fill hose cap fitting.

- 3.3.9. Connect the 1104-Mod4 pump control cable (B-11921) to the *CONTROLLER* connector of the power supply and the rear panel connector of the Master Controller.
- 3.3.10. Connect one of the exciter head 20 foot hoses to both the pressure out and return quick disconnects. This procedure effectively “short circuits” the output to the return and allows for all entrapped air in the pump to be removed on initial startup. Remove this connection after 5 to 10 minutes of running time.

3.4. Starting the Hydraulic Power Supply

- 3.4.1. Check to see that the Red *EMERGENCY STOP BUTTON* located on the Power Supply is pulled out. The unit will not start if this switch is pushed into its *STOP MODE*.
- 3.4.2. Push the Red *POWER* button on the Master Controller. It should light up along with the *PUMP STOP* light.
- 3.4.3. Push the *PUMP START* button on the Master Controller and the Power Supply should start up. The *GREEN* voltage applied light should be illuminated at this time. (Pump pressure will be *ZERO* due to the short circuit hose). After 5 to 10 minutes, shut down the pump. **See 3.2.4.**
- 3.4.4. Remove the hose connecting the pressure out to the return. Restart the Power Supply. Allow approximately 10 to 30 seconds for the pump to come up to 3000 psi. Check the pressure on the gage located on the side of the Hydraulic Power Supply. It should read approximately 3000 to 3200 psi.
- 3.4.5. Verify that the fan motor located in the Hydraulic Power Supply is operating.
- 3.4.6. The 1001P or 1201B or 1301B Hydraulic Power Supply is now running correctly.
- 3.4.7. Push the *PUMP STOP* button. The power supply will shut down and the *PUMP STOP* switch will stay lit.
- 3.4.8. Push the *POWER* switch of the Master Controller to turn it off.

3.5. Hydraulic Hookup

3.5.1. Connect the Hydraulic Power Supply pressure and return hoses to the Exciter Head pressure and *Return* hoses via the polarized quick disconnects supplied with the system hoses.

3.5.2. Take care to maintain cleanliness by always attaching caps to the quick disconnects when disconnected.

3.5.3. When in doubt about hose polarity, the convention is:

Supply Pressure - Coupler

Supply Return - Nipple

3.5.4. Take care that hoses will not rub against sharp objects when pulsating.

3.6. Cable Hookup

3.6.1. Connect cable C-11226 to the Master Controller rear panel connector and to the servovalve and load cell of the Exciter Head.

3.6.2. Connect cable B-11689 to the rear panel connector of the Master Controller and the displacement connector of the Exciter Head.

4. Operation Procedure

4.1. Switch Settings

4.1.1. Set the switches on the back of the Master Controller to the following:

CONTROLLED VARIABLE

STATIC

EXTERNAL

(Static Displacement
Control)

INTERNAL

(Static Force Control)

DYNAMIC

INTERNAL

STATIC PRELOAD

COMPRESSION

POWER AMP

INT

- 4.1.2.** Set the switches on the front of the Master Controller to the following:

DITHER	OFF
STATIC SET POINT	0.0
STATIC GAIN	VARIABLE (For Displacement Control) FIXED (For Force Control)
VARIABLE GAIN	5.0
LOAD CELL	OPERATE
EXCITATION MODE	STANDBY/ RESET
FREQUENCY	HIGH
DYNAMIC SETPOINT	0.0

- 4.1.3.** Connect a 1.0 Vrms variable frequency oscillator to the Program Input J308. (1 Hz to 2000 Hz)
- 4.1.4.** Press *POWER* on Master Controller. The *POWER* light will be illuminated.
- 4.1.5.** Press *PUMP START* on the Master Controller.
- 4.1.6.** Turn the *EXCITATION MODE* to *STATIC*. The *STATIC SIGNAL LEVEL* should remain at 0% since the *STATIC SETPOINT* is set to 0.0. Turn the *STATIC SETPOINT* to the position desired of the piston (or static force level if in *FORCE CONTROL MODE*).
- 4.1.7.** Turn *EXCITATION MODE* to *STATIC + DYNAMIC*.
- 4.1.8.** Slowly increase the *DYNAMIC SETPOINT* until the desired force is monitored at the *DYNAMIC SIGNAL LEVEL* meter and is measured at the *LOAD CELL OUTPUT BNC*. The output voltage is calibrated at 250 lb/ volt.

5. Shutdown Procedures

- 5.1.** Turn *EXCITATION MODE* to *STANDBY/ RESET*.
- 5.2.** Push *PUMP STOP* of the Master Controller.

6. Troubleshooting Guide

Problem	Action
Static meter does not indicate piston is retracted when system is turned on in Standby/ Reset mode. OR Static meter does not show changes in displacement or force when the set point is changed.	Check that the hydraulic power supply is turned on and reading 3000 psi. See 3.4. Check that all hoses and cables are connected. See 3.5. and 3.6. Verify that all Master Controller switches are in the correct position. See 4.1.1. and 4.1.2.
No force is measured at the Force Output BNC or is indicated on the Dynamic meter when the system is in the Static + Dynamic Mode.	Verify that the 1 V rms signal from the signal source is connected to the Program Input BNC on the back of the Master Controller. See 4.1.3. Verify that the Dynamic Set Point potentiometer is turned up. See 4.1.8.

7. Storage Instructions

Be sure to attach the caps and plugs to all hydraulic quick disconnects to protect from contamination when not in use.

Keep the system in a clean and low humidity environment when not in use.

1100, 1200 & 1300 Exciter Heads



1. Introduction

The linear single-ended exciter head is a high-force, wide frequency response, linear actuator designed to be used in a closed loop control system. It is ideally suited for mechanical impedance and component testing. Using the latest design concepts in force transducers and servovalves has resulted in a compact Exciter Head that is suited to simulate the level and direction of input forces encountered in complex machinery. A load cell provides a force feedback signal for monitoring and closed loop force control of the actuator. A tandem mounted displacement kit provides a feedback signal for closed loop displacement control of the exciter.

The Displacement Kit is designed to provide a displacement feedback signal for an exciter head. When used with the MOD4 version of the Xcite Master Controller, the Displacement Kit provides a means of monitoring or controlling low-frequency displacements. Also, the kit may be used to maintain a static or mean position while controlling another dynamic variable, such as force, velocity, or acceleration. The Kit is constructed such that it becomes an integral part of the exciter head. It is mounted along-side of the actuator to maintain the small total package size.

The Exciter Head, supplied with all necessary electrical and hydraulic connectors, is designed so that wrong connections cannot be made. Also included on all standard exciter heads is a miniaturized strain-gauge force transducer that permits continuous monitoring of static and dynamic forces.

Use the following table to determine the force capacity for your model.

Model	1106	1107	1206	1207	1207A	1352	1306
Static Force (lbs)	1000	1000	2000	2000	4000	5000	20,000
Dynamic Force (lbs)	1000	1000	2000	2000	2000	5000	20,000

WARNING

Precautions regarding the test specimen should be considered.

Although exciter heads are rated for static plus a peak dynamic force, exciter heads are capable of compressive forces in excess of 200% of their rating, and tensile forces in excess of 100% of that rating if instability in the control loop occurs.

2. Theory of Operation

2.1. Introduction

The major function of the exciter head is to apply a controlled static force preload and a controlled random or sinusoidally varying dynamic force (variable frequency), to a test structure. The cylinder rod is the actual output device. The force transducer and servovalve control this output. The load cell provides an output signal proportional to static loads, but unlike a piezo-electric transducer, operates from DC to 1500 Hz. Thus, the cell is well suited to provide a constant monitor of the exciter's preload for use in the control circuitry. The load cell provides a signal proportional to time-varying forces (dynamic) and therefore provides complete signal information on the output force.

The servovalve is supplied a constant source of pressure (3000 psi) which is applied to either side of the exciter's cylinder in a differential manner. The driving signal to the servovalve is provided by the system controller.

2.2. Circuit Description (Electric)

2.2.1. Head

The load cell and servovalve are separately connected to their respective cable connectors. Shielded cable is used throughout to provide optimum reduction of externally induced noise voltage.

2.2.2. Displacement Kit

All connections to the Displacement Kit are through a single connector mounted in the Displacement Kit cover. Pins A and B of this connector are +15 VDC and ground respectively. These bring power from the Controller to the LVDT. On selected models, a filtering capacitor (68 mfd) across these pins is used to reduce noise generated by the LVDT from getting back to the controller circuitry. Pins C and D are the displacement feedback signal leads to the Controller.

2.3. Circuit Description (Hydraulic)

2.3.1. Head

Oil is supplied to the exciter head at 3000 psi by the hydraulic power supply. The servovalve controls the flow of oil into the cylinder ports, creating a differential pressure according to the force demands of the control system. Oil from the servovalve is routed back to the hydraulic supply.

2.3.2. Displacement Kit

The Displacement Kit consists of an Exciter Head top plate, an LVDT-type displacement transducer, and a cover with electrical connector. The top plate contains a means for clamping the LVDT and a self lubricating bronze impregnated bushing which prevents side loading of the LVDT core. The displacement transducer is an integrated package consisting of a solid-state oscillator, and a phase-sensitive demodulator. The coils of the transformer are connected in series opposition so that output resulting from a displacement is a DC voltage proportional to the core position with respect to the electrical center. The polarity of the voltage is a function of the direction of the core displacement with respect to the electrical center.

3. Major Components**3.1. Actuator**

The hydraulic actuator consists of a cylinder, a single ended piston, a specially designed bearing to minimize oil leakage and increase seal life, and a manifold for routing the oil from the external supply hoses to the servovalve and hydraulic cylinder. The built-in oil routing from external hoses to the servovalve is designed for safety and to meet the response and force requirements of the system. Cylinder specifications for Xcite heads discussed in this manual are in the following table.

Model	1106	1107	1206	1207	1207A	1352	1306
Bore	1"	1"	1.5"	1.5"	2"	1.75"	5"
Stroke	1"	2"	1"	2"	2"	3"	1"

3.2. Servovalve

The servovalve is a dual-stage flow-control device using electromagnetic drive in the first stage to control the hydraulically amplified second stage. This second stage provides the differential pressure flow to control the piston. Hydraulic fluid entering the valve must be filtered to 3 micron absolute to prevent damage to the servovalve. The unit is NOT customer-serviceable.

3.3. Load Cell

The load cell is a force transducer which incorporates a 350 ohm 4-leg strain gage. By applying a voltage across the strain-gage bridge, a differential voltage proportional to force is developed at the bridge output. The load cell excitation voltage is provided by a precision voltage reference in the Master Controller.

The Load Cell may be used for testing in tension, compression, or a combination of both. The cell is sized so that the maximum load of the exciter head cannot damage the unit.

Calibration is performed by simulating bridge unbalance with a known value of resistance. The excitation voltage of the bridge is then adjusted to obtain the force value stated on the load cell resistor calibration plug. The Calibration Plug, showing the calibration value unique to the load cell used in your unit, is included with the system. The "Cal Plug" is inserted in its appropriate receptical located on the rear of the Master Controller.

3.4. Displacement Transducer Kit

The Displacement Kit consist of a Linear Variable Displacement Transducer (LVDT) and the hardware necessary to mount it to the exciter head.

The LVDT is a sealed assembly which contains all necessary solid-state electronics required to develop a voltage proportional to the stroke of the piston. The unit consists of a stationary coil assembly which is clamped to the cylinder and a core (rod) which is attached to the piston. An oil impregnated bronze bushing prevents the piston from turning and causing misalignment in the core/coil assemblies.

The core position is adjusted so that the LVDT output is equal and of opposite polarity at the extreme limits of piston position. A voltage null represents mid-stroke of the piston. The output is nominally +/- 12 VDC for an input of 15 VDC which is supplied by the Master Controller via the displacement cable. Internal amplifiers in the Master Controller convert the +/- 12 VDC signal from the LVDT to 0 to +10 VDC for monitoring of the displacement signal. Calibration is such that +10 volt output always equals the overall stroke of the exciter head. For example, a 2" stroke exciter head will have an output sensitivity of 2 in/ 10V or .2 in/ Volt.

4. Operation

All operations of the Exciter Head are controlled by the appropriate Xcite Controller. Please refer to the Master Controller section in this manual for proper use of the system.

WARNING

Before performing any test, check the mounting of the load cell to the actuator. The load cell must be firmly mounted to the actuator or fatigue failure of the actuator mounting stud may occur.

4.1. Operating Precautions

- 4.1.1.** Unless the Load Cell is attached to the test specimen, the peak dynamic force should not exceed the static force. This can cause the Load Cell to pull away from the test piece every half cycle, and impact or hammer the test piece on the other half cycle. Damage inflicted on the load cell in this manner is not covered under any Xcite warranty.
- 4.1.2.** If the feedback signal is broken or the controller malfunctions, the exciter can output full force. Since the servovalve functions as a differential device, the full 3000 psi applied to the bottom side of the piston will produce in excess 100% of the rated forces.
- 4.1.3.** Proper selection of feedback signal can improve exciter performance and provide data with greater dynamic range.

EXAMPLE:

A vibration test is to be performed on a test specimen requiring static preload that must be held as accurately as possible to 5000 pounds. The test specimen has a static stiffness (k) of 20,000 pounds per inch. Should the static loop of the controller use force feedback or displacement feedback? Consider the following:

The usable range of most control loops is approximately 40 dB (ratio of 100:1). An exciter with a one inch stroke and 58,000 pound total force capability used to perform this test would result in displacement control down to .01 inch or force control down to 580 pounds.

Therefore, if force is used to control the static loop, accuracy should be easily held to 5,000 pounds, +/-580 pounds.

However, if displacement is used to control the static loop, accuracy could be held to .01 inch. With a static stiffness of 2×10^4 lbs/ in, this would result in force control accuracy of 5,000 pounds, +/-200 pounds (.01 inch x 2×10^4 lbs/ in = 200 pounds).

In conclusion, it is very important that you understand how to operate the system and make proper decisions on test methods to be used.

5. Care and Maintenance

Maintenance is minimal. Precautions for cleanliness are the major considerations.

5.1. Each Usage

End/ Dust covers should always be kept on the Exciter Head hoses when they are not connected because contaminants larger than 3 micron can damage the servovalve.

The top plate should always be kept clean to prevent piston scouring. Additionally, dirt on the top plate will affect the LVDT.

5.2. Each Month

Place a few drops of any lubrication oil on the linear guide bearing for the Displacement Transducer.

5.3. Periodic

Periodically replace the piston rod seals. These can be expected to last a minimum of 100 hours of operation and longer if side load is kept at a minimum. When leakage from the top of the exciter head becomes excessive, the seals should be replaced by returning the Exciter Head to the factory.

6. Specifications

Output Response

The force output is both a function of frequency, and test specimen stiffness.
(See enclosed Response curve)

Model	1106	1107	1206	1207	1207A	1352	1306
Dimensions							
Height	6.12"	7.12"	9.75"	10.75"	10.75"	23"	20.5"
Width	5.87"	5.87"	7.87"	7.87"	9.62"	14"	13"
Depth	3.75"	3.75"	4.18"	4.18"	5.13"	12"	10"
Stroke (Peak to Peak) ¹	2"	2"	1"	2"	2"	3"	1"
Displacement Kit	MT-302	MT-303	MT-302	MT-303	MT-303	MT-305	MT-302

Displacement Kit Model Number	MT-302	MT-303	MT-305
Displacement Transducer			
LVDT rated linear range	+/- .5"	+/- 1"	+/- 1.5"
LVDT maximum usable range	+/- .75"	+/- 1.5"	+/- 2.0"
Input (fixed by controller)	+15 VDC	+15 VDC	+15 VDC
Output	0-10 VDC	0-10 VDC	0-10 VDC
Frequency Response (3 dB point)	110 Hz	100 Hz	75 Hz
Linearity	+/- .5% of full scale output at rated linear range (deviation from best straight line passing through 0)		



Xcite 1100 Field Test Series

The Xcite 1100 Field Test Series uses the same Exciter Heads and Master Controller as the 1100 Laboratory Series but replaces the 5 GPM 3-Phase Hydraulic Power Supply with a field portable 1.2 GPM Single Phase Power Supply. While providing the same 3000 PSI pressure, the field test unit is switch selectable from 110 V (20 A) to 220 V (10 A) single phase power.

This simplified power requirement along with the packaging of the unit in a roto-molded shipping case provide for ease of modal testing in remote areas of your facility and allows air shipment to off site test destinations. The 1100 Field Test Series is used in the power and natural gas distribution industries as well as on shipboard structure borne noise path identification.




	Xcite 1100-4-FT System	Xcite 1100-6-FT System	Xcite 1100-7-FT System
Hydraulic Power Supply	1001P 1.2 GPM (5 l/m)	1001P 1.2 GPM (5 l/m)	1001P 1.2 GPM (5 l/m)
Master Controller	1104-Mod4	1104-Mod4	1104-Mod4
Exciter Head	1106-4-T/C	1107-4-T/C	1114-4-T/C
Static Force	1,000 lb (4,450 N)	1,000 lb (4,450 N)	Total Static & Dynamic Force = 1,000 lb (4,450 N)
Dynamic Force	1,000 lb (4,450 N)	1,000 lb (4,450 N)	1,000 lb (4,450 N)
Stroke	1.0 in (25 mm)	2.0 in (50 mm)	1.0 in (25 mm)
Rod	.75 in (18 mm)	.75 in (18 mm)	.75 in (18 mm)
Bore	1.0 in (25 mm)	1.0 in (25 mm)	1.0 in (25 mm)
Thread	.38 - 24	.38 - 24	.38 - 24
Load Cell	2,500 lb (11,125 N)	2,500 lb (11,125 N)	2,500 lb (11,125 N)
LVDT	1.0 in (25 mm)	2.0 in (50 mm)	1.0 in (25 mm)
Exciter Design	Single Ended	Single Ended	Double Ended

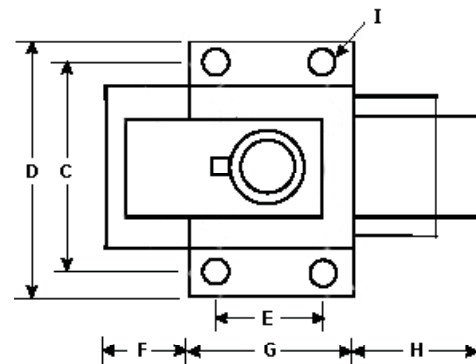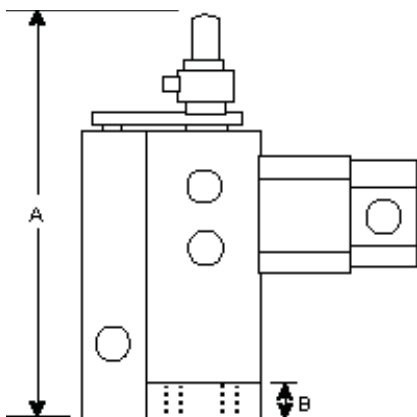


Exciter Head	A		B		C		D		E		F		G		H		I	
	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in(dia)	mm(dia)	in(dia)	mm(dia)
1106-4-T/C	6.12	153	0.60	15	3.12	78	3.75	94	1.38	35	1.12	28	2.00	50	2.75	69	0.28	7
1107-4-T/C	7.12	178	0.60	15	3.12	78	3.75	94	1.38	35	1.12	28	2.00	50	2.75	69	0.28	7
1114-4-T/C	8.78	220	0.60	15	3.12	78	3.75	94	1.38	35	1.12	28	2.00	50	2.75	69	0.28	7

Xcite 1100-4 Field Test System

Peak Dynamic Force vs. Frequency

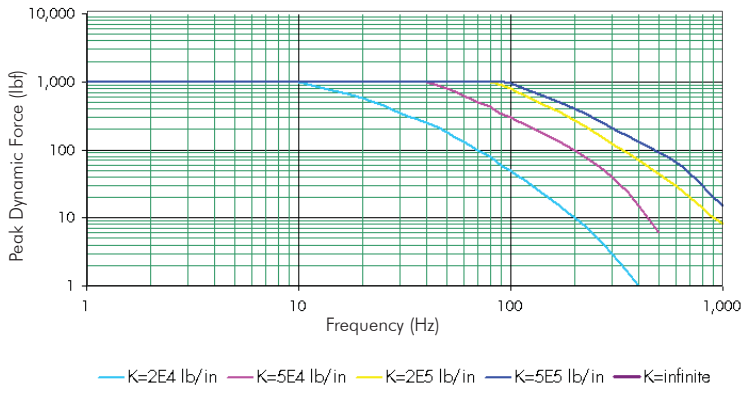


Peak Displacement vs. Frequency

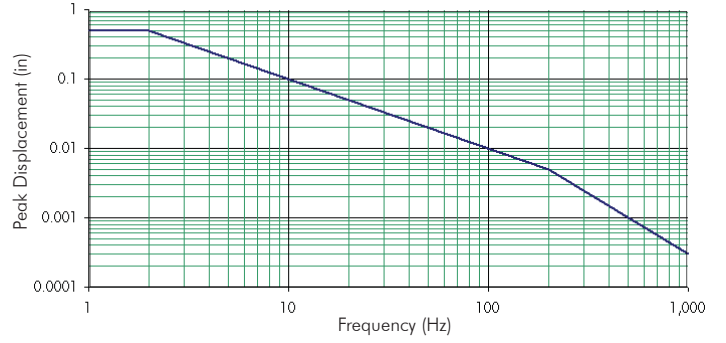


Xcite 1100-6 Field Test System

Peak Dynamic Force vs. Frequency

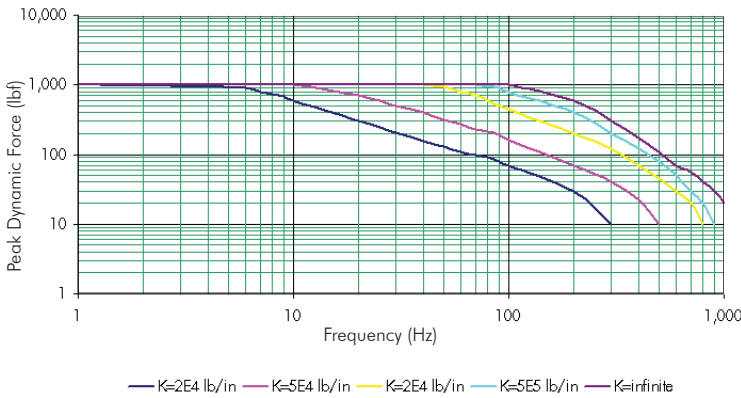


Peak Displacement vs. Frequency

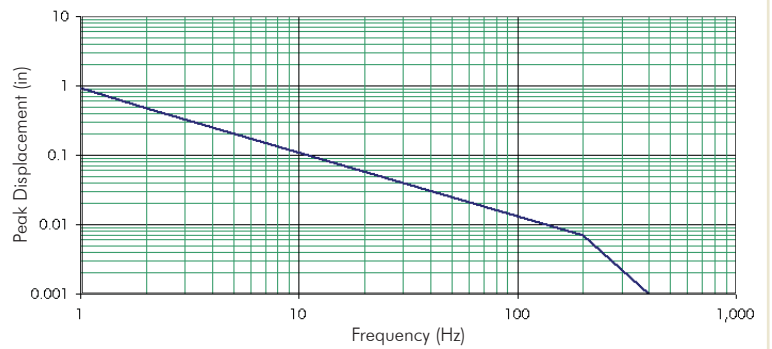


Xcite 1100-7 Field Test System

Peak Dynamic Force vs. Frequency

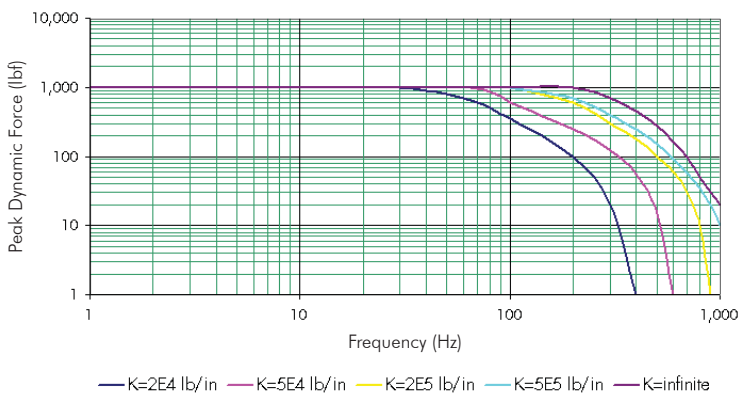

Peak Displacement vs. Frequency

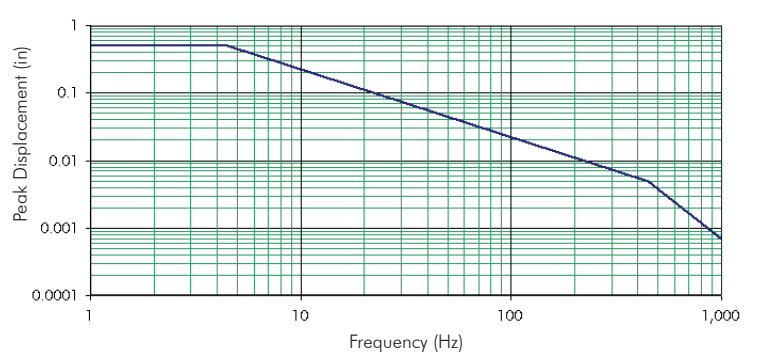



CERTIFICATE OF CALIBRATION

Transducer Model: 2522
Serial Number: 2060
Capacity: 2500 LBS
Calibration Date: 7/8/02
Excitation: 10 VDC
Input Resistance: 354 Ohms
Output Resistance: 354 Ohms
Temperature Range: 50-150 Degrees F

Applied Load in LBS	Compression MV/V
0	0.0000
500	0.2140
1000	0.4294
1500	0.6434
2000	0.8579
2500	1.0707
0	-0.0001

An output of 0.2943 MV/V is induced when a shunt resistor of 301K ohms is applied across (-) Excitation and (-) Signal.

Notes: 301K ohms induces an output of 0.2943 MV/V which is equivalent to 687.2 lbs of force.

Wiring Code: RED (+)Excitation A
 BLACK (-) Excitation B
 GR/YEL (+)Signal C
 WHITE (-) Signal D

This is to certify that the following instrument was calibrated using loading equipment traceable to NIST through one or more of standards. The unit was found to meet or exceed all published sales literature accuracy specifications.

Approved by: 

1001P Field Test Power Supply



1. Introduction

The Xcite 1001P Field Test Hydraulic Power Supply is designed to fulfill the power requirements for Xcite Series Controlled Force hydraulic Exciters and other actuators that do not require an average flow of more than 1.2 GPM. This power supply is completely portable and can be used in a wide variety of test environments. It has been “human-engineered” for ease of operation and maintenance. All control functions can be handled by a Xcite Master Controller, enabling a single test operator to effectively run the entire operation.

2. Theory of Operation

2.1. Hydraulic System

A 1.2 GPM constant displacement gear pump is driven directly by a 3 HP 1800 RPM 115 VAC/ 230 VAC electric motor. At 1725 RPM the pump ports a nominal 1.2 GPM which is directed to the pressure quick disconnects through a 2 micron filter. A relief valve maintains a constant 3000 psi output pressure by bleeding flow to the reservoir.

The user must be aware that when more than 1.2 GPM is demanded by the exciter head (low frequency stroke or weak structure stiffness at higher frequencies), the pump pressure will drop. For maximum force capability from the system, the stroke must be limited to ranges which allow the pump to maintain 3000 psi pressure.

A time delayed cooling fan provides air flow across a heat exchanger which is in the return line to cool the hydraulic fluid returning from the exciter head.

For ease of filling and draining of the reservoir before transporting the power supply, a transfer pump is used. When the ball valve is in the *FILL* direction, fluid is pumped from the reservoir fill hose directly into the reservoir. **See Drawing B-30112 - Item #26** In the *EMPTY* direction, hydraulic fluid is pumped out of the quick disconnect nipple which is removed from the top of the reservoir for the emptying operation. (See photo below.)



2.2. Electrical Control System

The Electrical Control System for the 1001P Hydraulic Power Supply is packaged in two enclosures mounted inside the pump cabinet. The first enclosure is accessible from the front panel of the Power Supply by removing four screws and is called "Electrical Control Box #1". **See Drawing B-30115**

This enclosure contains the fuses for the system designated as:

- 107FU - 4.0 Amp (Fan Motor Fuse)
- 108AFU - 6.25 Amp (115 Volt Operation Fuse)
- 108BFU - 3.2 Amp (230 Volt Operation Fuse)

The second enclosure is mounted near the top of the Power Supply and is only accessible by removing the entire pump assembly from the cabinet. This enclosure is called "Electrical Control Box #2" and contains the motor starter, control relays and control transformer. **See Drawing B-30116**

During operation, either 115 VAC or 230 VAC single phase power is applied to the main contacts of the pump motor starter; the time delay relay of the cooling fan and transformer T1. The voltage selector switch (107PB) selects operation of the entire 1001P Hydraulic Power Supply from either 115 VAC or 230 VAC, 60 Hz. Drawing B-30114 and B-30116 depicts the voltage selector switch in the 230 Volt position. In this position, voltage is applied to the primary coil of transformer T-1 and is "stepped" down to 115 VAC for operation of all control relays and the Xcite Master Controller.

When the voltage selector switch 107PB is switched to the 115V position, 115 VAC power is applied directly to the control relays and the Xcite Master Controller. The Pump Motor (MTR1) and the Fan Motor (MTR2) are automatically converted to 115V operation by switching the windings of MTR1 and MTR2 with control relays 111CR and 112CR respectively.

The 1001P Hydraulic Power Supply is started when the *START* button on the Xcite Master Controller is depressed. 115V control voltage is applied back through J1-D to the "Remote Emergency Stop Connector" (RES); the "Emergency Stop" button and then to the coils of motor starter control relays 115M and 116M. In order for voltage to reach these control relays, the oil level/temperature and filter switches must all be closed. This means there is sufficient oil in the reservoir, the oil temperature is less than 150° F and the oil filter is clean. If these conditions are all met, the control relays 115M and 116M are energized and MTR1 and MTR2 are started.

Pressing the *STOP* button on the pump de-energizes the control relays 115M and 116M and the unit shuts down. Automatic shutdown will also occur if the oil level, temperature or filter switch is momentarily opened.

3. Description

The entire power supply is shock-mounted in a roto-molded plastic instrument style enclosure. Interconnections are easily identified by call-outs on the panels. A power cord is supplied as standard equipment. **See Drawing's B-30112, 30113, 30114, B-30115 and B-30116 at end of this section.** Major Components are:

- A 4-gallon oil reservoir
- Motor
- Constant displacement pump
- A 2-micron filter
- Air/ heat exchanger
- Oil transfer pump
- (2) Electrical control boxes

Along with these major components are a number of controls and condition indicators giving continuous monitoring of supply conditions.

3.1. Pressure Gauge

This gauge indicates the supply pressure at the pump outlet. With no flow, the gage should normally read 3000 to 3100 psi.

3.2. Power Indicator Lamp

This lamp is illuminated at all times when the electrical power cord is connected to the power outlet.

3.3. Emergency Stop Switch and Remote Emergency Stop Connector

This is a push to stop switch that de-energizes the pump motor starter when depressed. This switch may be used to halt the pump in place of the *STOP* button on the Xcite Master Controller, if necessary. **It should be noted that the Emergency Stop Switch **MUST** be pulled out for the 1001P Power Supply to operate. If it is depressed (stays depressed once pushed), the unit will **NOT** operate.**

A "Remote Emergency Stop" connector (RES) is also provided to allow the user to wire a remote SPST switch to stop the Power Supply. A mating connector for wiring the remote emergency stop is included.

3.4. Hydraulic Supply and Return Connectors

These are male and female quick-disconnect fittings. The female fitting goes to the supply line; the male fitting goes to the return line.

3.5. HPC Control Connector

This is a 6-pin Amphenol connector used to interface the pump to the Master Controller.

3.6. Oil Level/ Temperature Gauge

This gauge indicates the level of oil in the reservoir. It is mounted directly to the oil reservoir. The system should not be operated with less than 3.5 gallons of oil. An oil temperature gage is also supplied which measures the temperature of the oil in the reservoir.

3.7. Voltage Selector Switch

This switch allows the 1001P Hydraulic Power Supply to be used with either 115 VAC or 230 VAC 60 Hz power, single phase. **See 2.2. and B-30116**

3.8. Fuses

All replaceable fuses are mounted in Electrical Box #1 on the front panel of the Power Supply. **See 2.2.** for appropriate ratings and **Drawing B-30115** for location.

3.9. Oil Level/ Temperature Switch

This switch is located inside the reservoir. It shuts down the unit if the oil level is too low or if the oil temperature exceeds 140° F.

3.10. Filter Switch

The filter switch is mounted on the filter assembly, located at the output of the pump. If the differential pressure across the filter element exceeds 35 psi, the switch is momentarily activated, de-energizing the pump motor starter. If this occurs, it generally indicates that the filter element is dirty and needs replacement.

4. Preliminary to Operation

Several preparatory steps must be taken prior to operating the unit.

4.1. Remove the front and rear cabinet covers.

4.2. Turn the voltage selector switch to the correct position for the line voltage being used.

4.3. Connect the hydraulic supply and return lines to the front panel quick-disconnects.

- 4.4. Connect the power cord to the power source, making sure that the power indicator lamp is lit. **Use black and white wires for voltage, green for ground. The red wire is NOT used.**

NOTE: The unit should NEVER be operated with the hoses coiled, nor should anything be set on the hoses, nor should they be driven over.



Oils should not be mixed. If the type of oil is changed, purge the system.

- 4.5. Check the level of the oil using the sight gauge on the back of the reservoir. The oil reservoir should be completely filled with Mobil DTE-24 or DTE-25. If necessary fill the reservoir using the transfer pump. **See 2.1.**
- 4.6. Connect the Pump Control Cable (from the Master Controller) to the connector on the front panel.
- 4.7. Make sure the front and rear of the cabinet are not obstructed by anything that would restrict the flow of air into and out of the cabinet.
- 4.8. Press the *PUMP START* button on the Master Controller to start the pump. To stop the unit, press the *PUMP STOP* button on the Master Controller or the *EMERGENCY STOP* button on the pump's front panel.
- 4.9. Check the pressure gauge and verify the pump is operating at 3000 to 3200 psi. Failure to comply with the above can cause severe damage to the servovalve, exciter head, and pump. All warranties are invalidated if damage occurs due to overpressure.
- 4.10. In the event the hydraulic power supply will not start, check for oil over temperature, or low oil level; or if the power supply starts but will not run continuously, the filter element is clogged and needs replacement.

5. Care and Maintenance

5.1. General

The pump requires little regularly-scheduled maintenance. However, you should keep the unit reasonably clean and should observe the following precautions.

- 5.1.1. Keep the quick-disconnect dust covers installed whenever the unit is not in use.

5.1.2. Always clean the quick-disconnects before making any connections.

5.1.3. Make sure the heat exchanger fan is not blocked during operation.

The only periodic maintenance required is change the oil every 2000 hours and change the filter whenever it becomes clogged. The filter unit consists of a screw-off canister and replaceable filter element.

5.2. Field Test Reservoir Draining/ Refilling Procedure

This is a closed-loop system. If general cleanliness methods are followed, the filter should not require replacement for long periods of time. Oil should be changed every 2000 hours of pump operation.



If the supply is to be transported such that the cabinet could be tipped over, the oil should be drained from the reservoir. See draining and filling procedure in **Section 2.1.**

5.3. Change Oil Filter

Unscrew the bottom of the container and change the cartridge.
See Drawing B-30113 - Item #13 for filter model number

6. Troubleshooting

This section lists the most common problems encountered, as well as their probable causes. If the problem cannot be readily corrected, contact your Xcite Customer Service Representative.

Problem	Probable Cause
Power lamp is not lit when unit is plugged in.	Check power source.
Fuses blown.	Low line voltage or motor malfunction.
Unit shuts off 2-4 seconds after power is applied.	Dirty filter element.
Low hydraulic pressure (less than 3000 psi.)	Excessive flow beyond 1.2GPM. Defective relief valve

7. Specifications

Dimensions	
Height	34"
Width	27"
Depth	36.5"
Weight	250 lbs
Cooling	Air (heat exchanger w/ fan)
Maximum Ambient Air Temp	100° F
Power Requirements from Circuit Mains	115 VAC, 35 Amp, single-phase 230 VAC, 20 Amp, single-phase
Oil Type	Mobil DTE-24 or DTE-25 (DO NOT MIX OIL TYPES)
Operating Pressure	3000 psi + 5%
Pressure Control	Spring operated relief valve
Pump	1.2 GPM constant displacement at 1725 rpm
Motor (Full Load)	3 hp, single-phase; 115VAC@32 Amps; 220VAC@16 Amps; 1725 rpm; 145 TC frame size
Radiated Noise (at 3 ft. from cabinet)	Front - 77 db Side - 72 db Rear - 80 db

8. Drawings

Pump/ Reservoir	B-30112
Hydraulic System Schematic	B-30113
Electrical Schematic	B-30114
Electrical Control Box #1	B-30115
Electrical Control Box #2	B-30116

ITEM	DESCRIPTION	PART NUMBER	MANUFACTURER	QTY.
1	CASE, WITH SLIDE	ZDR1430-0303-G-LR-RS	ZERO	1
2	RESERVOIR, 4 GALLON	11955-R00-S01	FITZPATRICK	1
3	MUFFLER	EM37	PARKER	1
4	SWITCH, LEVEL/TEMP.	140301-95-140301-95	ACT	1
5	COVER, LEVEL/TEMP. SWITCH	140301-95-140301-95	ACT	1
6	GAUGE, LEVEL	140301-95-140301-95	TECH PRODUCTS	4
7	MOUNT, ISOLATION	140301-95-140301-95	BALDOR	1
8	MOTOR, ELECTRIC, 3 HP @ 1800 RPM, DWP "C"	140301-95-140301-95	VESSOR	1
9	ADAPTOR, MOTOR/PUMP	140301-95-140301-95	MAGNALDY	1
10	MUFF, MOTOR COUPLING	140301-95-140301-95	MAGNALDY	1
11	INSERT, COUPLING	140301-95-140301-95	MAGNALDY	1
12	PUMP, GEAR	140301-95-140301-95	MAGNALDY	1
13	VALVE, CHECK	140301-95-140301-95	MAGNALDY	1
14	FILTER, PRESSURE	140301-95-140301-95	MAGNALDY	1
15	FLANGE, GAUGE	140301-95-140301-95	MAGNALDY	1
16	SNUBBER, GAUGE	140301-95-140301-95	MAGNALDY	1
17	VALVE, ACCUMULATOR DUMP	140301-95-140301-95	MAGNALDY	1
18	VALVE, CARTRIDGE RELIEF	140301-95-140301-95	MAGNALDY	1
19	BODY, CARTRIDGE VALVE	140301-95-140301-95	MAGNALDY	1
20	COUPLER, QUICK CONNECT	140301-95-140301-95	MAGNALDY	1
21	PLUG, DUST	140301-95-140301-95	MAGNALDY	1
22	NIPTLE, QUICK COUPLER	140301-95-140301-95	MAGNALDY	1
23	CAP, DUST	140301-95-140301-95	MAGNALDY	1
24	COOLER, AIR/OIL WITH SINGLE PHASE MOTOR	140301-95-140301-95	MAGNALDY	1
25	PUMP, TRANSFER	140301-95-140301-95	MAGNALDY	1
26	VALVE, DIVERTER BALL	140301-95-140301-95	MAGNALDY	1
27	PACKAGE, ELECTRICAL	140301-95-140301-95	MAGNALDY	1
28	NIPTLE, POST-EUR QUICK COUPLER	140301-95-140301-95	MAGNALDY	1
29	COUPLER, QUICK CONNECT	140301-95-140301-95	MAGNALDY	1
30	PLATE, MOTOR MOUNTING	140301-95-140301-95	MAGNALDY	1
31	PANEL, FRONT	140301-95-140301-95	MAGNALDY	1
32	BRACKET, ELECTRICAL ENCLOSURE MOUNTING	140301-95-140301-95	MAGNALDY	1
33	BRACKET, FLUIDJET PUMP	140301-95-140301-95	MAGNALDY	1
34	TAGS	140301-95-140301-95	MAGNALDY	1
35	HINGE, 1 1/2" X .050"	140301-95-140301-95	MAGNALDY	1
36	ADAPTOR, MALE NPT TO DIN, 3 PIN + GND.	140301-95-140301-95	MAGNALDY	1
37	CONNECTOR, 6-250 WAGO/DIN, NO CONDUIT 3	140301-95-140301-95	MAGNALDY	1
38	WIRE, SHIELDING, 24 AWG, 100 FT	140301-95-140301-95	MAGNALDY	1
39	SLIDE DRAWER (1 SET)	140301-95-140301-95	MAGNALDY	1
40	BRACKET, MOUNTING FRAME	140301-95-140301-95	MAGNALDY	1
41	BRACKET, SLIDE MOUNTING (MIRRORRED SET)	140301-95-140301-95	MAGNALDY	1
42	SPACERS, FRAME & SLIDE	140301-95-140301-95	MAGNALDY	1
43	PLATE, MOTOR MOUNTING	140301-95-140301-95	MAGNALDY	1
44	PANEL, FRONT	140301-95-140301-95	MAGNALDY	1
45	BRACKET, ELECTRICAL ENCLOSURE MOUNTING	140301-95-140301-95	MAGNALDY	1
46	BRACKET, FLUIDJET PUMP	140301-95-140301-95	MAGNALDY	1
47	TAGS	140301-95-140301-95	MAGNALDY	1
48	HINGE, 1 1/2" X .050"	140301-95-140301-95	MAGNALDY	1
49	ADAPTOR, MALE NPT TO DIN, 3 PIN + GND.	140301-95-140301-95	MAGNALDY	1
50	CONNECTOR, 6-250 WAGO/DIN, NO CONDUIT 3	140301-95-140301-95	MAGNALDY	1
51	WIRE, SHIELDING, 24 AWG, 100 FT	140301-95-140301-95	MAGNALDY	1
52	SLIDE DRAWER (1 SET)	140301-95-140301-95	MAGNALDY	1
53	BRACKET, MOUNTING FRAME	140301-95-140301-95	MAGNALDY	1
54	BRACKET, SLIDE MOUNTING (MIRRORRED SET)	140301-95-140301-95	MAGNALDY	1
55	SPACERS, FRAME & SLIDE	140301-95-140301-95	MAGNALDY	1
56	PLATE, MOTOR MOUNTING	140301-95-140301-95	MAGNALDY	1
57	PANEL, FRONT	140301-95-140301-95	MAGNALDY	1
58	BRACKET, ELECTRICAL ENCLOSURE MOUNTING	140301-95-140301-95	MAGNALDY	1
59	BRACKET, FLUIDJET PUMP	140301-95-140301-95	MAGNALDY	1
60	TAGS	140301-95-140301-95	MAGNALDY	1
61	HINGE, 1 1/2" X .050"	140301-95-140301-95	MAGNALDY	1
62	ADAPTOR, MALE NPT TO DIN, 3 PIN + GND.	140301-95-140301-95	MAGNALDY	1
63	CONNECTOR, 6-250 WAGO/DIN, NO CONDUIT 3	140301-95-140301-95	MAGNALDY	1
64	WIRE, SHIELDING, 24 AWG, 100 FT	140301-95-140301-95	MAGNALDY	1
65	SLIDE DRAWER (1 SET)	140301-95-140301-95	MAGNALDY	1
66	BRACKET, MOUNTING FRAME	140301-95-140301-95	MAGNALDY	1
67	BRACKET, SLIDE MOUNTING (MIRRORRED SET)	140301-95-140301-95	MAGNALDY	1
68	SPACERS, FRAME & SLIDE	140301-95-140301-95	MAGNALDY	1
69	PLATE, MOTOR MOUNTING	140301-95-140301-95	MAGNALDY	1
70	PANEL, FRONT	140301-95-140301-95	MAGNALDY	1
71	BRACKET, ELECTRICAL ENCLOSURE MOUNTING	140301-95-140301-95	MAGNALDY	1
72	BRACKET, FLUIDJET PUMP	140301-95-140301-95	MAGNALDY	1
73	TAGS	140301-95-140301-95	MAGNALDY	1
74	HINGE, 1 1/2" X .050"	140301-95-140301-95	MAGNALDY	1
75	ADAPTOR, MALE NPT TO DIN, 3 PIN + GND.	140301-95-140301-95	MAGNALDY	1
76	CONNECTOR, 6-250 WAGO/DIN, NO CONDUIT 3	140301-95-140301-95	MAGNALDY	1
77	WIRE, SHIELDING, 24 AWG, 100 FT	140301-95-140301-95	MAGNALDY	1
78	SLIDE DRAWER (1 SET)	140301-95-140301-95	MAGNALDY	1
79	BRACKET, MOUNTING FRAME	140301-95-140301-95	MAGNALDY	1
80	BRACKET, SLIDE MOUNTING (MIRRORRED SET)	140301-95-140301-95	MAGNALDY	1
81	SPACERS, FRAME & SLIDE	140301-95-140301-95	MAGNALDY	1
82	PLATE, MOTOR MOUNTING	140301-95-140301-95	MAGNALDY	1
83	PANEL, FRONT	140301-95-140301-95	MAGNALDY	1
84	BRACKET, ELECTRICAL ENCLOSURE MOUNTING	140301-95-140301-95	MAGNALDY	1
85	BRACKET, FLUIDJET PUMP	140301-95-140301-95	MAGNALDY	1
86	TAGS	140301-95-140301-95	MAGNALDY	1
87	HINGE, 1 1/2" X .050"	140301-95-140301-95	MAGNALDY	1
88	ADAPTOR, MALE NPT TO DIN, 3 PIN + GND.	140301-95-140301-95	MAGNALDY	1
89	CONNECTOR, 6-250 WAGO/DIN, NO CONDUIT 3	140301-95-140301-95	MAGNALDY	1
90	WIRE, SHIELDING, 24 AWG, 100 FT	140301-95-140301-95	MAGNALDY	1
91	SLIDE DRAWER (1 SET)	140301-95-140301-95	MAGNALDY	1
92	BRACKET, MOUNTING FRAME	140301-95-140301-95	MAGNALDY	1
93	BRACKET, SLIDE MOUNTING (MIRRORRED SET)	140301-95-140301-95	MAGNALDY	1
94	SPACERS, FRAME & SLIDE	140301-95-140301-95	MAGNALDY	1
95	PLATE, MOTOR MOUNTING	140301-95-140301-95	MAGNALDY	1
96	PANEL, FRONT	140301-95-140301-95	MAGNALDY	1
97	BRACKET, ELECTRICAL ENCLOSURE MOUNTING	140301-95-140301-95	MAGNALDY	1
98	BRACKET, FLUIDJET PUMP	140301-95-140301-95	MAGNALDY	1
99	TAGS	140301-95-140301-95	MAGNALDY	1
100	HINGE, 1 1/2" X .050"	140301-95-140301-95	MAGNALDY	1
101	ADAPTOR, MALE NPT TO DIN, 3 PIN + GND.	140301-95-140301-95	MAGNALDY	1
102	CONNECTOR, 6-250 WAGO/DIN, NO CONDUIT 3	140301-95-140301-95	MAGNALDY	1
103	WIRE, SHIELDING, 24 AWG, 100 FT	140301-95-140301-95	MAGNALDY	1
104	SLIDE DRAWER (1 SET)	140301-95-140301-95	MAGNALDY	1
105	BRACKET, MOUNTING FRAME	140301-95-140301-95	MAGNALDY	1
106	BRACKET, SLIDE MOUNTING (MIRRORRED SET)	140301-95-140301-95	MAGNALDY	1
107	SPACERS, FRAME & SLIDE	140301-95-140301-95	MAGNALDY	1
108	PLATE, MOTOR MOUNTING	140301-95-140301-95	MAGNALDY	1
109	PANEL, FRONT	140301-95-140301-95	MAGNALDY	1
110	BRACKET, ELECTRICAL ENCLOSURE MOUNTING	140301-95-140301-95	MAGNALDY	1
111	BRACKET, FLUIDJET PUMP	140301-95-140301-95	MAGNALDY	1
112	TAGS	140301-95-140301-95	MAGNALDY	1
113	HINGE, 1 1/2" X .050"	140301-95-140301-95	MAGNALDY	1
114	ADAPTOR, MALE NPT TO DIN, 3 PIN + GND.	140301-95-140301-95	MAGNALDY	1
115	CONNECTOR, 6-250 WAGO/DIN, NO CONDUIT 3	140301-95-140301-95	MAGNALDY	1
116	WIRE, SHIELDING, 24 AWG, 100 FT	140301-95-140301-95	MAGNALDY	1
117	SLIDE DRAWER (1 SET)	140301-95-140301-95	MAGNALDY	1
118	BRACKET, MOUNTING FRAME	140301-95-140301-95	MAGNALDY	1
119	BRACKET, SLIDE MOUNTING (MIRRORRED SET)	140301-95-140301-95	MAGNALDY	1
120	SPACERS, FRAME & SLIDE	140301-95-140301-95	MAGNALDY	1
121	PLATE, MOTOR MOUNTING	140301-95-140301-95	MAGNALDY	1
122	PANEL, FRONT	140301-95-140301-95	MAGNALDY	1
123	BRACKET, ELECTRICAL ENCLOSURE MOUNTING	140301-95-140301-95	MAGNALDY	1
124	BRACKET, FLUIDJET PUMP	140301-95-140301-95	MAGNALDY	1
125	TAGS	140301-95-140301-95	MAGNALDY	1
126	HINGE, 1 1/2" X .050"	140301-95-140301-95	MAGNALDY	1
127	ADAPTOR, MALE NPT TO DIN, 3 PIN + GND.	140301-95-140301-95	MAGNALDY	1
128	CONNECTOR, 6-250 WAGO/DIN, NO CONDUIT 3	140301-95-140301-95	MAGNALDY	1
129	WIRE, SHIELDING, 24 AWG, 100 FT	140301-95-140301-95	MAGNALDY	1
130	SLIDE DRAWER (1 SET)	140301-95-140301-95	MAGNALDY	1
131	BRACKET, MOUNTING FRAME	140301-95-140301-95	MAGNALDY	1
132	BRACKET, SLIDE MOUNTING (MIRRORRED SET)	140301-95-140301-95	MAGNALDY	1
133	SPACERS, FRAME & SLIDE	140301-95-140301-95	MAGNALDY	1
134	PLATE, MOTOR MOUNTING	140301-95-140301-95	MAGNALDY	1
135	PANEL, FRONT	140301-95-140301-95	MAGNALDY	1
136	BRACKET, ELECTRICAL ENCLOSURE MOUNTING	140301-95-140301-95	MAGNALDY	1
137	BRACKET, FLUIDJET PUMP	140301-95-140301-95	MAGNALDY	1
138	TAGS	140301-95-140301-95	MAGNALDY	1
139	HINGE, 1 1/2" X .050"	140301-95-140301-95	MAGNALDY	1
140	ADAPTOR, MALE NPT TO DIN, 3 PIN + GND.	140301-95-140301-95	MAGNALDY	1
141	CONNECTOR, 6-250 WAGO/DIN, NO CONDUIT 3	140301-95-140301-95	MAGNALDY	1
142	WIRE, SHIELDING, 24 AWG, 100 FT	140301-95-140301-95	MAGNALDY	1
143	SLIDE DRAWER (1 SET)	140301-95-140301-95	MAGNALDY	1
144	BRACKET, MOUNTING FRAME	140301-95-140301-95	MAGNALDY	1
145	BRACKET, SLIDE MOUNTING (MIRRORRED SET)	140301-95-140301-95	MAGNALDY	1
146	SPACERS, FRAME & SLIDE	140301-95-140301-95	MAGNALDY	1
147	PLATE, MOTOR MOUNTING	140301-95-140301-95	MAGNALDY	1
148	PANEL, FRONT	140301-95-140301-95	MAGNALDY	1
149	BRACKET, ELECTRICAL ENCLOSURE MOUNTING	140301-95-140301-95	MAGNALDY	1
150	BRACKET, FLUIDJET PUMP	140301-95-140301-95	MAGNALDY	1
151	TAGS	140301-95-140301-95	MAGNALDY	1
152	HINGE, 1 1/2" X .050"	140301-95-140301-95	MAGNALDY	1
153	ADAPTOR, MALE NPT TO DIN, 3 PIN + GND.	140301-95-140301-95	MAGNALDY	1
154	CONNECTOR, 6-250 WAGO/DIN, NO CONDUIT 3	140301-95-140301-95	MAGNALDY	1
155	WIRE, SHIELDING, 24 AWG, 100 FT	140301-95-140301-95	MAGNALDY	1
156	SLIDE DRAWER (1 SET)	140301-95-140301-95	MAGNALDY	1
157	BRACKET, MOUNTING FRAME	140301-95-140301-95	MAGNALDY	1
158	BRACKET, SLIDE MOUNTING (MIRRORRED SET)	140301-95-140301-95	MAGNALDY	1
159	SPACERS, FRAME & SLIDE	140301-95-140301-95	MAGNALDY	1
160	PLATE, MOTOR MOUNTING	140301-95-140301-95	MAGNALDY	1
161	PANEL, FRONT	140301-95-140301-95	MAGNALDY	1
162	BRACKET, ELECTRICAL ENCLOSURE MOUNTING	140301-95-140301-95	MAGNALDY	1
163	BRACKET, FLUIDJET PUMP	140301-95-140301-95	MAGNALDY	1
164	TAGS	140301-95-140301-95	MAGNALDY	1
165	HINGE, 1 1/2" X .050"	140301-95-140301-95	MAGNALDY	1
166	ADAPTOR, MALE NPT TO DIN, 3 PIN + GND.	140301-95-140301-95	MAGNALDY	1
167	CONNECTOR, 6-250 WAGO/DIN, NO CONDUIT 3	140301-95-140301-95	MAGNALDY	1
168	WIRE, SHIELDING, 24 AWG, 100 FT	140301-95-140301-95	MAGNALDY	1
169	SLIDE DRAWER (1 SET)	140301-95-140301-95	MAGNALDY	1
170	BRACKET, MOUNTING FRAME	140301-95-140301-95	MAGNALDY	1
171	BRACKET, SLIDE MOUNTING (MIRRORRED SET)	140301-95-140301-95	MAGNALDY	1
172	SPACERS, FRAME & SLIDE	140301-95-140301-95	MAGNALDY	1
173	PLATE, MOTOR MOUNTING	140301-95-140301-95	MAGNALDY	1
174	PANEL, FRONT	140301-95-140301-95	MAGNALDY	1
175	BRACKET, ELECTRICAL ENCLOSURE MOUNTING	140301-95-140301-95	MAGNALDY	1
176	BRACKET, FLUIDJET PUMP	140301-95-140301-95	MAGNALDY	1
177	TAGS	140301-95-140301-95	MAGNALDY	1
178	HINGE, 1 1/2" X .050"	140301-95-140301-95	MAGNALDY	1
179	ADAPTOR, MALE NPT TO DIN, 3 PIN + GND.	140301-95-140301-95	MAGNALDY	1
180	CONNECTOR, 6-250 WAGO/DIN, NO CONDUIT 3	140301-95-140301-95	MAGNALDY	1
181	WIRE, SHIELDING, 24 AWG, 100 FT	140301-95-140301-95	MAGNALDY	1
182	SLIDE DRAWER (1 SET)	140301-95-140301-95	MAGNALDY	1
183	BRACKET, MOUNTING FRAME	140301-95-140301-95	MAGNALDY	1
184	BRACKET, SLIDE MOUNTING (MIRRORRED SET)	140301-95-140301-95	MAGNALDY	1
185	SPACERS, FRAME & SLIDE	140301-95-140301-95	MAGNALDY	1
186	PLATE, MOTOR MOUNTING	140301-95-140301-95</		

ITEM	QTY.	MFG.	MODEL NUMBER	DESCRIPTION
01	01	FERRAZ SHAWMUT	USCC11	FUSE HOLDER, 1 POLE, ILL.
02	25FT	CARDL	WCSLD104	LINE CORD, 10AVG, 4 COND.
03	1	ALLEN BRADLEY	193-64MC	RELAY, OVERLOAD, SET AT 20A
04	1	BUSSMANN	FNH-6.25	FUSE, 6.25A
05	1	BUSSMANN	FNH-3.2A	FUSE, 3.2A
06	1	ACHE	TA-2-81215	TRANSFORMER, SUBVA
07	1	ALLEN BRADLEY	800T-0100	PILOT LIGHT, GREEN, 20VAC, PUSH-TO-TEST
08	1	ALLEN BRADLEY	800T-H201	SELECTOR SWITCH, POS. MAINTAINED
09	1	AMPHENOL	97-308A012-S	CONNECTOR, MS
10	1	ALLEN BRADLEY	100-S411	CONTACT BLOCK, AUXILIARY, 1 NO, 1 NC
11	1	ALLEN BRADLEY	800T-FX166A1	PUSH-BUTTON, 2PES, MAINTAINED, E-STOP
12	1	ALLEN BRADLEY	700-H5F12F15A1	RELAY, TIME DELAY, 10A, 10SEC
13	1	ALLEN BRADLEY	800T-H2B	SELECT. SWITCH, 2 POS., MAINTAINED
14	1	HOFFMAN	A-1412SC	ENCLOSURE, 14x12x4
15	1	HOFFMAN	A-14P12	PANEL, 14x12
16	1	HOFFMAN	A-1086ASC	ENCLOSURE, 10x8x6
17	1	HOFFMAN	A-10P8	PANEL, 10x8
18	1	ALLEN BRADLEY	100-C37D00	CONTACTOR, 37A
19	1	ALLEN BRADLEY	700-PK200A1	CONTACTOR RELAY
20	1	ALLEN BRADLEY	700-HR32A1	RELAY, 10A, DPDT
21	1	BUSSMANN	LP-CC-4	FUSE, 4A, CLASS CC
22	2	ALLEN BRADLEY	700-HN153	SOCKET RELAY
23	1	AMPHENOL	97-3102A-10SL-04P	PLUG, MS
24	1	AMPHENOL	97-3106A-10FL-04S	CONNECTOR, MS
25	2	AMPHENOL	700-HN112	RELAY RETAINER CLIP
26	1	ALLEN BRADLEY	700-HN15B	RELAY RETAINER CLIP
27	1	ALLEN BRADLEY	700-HN15B	RELAY RETAINER CLIP
28	1	TFP	D-10622-R00-S01	CUSTOM LEGEND PLATES
29	1	FERRAZ SHAWMUT	USM21	FUSE HOLDER, 2 POLE, ILL.
30	1	ALLEN BRADLEY	700-CPH	MASTER CONTACT CARTRIDGE
31	31	PHOENIX CONTACT	300-4362	TERMINAL BLOCK, GRAY, UKON
32	30	PHOENIX CONTACT	0441504	TERMINAL BLOCK, GREEN, GROUNDING, USLKG5
33	4	PHOENIX CONTACT	0800886	END ANCHOR
34	4	PHOENIX CONTACT	0800886	END COVER
35	2	PHOENIX CONTACT	3033820	DIN RAIL, .35mm
36	10	PHOENIX CONTACT	0801733	JUMPER BRIDGE
37	10	PHOENIX CONTACT	0803250	JUMPER STRIPS
38	60	PHOENIX CONTACT	1051003	MARKING STRIPS
39	1	HRSCHEMANN	931297-004	DIN BASE, 18mm, 3P + GND
40	1	HRSCHEMANN	933095-111	CONNECTOR, 18mm, NO CIRCUITS, 2M
41	1	HRSCHEMANN	731531-002	GASKET, 18mm DIN
42	1	BRAD HARRISON	10300401F060	CONNECTOR, MINI, 3P, 6FT
43	FT	ALPHA	1181715C	CABLE, 15 CONDUCTOR

* (1) CONNECTOR IS JUMPERED AND CONNECTED TO UNIT. (1) EXTRA CONNECTOR IS SHIPPED LOOSE FOR REMOTE E-STOP INSTALLATION

NO.	DATE	BY	ZONE	CHANGE DESCRIPTION
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				

THIS DRAWING IS TO BE USED ONLY FOR THE PROJECT AND SITE SPECIFICALLY IDENTIFIED HEREIN. IT IS THE USER'S RESPONSIBILITY TO VERIFY THE ACCURACY OF THE INFORMATION PROVIDED HEREIN. THE USER SHALL BE RESPONSIBLE FOR OBTAINING ALL NECESSARY PERMITS AND APPROVALS FOR THESE PRODUCTS OR SYSTEMS THROUGH ITS OWN ANALYSIS AND TESTING IS SOLELY RESPONSIBLE FOR MAKING THE FINAL SELECTION OF THE PRODUCTS AND SYSTEMS AND ASSURING THAT ALL PERFORMANCE, SAFETY AND WARNING REQUIREMENTS OF THE APPLICATION ARE MET.

CHANGE DESCRIPTION

NO. DATE BY ZONE

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

1100, 1200 and 1300 Master Controller



1. Introduction

The Xcite Master Controller is a compact electronics control package designed to provide all the controls and displays necessary to operate an Xcite exciter system. The latest concepts in electronic design, including plug-in printed circuit boards, flexible systems interface and easy-to-use operator controls, are incorporated in the unit.

The Master Controller represents the heart of the closed loop hydraulic exciter system. It enables two variables to be independently controlled simultaneously via the Static Level and Dynamic Level controls. It incorporates automatic gain control in the dynamic loop which allows a constant amplitude of the dynamic variable to be maintained even as the reference frequency of excitation is changed.

2. Theory of Operation

The major design concept used in the Xcite Master Controller is one of providing accurate feedback control of an exciter head's capability, such as force, displacement, velocity, acceleration, etc.

The Master Controller senses the feedback signals from the appropriate transducers and provides an output drive signal to the exciter head servovalve which will cause the exciter to maintain the desired levels of the static and dynamic variable as determined by the dynamic and static level controls.

2.1. Configurations

The master controller can be operated in either a single- or dual-loop configuration.

2.1.1. Single Loop


Single-loop operation is selected by placing the Frequency Range switch to the *LOW* position. This mode is generally used to control a single variable, usually force or displacement. In this *LOW FREQUENCY* mode of operation, a dynamic signal is generated by summing the reference frequency present at the *PROGRAM INPUT* with the Static Level set point signal.

2.1.2. Dual Loop


Dual-loop operation is selected by placing the *FREQUENCY RANGE* switch to the *HIGH* position. This mode applies the dynamic feedback signal to the dynamic control loop which incorporates an automatic gain control circuit. This allows a desired dynamic amplitude variable to be set and maintained over a broad frequency range and structure stiffnesses.

3. Description

The Xcite Master Controller (Model 1104, 1204 and 1304) has a variety of inputs and switch selectors which allows the various operational modes of the Exciter Head. Listed below is a description of each connector, switch and indicator located on the Master Controller.

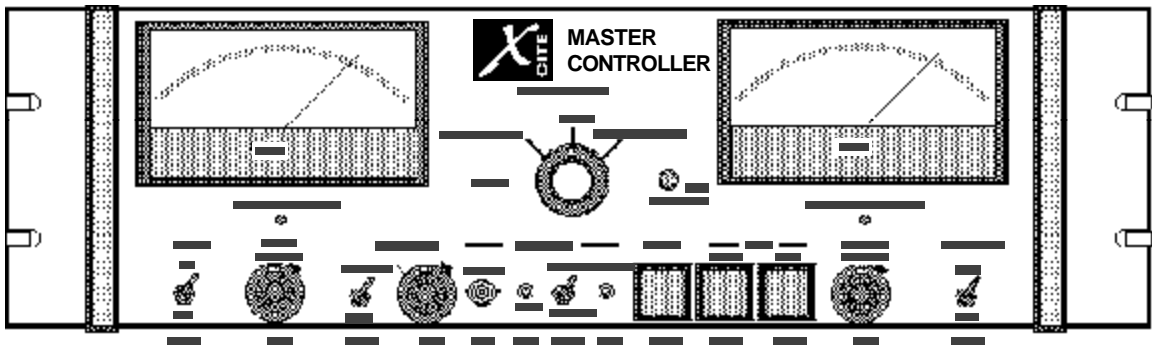


Front Panel

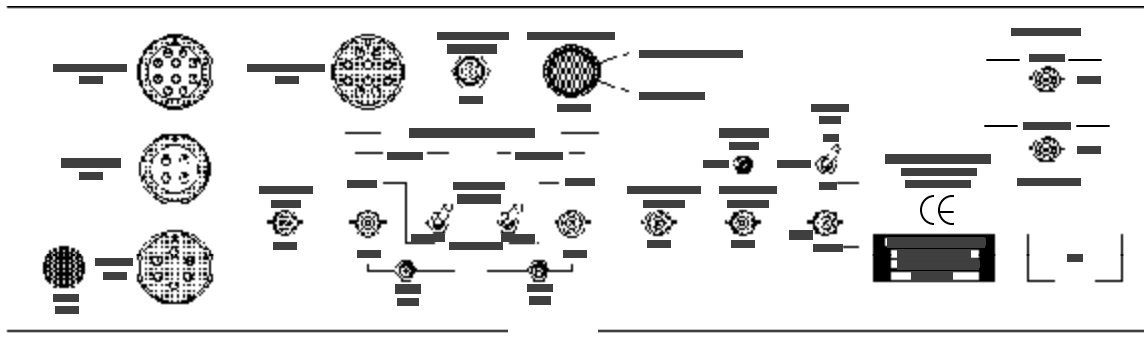

Outside Rear Panel

3.1. Front Panel (Left and Right Top Section)

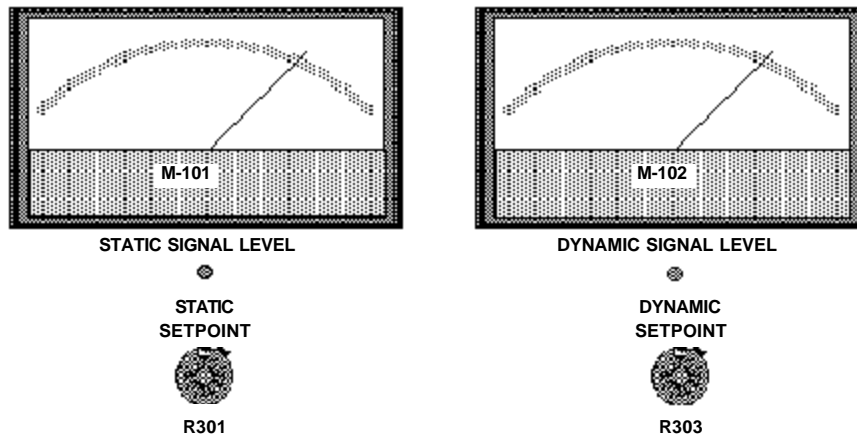

3.1.1. Static Signal Level Meter (M-101)

The Static Signal Level is displayed on this meter in Static Force Pounds or Static Displacement.

3.1.2. Static Set Point (R301)

Potentiometer used to set value of desired static variable. The Static Set Point potentiometer is calibrated in percent full scale.


3.1.3. Dynamic Signal Level Meter (M-102)

The Dynamic Signal Level is displayed on this meter in Peak Dynamic Force Pounds.

3.1.4. Dynamic Set Point (R303)

Potentiometer used to set value of desired dynamic variable. The Dynamic Set Point potentiometer is calibrated in Peak Dynamic Force Pounds.

3.1.5. Excitation Mode (SW304)

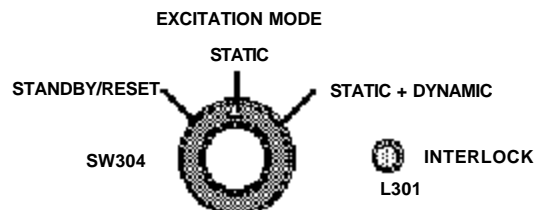

Used to select operating mode of exciter head. Turn the switch so that the arrow points to the mode of interest.

Standby/ Reset

Exciter head is at (or returns to) standby position, as preset by set-screw potentiometer on rear of Master Controller. The interlock circuits are also reset in this mode.

Static


Only the static control loop is activated.

Static + Dynamic

The static and dynamic control loops are activated.

3.1.6. Interlock (L301)

Light indicates when interlock circuits are activated, causing exciter head to return to standby position. Excitation mode control switch must be moved to Reset position to continue operation.

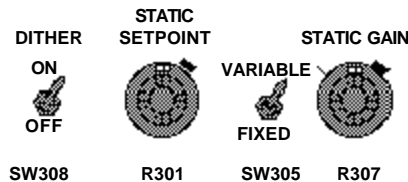3.1.7. Dither - ON/ OFF (SW308)

Front Panel (Left) - Bottom Section

Toggle switch which, when in *ON* position, provides 400 Hz signal to exciter servovalve. It is used primarily to overcome exciter stiction at low frequencies of operation. (Below 5 Hz)

3.1.8. Static Set Point (R301)

Indicates desired static level. Calibrated in percent full scale. **See 3.1.2.**


3.1.9. Static Gain**Static Gain - Variable/ Fixed (SW305)**

Toggle switch. In *VARIABLE* position actuates loop static gain potentiometer (R307).

Static Gain (R307)

Potentiometer used to set static control loop gain based on the stiffness of the structure under test. Used to eliminate control loop instabilities when using exciter in Static Displacement Mode on a weak structure.

3.1.10. Load Cell

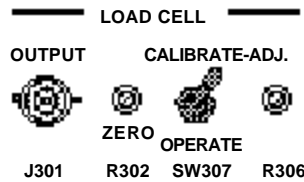

Front Panel (Middle) - Bottom Section

Output (J301)

BNC connector providing load cell output signal for monitoring of the force signal (varies from -10V to +10V depending on the actual value of the force). Duplicated on back of controller.

Zero (R302)

Set screw potentiometer used to zero the load cell output when there is no load applied.

3.1.11. Calibrate/ Operate (SW307)


Adj. (R306)

Set screw potentiometer used to adjust the master controller for the calibration value of the load cell when (SW307) is in the calibrate mode. (See load cell calibration plug for calibration value).

Operate

Select the operate mode of load cell once calibration is complete.

3.1.12. Power (SW301)

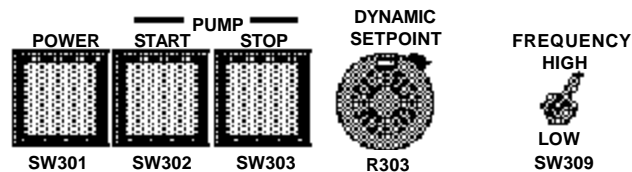

Front Panel (Right) - Bottom Section

Push switch for supplying power to master controller.

3.1.13. Pump

Start (SW302)

Push switch with internal red indicator light to energize power supply.

Stop (SW303)

Push switch to de-energize hydraulic power supply.


3.1.14. Dynamic Set Point (R303)

Indicates desired peak dynamic level. Calibrated in engineering units. **See 3.1.4.**

3.1.15. Frequency Range - HIGH/ LOW (SW309)

HIGH - Compressor control of dynamic signal at 5 Hz and above.
LOW - Single loop control of force or displacement.

3.2. Rear Panel

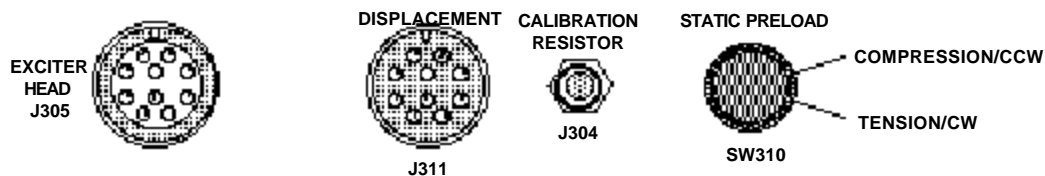

Rear Panel - Top Section

3.2.1. Exciter Head (J305)

Input connection for servovalve and load cell cable from exciter head.

3.2.2. Displacement (J311)

Input connection for displacement transducer cable from exciter head.

3.2.3. Calibration Resistor (J304)


Jack input for calibration plug provided with Load Cell Transducer.

3.2.4. Static Preload (SW310)

Dual-position switch establishes sign convention of static preload. When exciter head is operated by “pushing” on the test article, this switch should be in the *COMPRESSION* position. If exciter head is operated by “pulling” on the test structure, this switch should be in the *TENSION* position.

3.2.5. Interlock (J306)

Input connect for interlock function. If external control of this function is not desired, an Xcite supplied mating connector with pins C and D shorted must be used. If user supplied external control is desired, then appropriate contact closure between pins C and D must be supplied. Pins A and B are supplied for interlock of additional external equipment, as required.

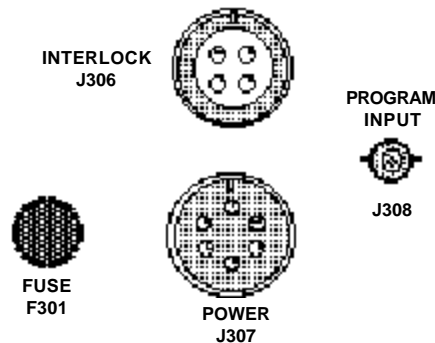

Rear Panel (Left) - Bottom Section

3.2.6. Power (J307)

Input connection for cable from hydraulic power supply. When a non-Xcite hydraulic power supply is used, this is the input connection for the direct 110V AC power cord.

3.2.7. Fuse (F301)

Use 3 amp fuse for 115 VAC. Use 1.5 amp fuse for 230 VAC.


3.2.8. Program Input (J308)

Input connection for signal from reference oscillator.



A 1 volt RMS signal must be provided to ensure system control calibration.

3.2.9. Controlled Variable - Static

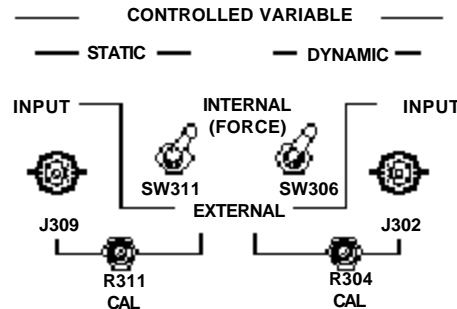

Rear Panel (Middle) - Bottom Section

Input (J309)

Input BNC connection for externally supplied user-specified static feedback variable. Input signal level should be 5 volts minimum full scale. Also used for Displacement Transducer feedback from the Exciter Head.

Internal/ External (SW311)

Toggle switch to select as the static controlled variable either the internally available load cell transducer signal or an externally supplied user-specified static feedback signal.

Cal. (R311)

Set screw potentiometer used to scale externally supplied static feedback variable to 5 volts full scale. Factory set for scaling 10 volts to 5 volts.

3.2.10. Controlled Variable - Dynamic

Input (J302)


BNC connection for externally supplied user-specified dynamic feedback variable. Input signal level should be 5 volts peak (minimum) full scale.

Internal/ External (SW306)

Toggle switch to select as the dynamic controlled variable either the internally available load cell transducer signal or an externally supplied user-specified dynamic feedback signal such as acceleration.


Cal. (R304)

Set screw potentiometer used to scale down externally supplied dynamic feedback variable to 5 volts peak full scale.

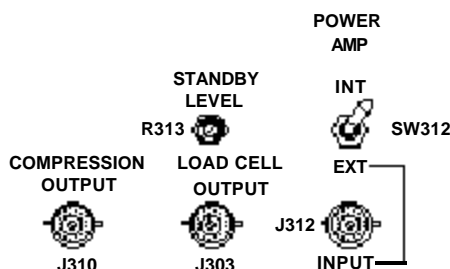

Rear Panel (Left) - Bottom Section

- 3.2.11. Compression Output (J310)**
BNC connection providing an output signal which is proportional to dynamic forward control signal (servovalve drive signal) after multiplication by reference oscillator signal.
- 3.2.12. Standby Level (R313)**
Set screw potentiometer determining static level when Master Controller is in standby or interlock mode.
- 3.2.13. Load Cell Output (J303)**
BNC connector providing load cell output signal for monitoring of the force signal (+/- 10V max). Duplicated on front of controller.
- 3.2.14. Power Amp - INT/ EXT (SW312)**
Toggle switch to select input signal to power amplifier. *INTERNAL* position is used for normal operation and provides dynamic control signal proportional to level requested on the front of the Master Controller at the reference oscillator frequency. *EXTERNAL* position is used for external dynamic control applications such as random or shaped random signals from an FFT Analyzer or random noise generator. In *EXTERNAL* position, the *DYNAMIC SET POINT* (R303) potentiometer on the front panel attenuates the external dynamic control signal and the *DYNAMIC SIGNAL LEVEL METER* (M-102) indicates 1.41 times the true RMS voltage of the dynamic variable feedback level.
- 3.2.15. Power Amp - INPUT (J312)**
BNC connector used to supply external control signal source with *POWER AMP* toggle switch on *EXTERNAL*. Use only J308 *PROGRAM INPUT* with toggle switch on *INTERNAL*.

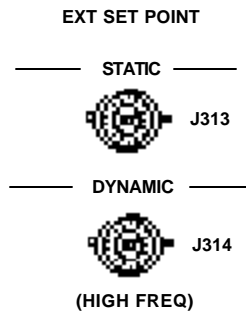

Rear Panel (Right) - Top Section

3.2.16. EXT Set Point - Static (J313)

Allows computer control of the Static Set Point by inputting a voltage from a DAC (Digital to Analog Converter). Typically this function is used when it is desired to have an automatic test sequence from a computer controlled FFT Analyzer.



CAUTION: This input is ALWAYS live and will activate the static control loop whenever a DAC voltage is present.

The EXT Static Set Point has the following characteristics:

- It is **ALWAYS** operable in the Standby, Static and Static + Dynamic modes.
- The input voltage from the DAC should be 0 to +5VDC, +/-5% to achieve full scale control of the Static Controlled Variable.

Note: Always use a positive DC DAC voltage for this function.

- The input voltage from the DAC will add to the Static Set Point. (ie - If the Static Set Point Dial is set to 5.0 (1/2 of full stroke in displacement mode) then the EXT DAC voltage input will add to the Set Point on the Set Point Dial.

3.2.17. EXT Set Point - Dynamic (J314)

Allows computer control of the Dynamic Set Point by inputting a voltage (NOT frequency) from a DAC (Digital to Analog Convertor). Typically this function is used when it is desired to have an automatic test sequence from a computer controlled FFT Analyzer.



CAUTION: This input is live when the Mode Control Switch is in the Static + Dynamic Mode. Dynamic Force output will occur whenever a DAC voltage is present at this input.

The EXT Dynamic Set Point has the following characteristics:

- It operates in the Static + Dynamic Mode.
- It only operates in the High Frequency Range

Note: Never use in the Low Frequency Range Mode

- The input voltage from the DAC should be 0 to -5VDC, +/-5% to achieve full scale control of the Dynamic Controlled Variable.

Note: Always use a negative DC DAC voltage for this function.

- The input voltage from the DAC will add to the Dynamic Set Point. (ie - If the Dynamic Set Point Dial is set to 5.0, then the EXT DAC voltage input will add to the Set Point value. In this example a DAC voltage of -2.5V will make the Set Point 100%).

4. Operation

4.1. Concept of Operation

The Xcite Master Controller is designed so that the variables to be controlled can be readily selected by the positions of the Controlled Variable switches located on the rear panel of the controller.

When the Controlled Variable switches are in the Internal position, the controlled variable will be force. The force feedback signal is internally routed to the static and dynamic control loops. The composite force signal is separated by a low-pass and high-pass filter, with the DC and AC levels of the composite signal being displayed by the Static and Dynamic meters, respectively.

If a variable(s) other than force is to be controlled, the Controlled Variable switches can be placed in the External position and feedback from the variable to be controlled can be applied to the External Static and/ or External Dynamic inputs. This allows alternate variables such as displacement to be statically and dynamically controlled, or two variables such as static displacement and dynamic force to be controlled.

4.2. System Interconnection

Mount the exciter head to be operated securely in its test configuration and connect the hydraulic pump hoses to the exciter.

- 4.2.1. Exciter head cable (J305 to servovalve and load cell)
- 4.2.2. Displacement kit cable (J311 to exciter displacement kit)
- 4.2.3. Power cord or pump cable (J307 to J501 or 110 VAC)
- 4.2.4. Reference oscillator to Program input J308 (1 V RMS +/- 50 MV)
- 4.2.5. Connect an oscilloscope and/ or D.V.M. to Load Cell outputs J301 or J303.

4.3. Operation - Force Control

To operate the exciter under force control, place the following switches and controls in the positions given.

4.3.1. Set Controls

MODE CONTROL	STANDBY/RESET
DITHER	OFF
LOOP GAIN	FIXED (If test specimen static stiffness is less than 10,000 lbs/inch, place in variable & set variable gain control at 5.00)
FREQUENCY RANGE	HIGH
STATIC SET POINT	0
DYNAMIC SET POINT	0
STATIC CONTROLLED VARIABLE	INTERNAL
DYNAMIC CONTROLLED VARIABLE	INTERNAL
TENSION/ COMPRESSION	COMPRESSION

4.3.2. Depress the Power switch

The controller will energize and a momentary deflection of the meter pointers may occur.

4.3.3. Adjust Load Cell

- Adjust the load cell zero adjust for 0 Volts on a digital volt meter. Refer to the Calibration plug located on the rear of the controller for the load cell calibrate value and the output sensitivity of the controller.
- Place the load cell calibrate switch in the calibrate position. If necessary, adjust the load cell calibrate screw until the voltage measured by the digital volt meter equals the calibration voltage. The calibration voltage equals the calibration value divided by the output sensitivity.

Example:

Cal. Value = 742 lbs

Output Sens. = 250 lbs/ v

therefore: $742/250 = 2.968v$ at J301/ J303

- Return the load cell calibrate switch to the operate position.

4.3.4. Depress Pump Start Button

The Hydraulic Power Supply should energize.

- Set the Mode Control switch to the Static position.
- Slowly turn the Static Set Point clockwise until the required static force is obtained, as indicated on the Static Meter. If operating into a "weak" structure, static force instability may occur. If this should happen, adjust the Variable loop gain counterclockwise until static stability is achieved.
- Set the reference oscillator to the desired excitation frequency.
- Set the Mode Control switch to Static + Dynamic position.
- Turn the Dynamic Set Point clockwise until the desired dynamic force is obtained.

Note: Refer to the Exciter Head specifications for maximum peak force versus frequency.

- If swept sine test are to be run, the sweep rate of the oscillator will have to be adjusted so that the dynamic level does not decrease as the frequency is swept upward. If this occurs, lower the sweep rate until the dynamic level is maintained as the oscillator frequency is swept.

4.4. Operation - Displacement Control

If the exciter head is to be operated under displacement control, place the controller switches in the following positions.

4.4.1. Set Controls

MODE CONTROL	STANDBY/RESET
DITHER	OFF
LOOP GAIN	VARIABLE (Variable loop gain control at 5.00)
FREQUENCY RANGE	LOW
STATIC LEVEL	0
DYNAMIC LEVEL	0
STATIC CONTROLLED VARIABLE	EXTERNAL
DYNAMIC CONTROLLED VARIABLE	INTERNAL
TENSION/ COMPRESSION	COMPRESSION

- Energize the controller and the hydraulic power supply.
- Switch the Mode Control to the Static position.
- Turn the Static Set Point potentiometer until the desired static position is reached. The static position can be read on the Static Meter in percent of full stroke. For instance, if the exciter head being used has a 1 inch stroke and the Static meter reads 40%, then the exciter piston is extended 40% of one inch or .4 inch.

The exciter piston position can be dynamically varied by turning the Mode Control switch to the Static + Dynamic position and adjusting the Dynamic Level control for the desired stroke. The Dynamic meter will not indicate the peak displacement in this mode of operation. It will be necessary to monitor the displacement signal at the External Static Variable input jack J309. The input signal at this point will be 0 - 10 VDC. If the exciter has a 1 inch stroke, then full stroke will be equal to 10 VDC. On torsional exciters, 10 VDC represents 100 degrees of rotation.

If compressor control is desired, the Frequency Range should be set to the High position and the displacement input also connected to the Dynamic External Static input J302. At frequencies below approximately 5 Hz full stroke of the exciter may not be obtained in the High Frequency mode. However, the amplitude of the 1 V RMS signal from the reference oscillator may be increased to obtain a slightly larger dynamic stroke.

4.5. Operation - External Variable

Operation using the External Static and Dynamic controlled variable inputs is very similar to the operation using the internal controlled variable. One requirement, however, is that the external variables be scaled to the full scale value of the Static and Dynamic meters. This is accomplished by adjusting the External Cal. potentiometers. A 5 VDC signal is required for full scale deflection of the Static meter and a 5 V peak signal is required for full scale deflection of the Dynamic meter. The Static External Cal. potentiometer is factory adjusted for 10 VDC full scale static signal. The Dynamic Cal. potentiometer is adjusted for a 5 V peak dynamic signal. If signals larger than these are to be used, the Cal. potentiometer should be readjusted so that those signals will cause full scale deflection of the meters.

4.6. Computer Control - External Set Points (Static and Dynamic)

As explained in Section 3.2.16. and Section 3.2.17., it is possible to have a computer controlled FFT Analyzer control the Static and Dynamic Set Points of the Master Controller. Separate DAC output voltages are required for the Static Set Point and Dynamic Set Points. The Static DAC output must be a positive voltage and the Dynamic DAC output must be a negative voltage.

When using an external computer to input the Static and Dynamic Set Points, attention must be paid to the consequences of inputting a DAC voltage when the Hydraulic Power Supply is turned on. The Exciter Head will attempt to operate when these signals are present even with the Mode Control Switch in Standby.

STRUCTURE DAMAGE OR PERSONAL INJURY CAN OCCUR IF THE TEST SEQUENCE IS NOT THOROUGHLY PLANNED.

5. Theory of Operation

The Xcite Master Controller consists of seven major circuits. They are:

- Static control circuitry
- Dynamic control circuitry
- Power amplifier
- Load cell amplifier
- Displacement transducer buffer/ amplifier
- Interlock circuitry
- Pump/ start/ stop

Each section is described in detail as follows.

5.1. Circuit Descriptions

Refer to the Master Controller block diagram and to the appropriate printed circuit board schematics for the following circuit descriptions.

5.1.1. VR101 (Voltage Regulator)

Provides the excitation voltage for the load cell. The regulated voltage is determined by the values of R169 and R170.

$$V_{\text{out}} = \frac{1.25V(1 + R170)}{R169}$$

To calibrate the load cell, place a precision shunt resistance (Cal. Plug provided with each load cell) into J304 and place the load cell calibrate/ operate switch SW307 in the calibrate position. This causes an imbalance of the load cell bridge and results in an output of the load cell amplifier A109. The excitation voltage to the load cell is then varied by adjusting R306 until the output of A109 corresponds to the calibration value of the load cell, as given on the calibration plug.

5.1.2. SW310 (Preload Switch)

Allows the outputs of the load cell to be reversed before being applied to A109. This will cause the exciter head to operate in a tension mode, instead of a compression mode.

5.1.3. A109 (Amplifier)

A109 is a precision differential instrumentation amplifier used to amplify the differential voltages from the load cell bridge. R166 and A108 allow the output of A109 to be scaled to a convenient engineering unit for monitoring purposes. The output of A108 is available at BNC jacks on the front and rear of the Master Controller.

The output of A109 is also applied to SW311 and SW306. When these switches are in the *INTERNAL* position, the force signal is applied to the static and dynamic loops as the feedback signal and controlled variable.

5.1.4. **A104 and A105 (Static Control Loop)**

The static control loop consists of A105 and A104. A105 is a dual op-amp. A105B is a low-pass filter which allows the static portion of the feedback signal to be indicated by the static meter. A105A is an inverter/ buffer stage. R137 allows calibration of the dynamic level control when operating in the *LOW FREQUENCY* force control. R135 allows calibration in the *LOW FREQUENCY* displacement control.

The feedback signal from A105A is summed with the static level signal at the summing junction of A104. A104 is a low-pass filter which provides high DC gain which rolls off at 6DB/ octave at a breakpoint determined by R174 and C108. R176, R102 and R113 determine the DC gain of A104. The output of A104 is applied through SW311 and / or K201 and to the appropriate feedback path as determined by the controlled variable.

The output of A104 is also applied to R133 and enables the static loop gain to be adjusted for optimum operation of the exciter head under force control. Further operator adjustment of the static loop gain is provided by R307 when the *GAIN* switch SW305 is in the *VARIABLE* position.

5.1.5. **A401 and A402 (Dynamic Loop)**

The dynamic loop has two main circuits. One circuit, consisting of A401 and A402, demodulates the incoming reference frequency and converts it to a DC reference signal which is applied to the Dynamic Level Control, R303.

The dynamic demodulator circuit consist of a low-pass filter A103, and a true RMS-to-DC converter, U102. The DC portion of the force signal is blocked by C109. The output of U102 is a DC signal. This DC is summed with the dynamic set point signal from the wiper of R303. The resultant error signal is integrated by A012 and C104. This DC error signal is applied to one input of the four-quadrant multiplier, U101. The reference frequency supplied by the reference oscillator is supplied to the other input of U101. The output of U101 is a signal with

a frequency identical to the reference frequency and with an amplitude equal to the product of the two input signals. A101A converts the current output of U101 to a voltage. A101B provides output offset capabilities. C101 and C102 allow the dynamic signal to have two breakpoints at higher frequencies, as required to prevent the servovalve drive signal from clipping.

The output of U101 and A104 are applied to summing amplifier A201. The dither signal is also summed at this point if it is selected by the dither switch. The output of A202 is a composite error signal which is then applied to the power amplifier.

The power amplifier is a voltage-to-current converter circuit. The output current will remain constant for a given input voltage, even though the load impedance (servovalve coils) changes.

5.1.6. A107 (Inverter Buffer)

This circuit allows the displacement transducer to be offset and scaled to convenient engineering units. The scaled displacement signal is fed out through J311/ G into a BNC cable which is then connected to J309. By placing the Static controlled variable switch in the External position, displacement will become the static controlled variable.

5.1.7. A106 and U103 (Peak Detector Circuit)

A106 and U103 form a peak detector circuit which can be adjusted if an absolute value of displacement is exceeded. It is primarily used with inertial mass exciter heads, and only appears in Master Controllers with the MOD2 option.

The interlock circuitry provides a means of insuring that the systems always power up to a preset level, determined by Standby level pot. If power is applied to the Master Controller with the Mode Control switch in either the Static or Static + Dynamic position, the system will interlock. The Mode Control switch must then be placed in the Standby/ Reset position. The Hydraulic Power Supply must also be energized before proceeding to the desired mode of operation.


6. Specifications

Modes:

- | | |
|------------------------------------|---|
| • Standby/ Reset | Continuously variable standby level |
| • Static | Continuously variable static level |
| • Static + Dynamic | Continuously variable static level and dynamic level |
| • External Static Input | 10 K ohms input impedance
Positive polarity 0 - 10V |
| • External Dynamic Input | 10 K ohms input impedance
10 V peak AC |
| • Dither | 400 Hz +/- 10% |
| • Control Accuracy | 40 dB of full scale controlled variable |
| • Program Input Reference Signal | 1.0 VAC RMS +/- 50 MV - sinusoidal
5.0 V peak maximum - random |
| • Power Amp Input Reference Signal | 0 to 5 Volt Peak |
| • EXT Static Set Point | 0 to +5VDC for full scale operation |
| • EXT Dynamic Set Point | 0 to -5VDC for full scale operation |

7. Drawings


Printed Circuit Board Location	_____
Controller Schematic	D-015393
Block Diagram Master Controller (2 sheets)	D-015391
Schematic PCB 110-01 Sheet 3 - Load Cell Amp & Peak-Detector	C-015358
Schematic PCB 110-01 Sheet 1 - Static Loop	C-015358
Schematic PCB 110-01 Sheet 2 - Dynamic Loop	C-015358
PCB 110-01 (Component Location)	D-015384
Schematic PCB 110-02	C-014893
Assy PCB 110-02 (Component Location)	C-014881
Schematic PCB 110-04	C-010660
Assy PCB 110-04 (Component Location)	C-014882

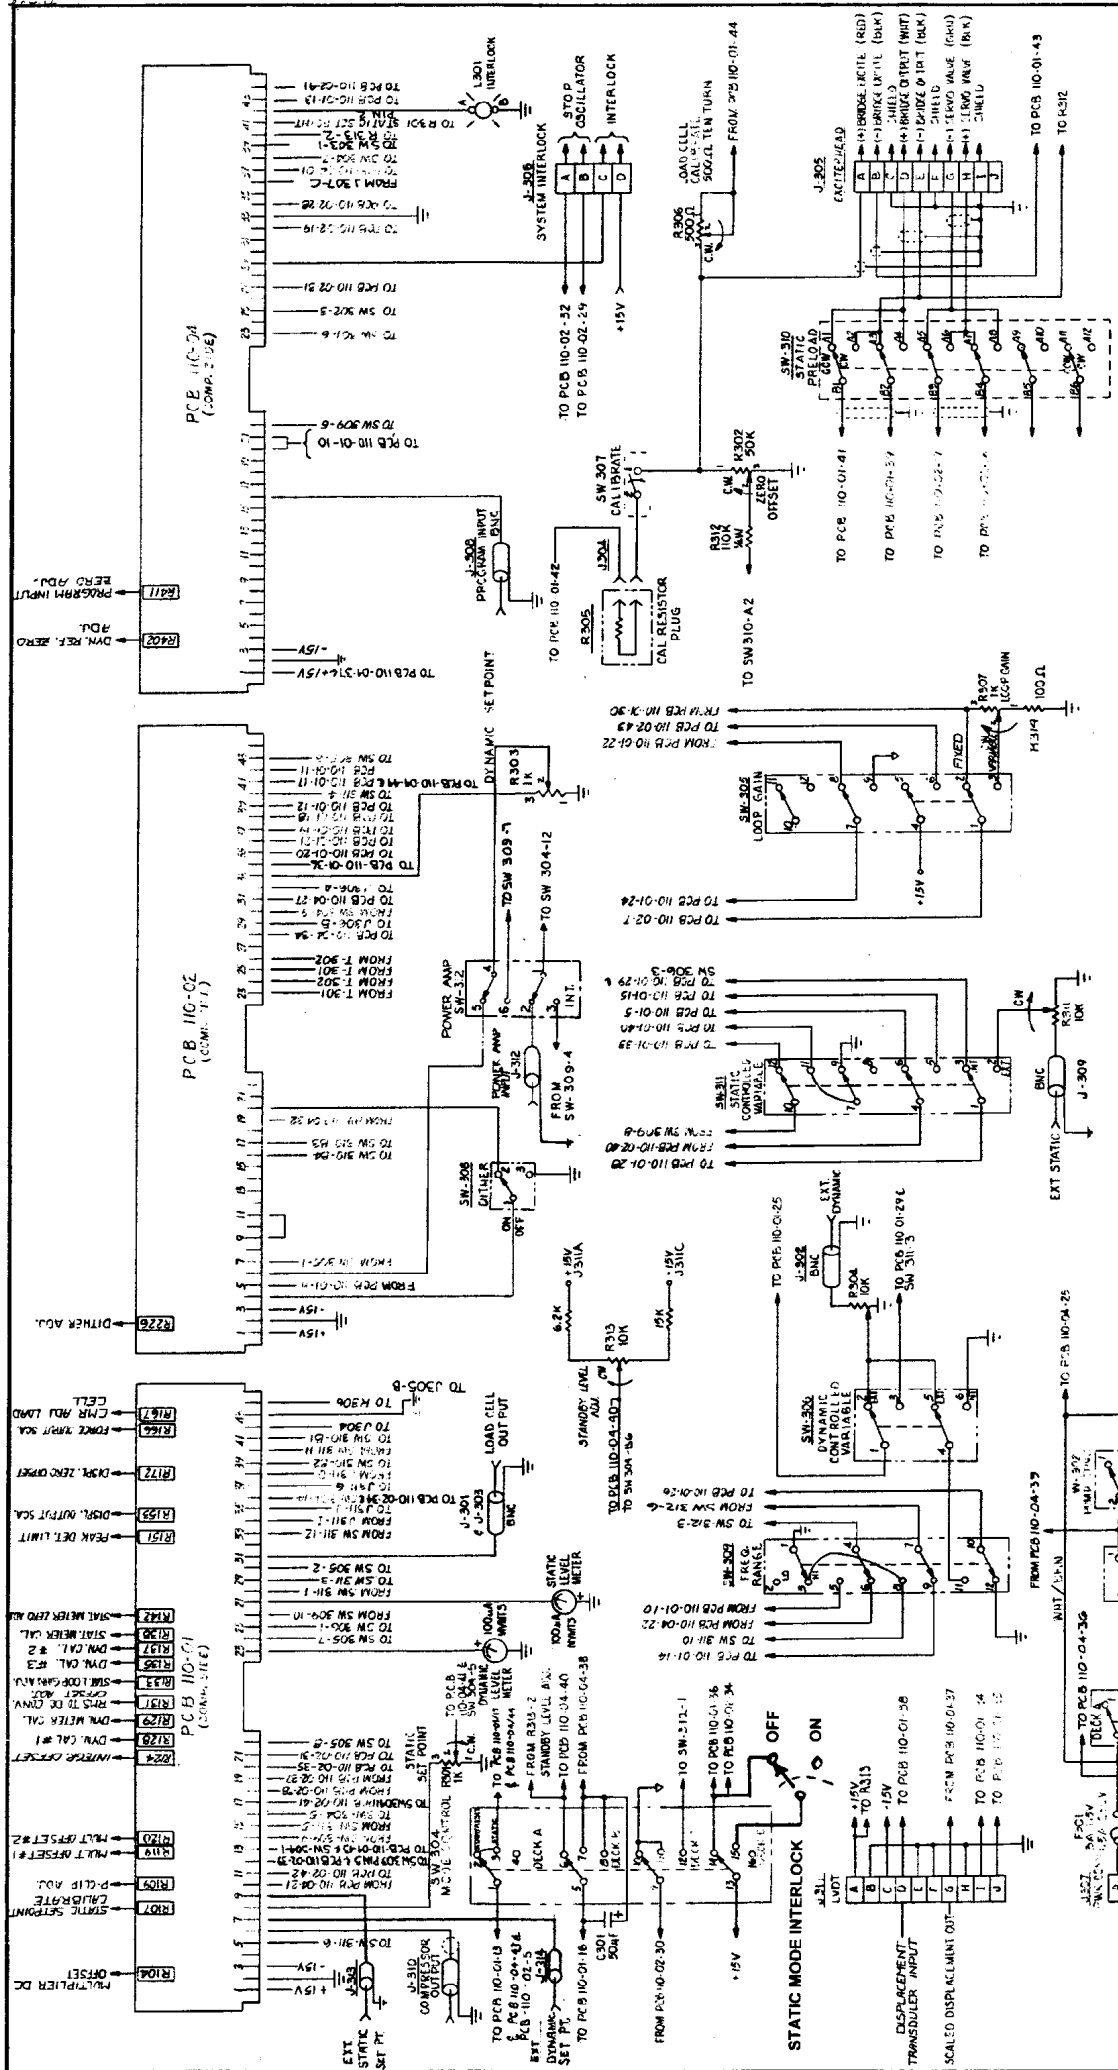

FORM	REV.	DATE	DESCRIPTION
1	1	10/15/50	INITIAL ISSUE
2	1	10/15/50	REVISION
3	1	10/15/50	REVISION
4	1	10/15/50	REVISION
5	1	10/15/50	REVISION
6	1	10/15/50	REVISION
7	1	10/15/50	REVISION


ITEM	QTY	UNITS	DESCRIPTION
1	1	PCB	PCB 110-01
2	1	PCB	PCB 110-02
3	1	PCB	PCB 110-03
4	1	PCB	PCB 110-04
5	1	PCB	PCB 110-05
6	1	PCB	PCB 110-06
7	1	PCB	PCB 110-07

SCALE: N.T.S.
 MATERIAL: 1.00 UNLESS OTHERWISE SPECIFIED
 FINAL FINISH: 1.00 UNLESS OTHERWISE SPECIFIED
 USED ON ASSEMBLY: 1.00 UNLESS OTHERWISE SPECIFIED

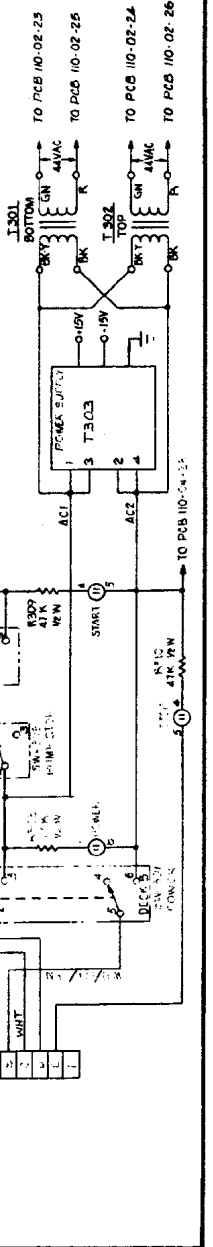


ITEM	QTY	UNITS	DESCRIPTION
1	1	PCB	PCB 110-01
2	1	PCB	PCB 110-02
3	1	PCB	PCB 110-03
4	1	PCB	PCB 110-04
5	1	PCB	PCB 110-05
6	1	PCB	PCB 110-06
7	1	PCB	PCB 110-07

SCALE: N.T.S.
 MATERIAL: 1.00 UNLESS OTHERWISE SPECIFIED
 FINAL FINISH: 1.00 UNLESS OTHERWISE SPECIFIED
 USED ON ASSEMBLY: 1.00 UNLESS OTHERWISE SPECIFIED

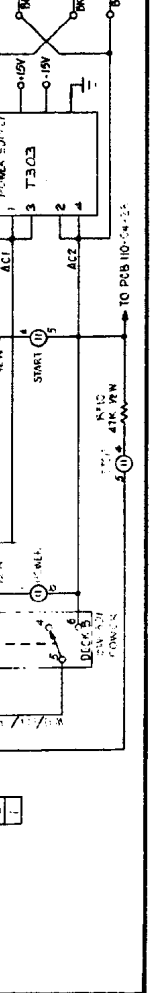


ITEM	QTY	UNITS	DESCRIPTION
1	1	PCB	PCB 110-01
2	1	PCB	PCB 110-02
3	1	PCB	PCB 110-03
4	1	PCB	PCB 110-04
5	1	PCB	PCB 110-05
6	1	PCB	PCB 110-06
7	1	PCB	PCB 110-07

SCALE: N.T.S.
 MATERIAL: 1.00 UNLESS OTHERWISE SPECIFIED
 FINAL FINISH: 1.00 UNLESS OTHERWISE SPECIFIED
 USED ON ASSEMBLY: 1.00 UNLESS OTHERWISE SPECIFIED

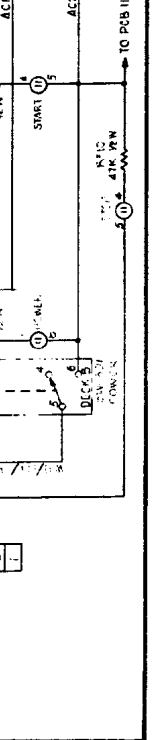


ITEM	QTY	UNITS	DESCRIPTION
1	1	PCB	PCB 110-01
2	1	PCB	PCB 110-02
3	1	PCB	PCB 110-03
4	1	PCB	PCB 110-04
5	1	PCB	PCB 110-05
6	1	PCB	PCB 110-06
7	1	PCB	PCB 110-07

SCALE: N.T.S.
 MATERIAL: 1.00 UNLESS OTHERWISE SPECIFIED
 FINAL FINISH: 1.00 UNLESS OTHERWISE SPECIFIED
 USED ON ASSEMBLY: 1.00 UNLESS OTHERWISE SPECIFIED

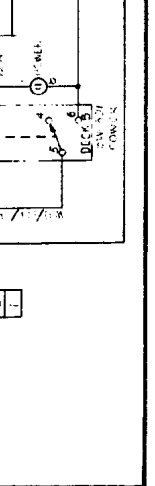

ITEM	QTY	UNITS	DESCRIPTION
1	1	PCB	PCB 110-01
2	1	PCB	PCB 110-02
3	1	PCB	PCB 110-03
4	1	PCB	PCB 110-04
5	1	PCB	PCB 110-05
6	1	PCB	PCB 110-06
7	1	PCB	PCB 110-07


SCALE: N.T.S.
 MATERIAL: 1.00 UNLESS OTHERWISE SPECIFIED
 FINAL FINISH: 1.00 UNLESS OTHERWISE SPECIFIED
 USED ON ASSEMBLY: 1.00 UNLESS OTHERWISE SPECIFIED

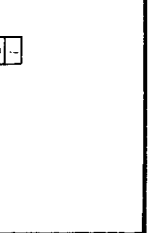


ITEM	QTY	UNITS	DESCRIPTION
1	1	PCB	PCB 110-01
2	1	PCB	PCB 110-02
3	1	PCB	PCB 110-03
4	1	PCB	PCB 110-04
5	1	PCB	PCB 110-05
6	1	PCB	PCB 110-06
7	1	PCB	PCB 110-07

SCALE: N.T.S.
 MATERIAL: 1.00 UNLESS OTHERWISE SPECIFIED
 FINAL FINISH: 1.00 UNLESS OTHERWISE SPECIFIED
 USED ON ASSEMBLY: 1.00 UNLESS OTHERWISE SPECIFIED

FROM R504
(1-2)

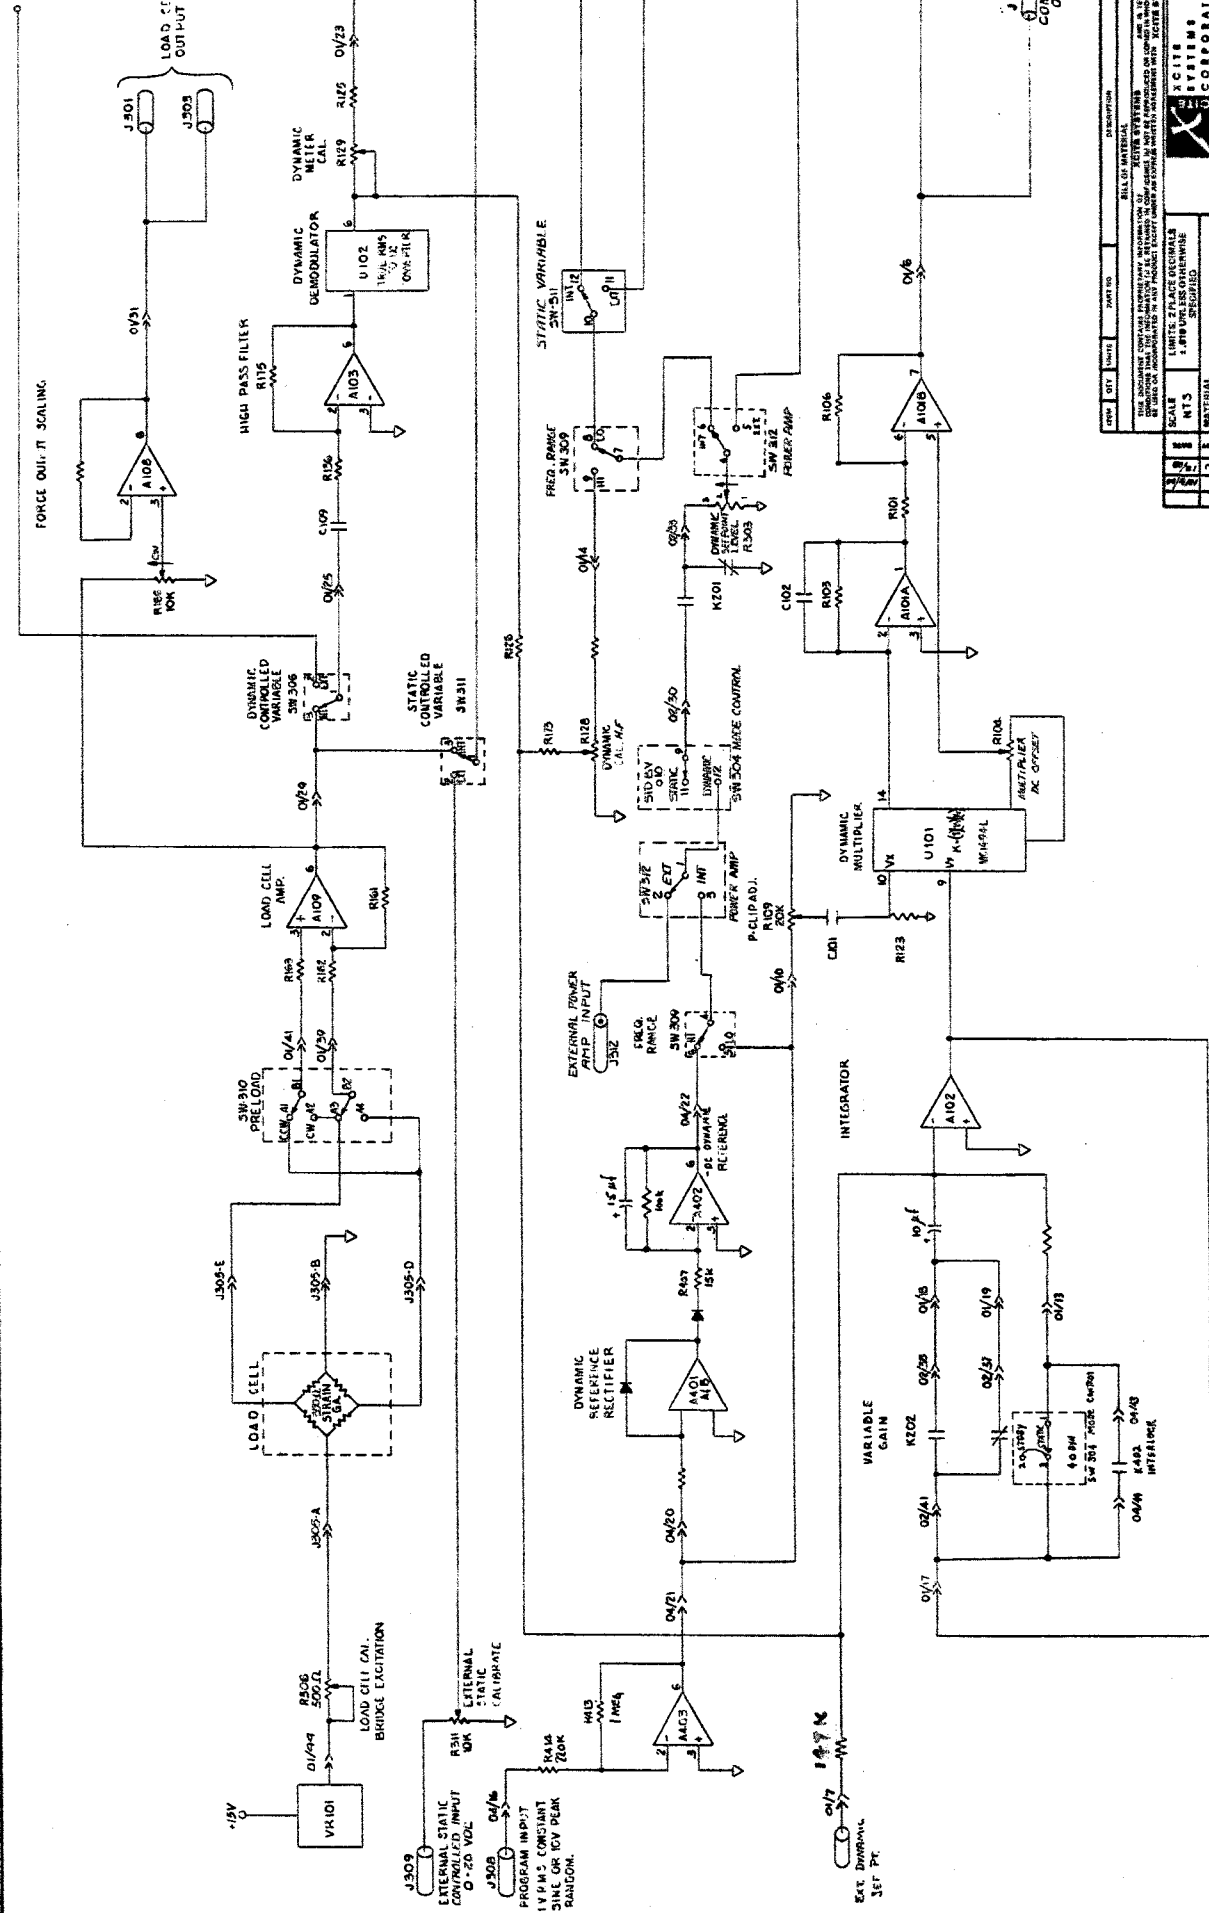

FORM	REV	DATE	BY	UNIT	DESCRIPTION
07	06	8/15/6	SCS	INT	REVISION
<p>THIS DOCUMENT CONTAINS INFORMATION OF A TECHNICAL NATURE AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT PERMISSION IN WRITING FROM THE NATIONAL BUREAU OF STANDARDS.</p>					
<p>SCALE: 1.875 INCHES PER LINE MATERIAL: ALUMINUM FINISH: POLISHED</p>					
<p>LIMITS: 27.5% DECIMALS 1.875 INCHES PER LINE STANDARD: SPECIFIED</p>					
<p>BLOCK DIAGRAM MASTER CONTROLLER</p>					
<p>USED ON ASSEMBLY: 0-015391-00</p>					

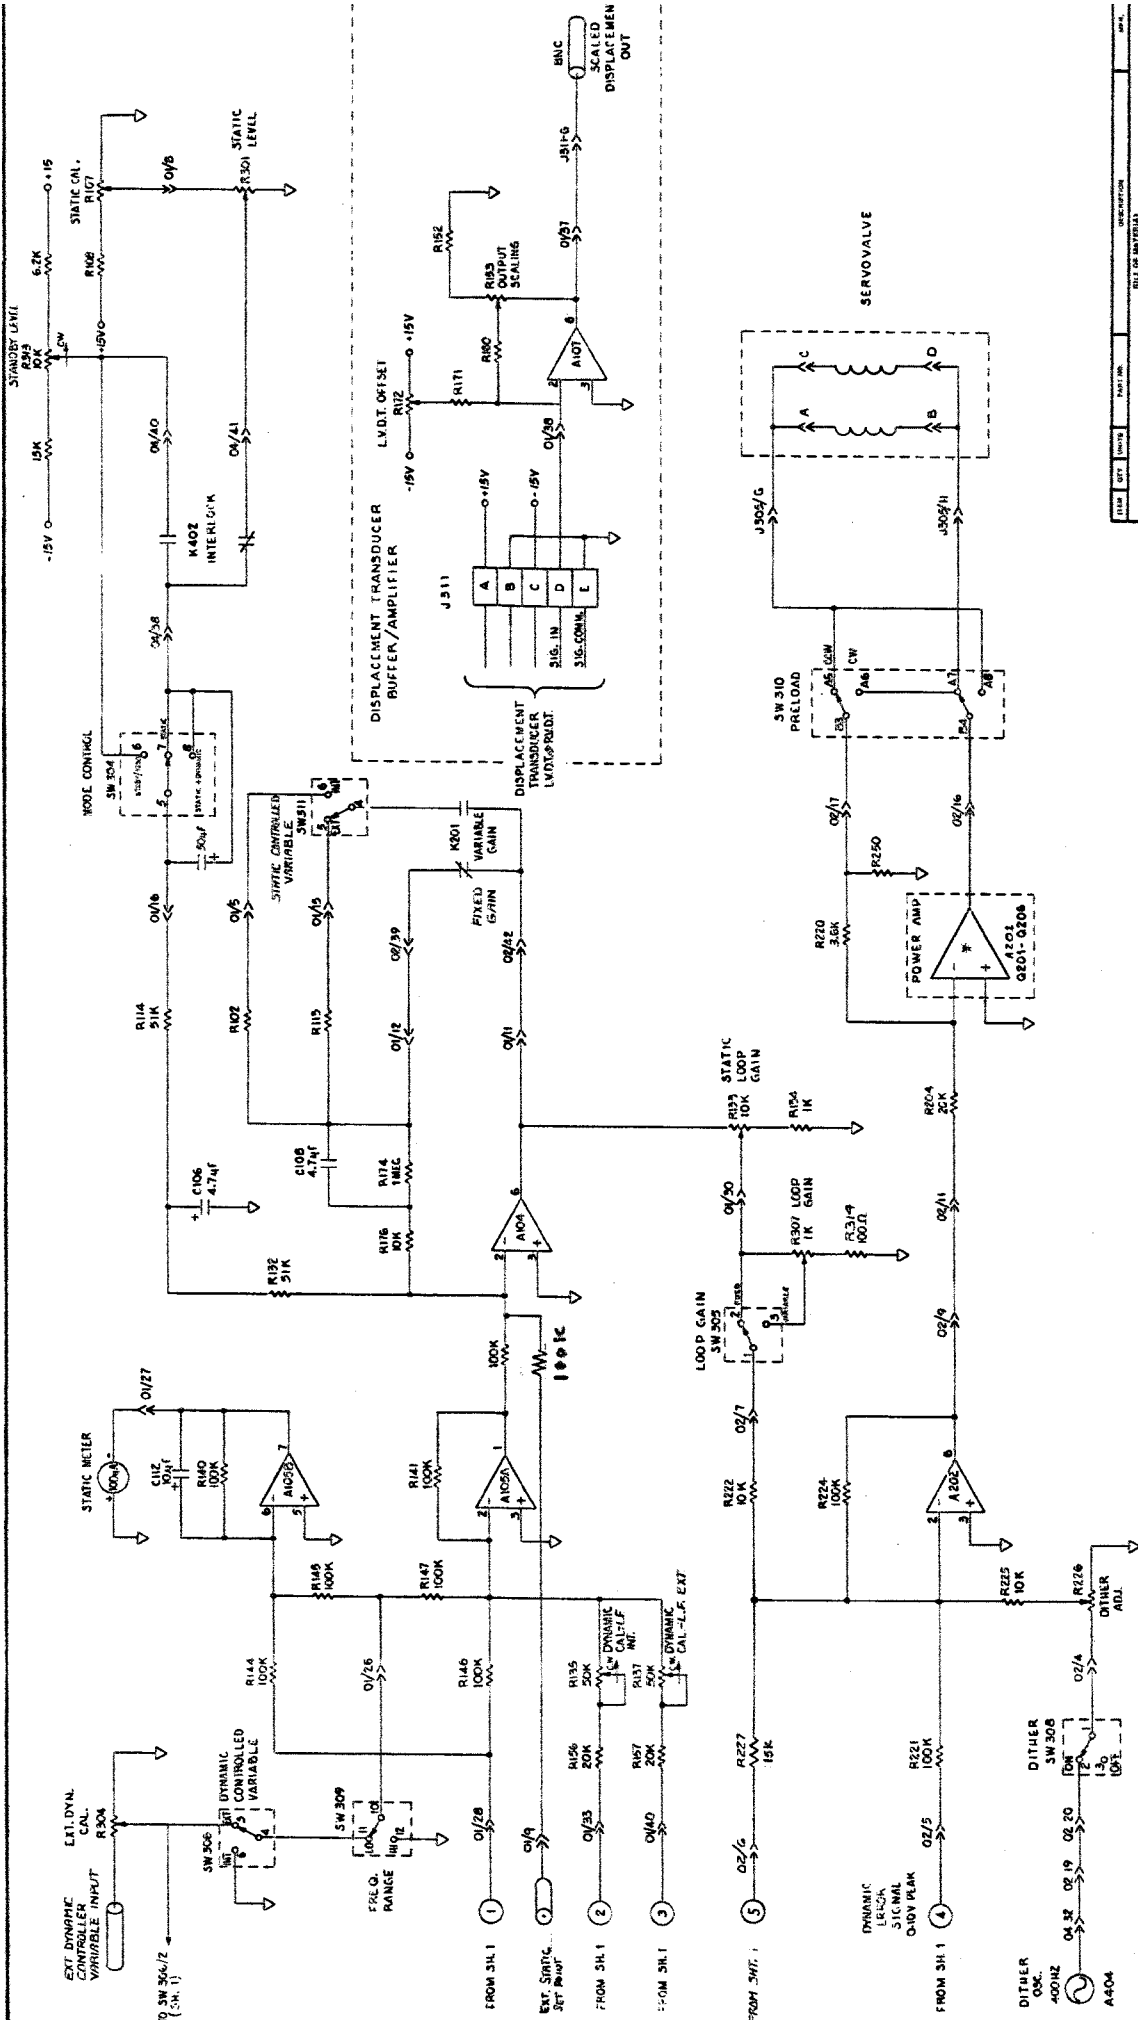

* A. 15. 125 (40 O/H / V IN)

ITEM	QTY	UNIT	PART NO.	DESCRIPTION
1	1	PCB	10000000	PCB
2	1	PCB	10000000	PCB
3	1	PCB	10000000	PCB
4	1	PCB	10000000	PCB
5	1	PCB	10000000	PCB
6	1	PCB	10000000	PCB
7	1	PCB	10000000	PCB
8	1	PCB	10000000	PCB
9	1	PCB	10000000	PCB
10	1	PCB	10000000	PCB
11	1	PCB	10000000	PCB
12	1	PCB	10000000	PCB
13	1	PCB	10000000	PCB
14	1	PCB	10000000	PCB
15	1	PCB	10000000	PCB
16	1	PCB	10000000	PCB
17	1	PCB	10000000	PCB
18	1	PCB	10000000	PCB
19	1	PCB	10000000	PCB
20	1	PCB	10000000	PCB
21	1	PCB	10000000	PCB
22	1	PCB	10000000	PCB
23	1	PCB	10000000	PCB
24	1	PCB	10000000	PCB
25	1	PCB	10000000	PCB
26	1	PCB	10000000	PCB
27	1	PCB	10000000	PCB
28	1	PCB	10000000	PCB
29	1	PCB	10000000	PCB
30	1	PCB	10000000	PCB
31	1	PCB	10000000	PCB
32	1	PCB	10000000	PCB
33	1	PCB	10000000	PCB
34	1	PCB	10000000	PCB
35	1	PCB	10000000	PCB
36	1	PCB	10000000	PCB
37	1	PCB	10000000	PCB
38	1	PCB	10000000	PCB
39	1	PCB	10000000	PCB
40	1	PCB	10000000	PCB
41	1	PCB	10000000	PCB
42	1	PCB	10000000	PCB
43	1	PCB	10000000	PCB
44	1	PCB	10000000	PCB
45	1	PCB	10000000	PCB
46	1	PCB	10000000	PCB
47	1	PCB	10000000	PCB
48	1	PCB	10000000	PCB
49	1	PCB	10000000	PCB
50	1	PCB	10000000	PCB
51	1	PCB	10000000	PCB
52	1	PCB	10000000	PCB
53	1	PCB	10000000	PCB
54	1	PCB	10000000	PCB
55	1	PCB	10000000	PCB
56	1	PCB	10000000	PCB
57	1	PCB	10000000	PCB
58	1	PCB	10000000	PCB
59	1	PCB	10000000	PCB
60	1	PCB	10000000	PCB
61	1	PCB	10000000	PCB
62	1	PCB	10000000	PCB
63	1	PCB	10000000	PCB
64	1	PCB	10000000	PCB
65	1	PCB	10000000	PCB
66	1	PCB	10000000	PCB
67	1	PCB	10000000	PCB
68	1	PCB	10000000	PCB
69	1	PCB	10000000	PCB
70	1	PCB	10000000	PCB
71	1	PCB	10000000	PCB
72	1	PCB	10000000	PCB
73	1	PCB	10000000	PCB
74	1	PCB	10000000	PCB
75	1	PCB	10000000	PCB
76	1	PCB	10000000	PCB
77	1	PCB	10000000	PCB
78	1	PCB	10000000	PCB
79	1	PCB	10000000	PCB
80	1	PCB	10000000	PCB
81	1	PCB	10000000	PCB
82	1	PCB	10000000	PCB
83	1	PCB	10000000	PCB
84	1	PCB	10000000	PCB
85	1	PCB	10000000	PCB
86	1	PCB	10000000	PCB
87	1	PCB	10000000	PCB
88	1	PCB	10000000	PCB
89	1	PCB	10000000	PCB
90	1	PCB	10000000	PCB
91	1	PCB	10000000	PCB
92	1	PCB	10000000	PCB
93	1	PCB	10000000	PCB
94	1	PCB	10000000	PCB
95	1	PCB	10000000	PCB
96	1	PCB	10000000	PCB
97	1	PCB	10000000	PCB
98	1	PCB	10000000	PCB
99	1	PCB	10000000	PCB
100	1	PCB	10000000	PCB

BLOCK DIAGRAM MASTER CONTROLLER

SCALE: 1/2" = 1" (40 O/H / V IN)

MATERIAL: 1. JUNCTION BOXES 2. JUNCTION BOXES 3. JUNCTION BOXES 4. JUNCTION BOXES 5. JUNCTION BOXES 6. JUNCTION BOXES 7. JUNCTION BOXES 8. JUNCTION BOXES 9. JUNCTION BOXES 10. JUNCTION BOXES 11. JUNCTION BOXES 12. JUNCTION BOXES 13. JUNCTION BOXES 14. JUNCTION BOXES 15. JUNCTION BOXES 16. JUNCTION BOXES 17. JUNCTION BOXES 18. JUNCTION BOXES 19. JUNCTION BOXES 20. JUNCTION BOXES 21. JUNCTION BOXES 22. JUNCTION BOXES 23. JUNCTION BOXES 24. JUNCTION BOXES 25. JUNCTION BOXES 26. JUNCTION BOXES 27. JUNCTION BOXES 28. JUNCTION BOXES 29. JUNCTION BOXES 30. JUNCTION BOXES 31. JUNCTION BOXES 32. JUNCTION BOXES 33. JUNCTION BOXES 34. JUNCTION BOXES 35. JUNCTION BOXES 36. JUNCTION BOXES 37. JUNCTION BOXES 38. JUNCTION BOXES 39. JUNCTION BOXES 40. JUNCTION BOXES 41. JUNCTION BOXES 42. JUNCTION BOXES 43. JUNCTION BOXES 44. JUNCTION BOXES 45. JUNCTION BOXES 46. JUNCTION BOXES 47. JUNCTION BOXES 48. JUNCTION BOXES 49. JUNCTION BOXES 50. JUNCTION BOXES 51. JUNCTION BOXES 52. JUNCTION BOXES 53. JUNCTION BOXES 54. JUNCTION BOXES 55. JUNCTION BOXES 56. JUNCTION BOXES 57. JUNCTION BOXES 58. JUNCTION BOXES 59. JUNCTION BOXES 60. JUNCTION BOXES 61. JUNCTION BOXES 62. JUNCTION BOXES 63. JUNCTION BOXES 64. JUNCTION BOXES 65. JUNCTION BOXES 66. JUNCTION BOXES 67. JUNCTION BOXES 68. JUNCTION BOXES 69. JUNCTION BOXES 70. JUNCTION BOXES 71. JUNCTION BOXES 72. JUNCTION BOXES 73. JUNCTION BOXES 74. JUNCTION BOXES 75. JUNCTION BOXES 76. JUNCTION BOXES 77. JUNCTION BOXES 78. JUNCTION BOXES 79. JUNCTION BOXES 80. JUNCTION BOXES 81. JUNCTION BOXES 82. JUNCTION BOXES 83. JUNCTION BOXES 84. JUNCTION BOXES 85. JUNCTION BOXES 86. JUNCTION BOXES 87. JUNCTION BOXES 88. JUNCTION BOXES 89. JUNCTION BOXES 90. JUNCTION BOXES 91. JUNCTION BOXES 92. JUNCTION BOXES 93. JUNCTION BOXES 94. JUNCTION BOXES 95. JUNCTION BOXES 96. JUNCTION BOXES 97. JUNCTION BOXES 98. JUNCTION BOXES 99. JUNCTION BOXES 100. JUNCTION BOXES

DESIGNED BY: [Signature]

APPROVED BY: [Signature]

DATE: 11/14/53


PROJECT: [Blank]

REVISIONS: [Blank]

DESCRIPTION: [Blank]

SCALE: 1/2" = 1" (40 O/H / V IN)

MATERIAL: 1. JUNCTION BOXES 2. JUNCTION BOXES 3. JUNCTION BOXES 4. JUNCTION BOXES 5. JUNCTION BOXES 6. JUNCTION BOXES 7. JUNCTION BOXES 8. JUNCTION BOXES 9. JUNCTION BOXES 10. JUNCTION BOXES 11. JUNCTION BOXES 12. JUNCTION BOXES 13. JUNCTION BOXES 14. JUNCTION BOXES 15. JUNCTION BOXES 16. JUNCTION BOXES 17. JUNCTION BOXES 18. JUNCTION BOXES 19. JUNCTION BOXES 20. JUNCTION BOXES 21. JUNCTION BOXES 22. JUNCTION BOXES 23. JUNCTION BOXES 24. JUNCTION BOXES 25. JUNCTION BOXES 26. JUNCTION BOXES 27. JUNCTION BOXES 28. JUNCTION BOXES 29. JUNCTION BOXES 30. JUNCTION BOXES 31. JUNCTION BOXES 32. JUNCTION BOXES 33. JUNCTION BOXES 34. JUNCTION BOXES 35. JUNCTION BOXES 36. JUNCTION BOXES 37. JUNCTION BOXES 38. JUNCTION BOXES 39. JUNCTION BOXES 40. JUNCTION BOXES 41. JUNCTION BOXES 42. JUNCTION BOXES 43. JUNCTION BOXES 44. JUNCTION BOXES 45. JUNCTION BOXES 46. JUNCTION BOXES 47. JUNCTION BOXES 48. JUNCTION BOXES 49. JUNCTION BOXES 50. JUNCTION BOXES 51. JUNCTION BOXES 52. JUNCTION BOXES 53. JUNCTION BOXES 54. JUNCTION BOXES 55. JUNCTION BOXES 56. JUNCTION BOXES 57. JUNCTION BOXES 58. JUNCTION BOXES 59. JUNCTION BOXES 60. JUNCTION BOXES 61. JUNCTION BOXES 62. JUNCTION BOXES 63. JUNCTION BOXES 64. JUNCTION BOXES 65. JUNCTION BOXES 66. JUNCTION BOXES 67. JUNCTION BOXES 68. JUNCTION BOXES 69. JUNCTION BOXES 70. JUNCTION BOXES 71. JUNCTION BOXES 72. JUNCTION BOXES 73. JUNCTION BOXES 74. JUNCTION BOXES 75. JUNCTION BOXES 76. JUNCTION BOXES 77. JUNCTION BOXES 78. JUNCTION BOXES 79. JUNCTION BOXES 80. JUNCTION BOXES 81. JUNCTION BOXES 82. JUNCTION BOXES 83. JUNCTION BOXES 84. JUNCTION BOXES 85. JUNCTION BOXES 86. JUNCTION BOXES 87. JUNCTION BOXES 88. JUNCTION BOXES 89. JUNCTION BOXES 90. JUNCTION BOXES 91. JUNCTION BOXES 92. JUNCTION BOXES 93. JUNCTION BOXES 94. JUNCTION BOXES 95. JUNCTION BOXES 96. JUNCTION BOXES 97. JUNCTION BOXES 98. JUNCTION BOXES 99. JUNCTION BOXES 100. JUNCTION BOXES

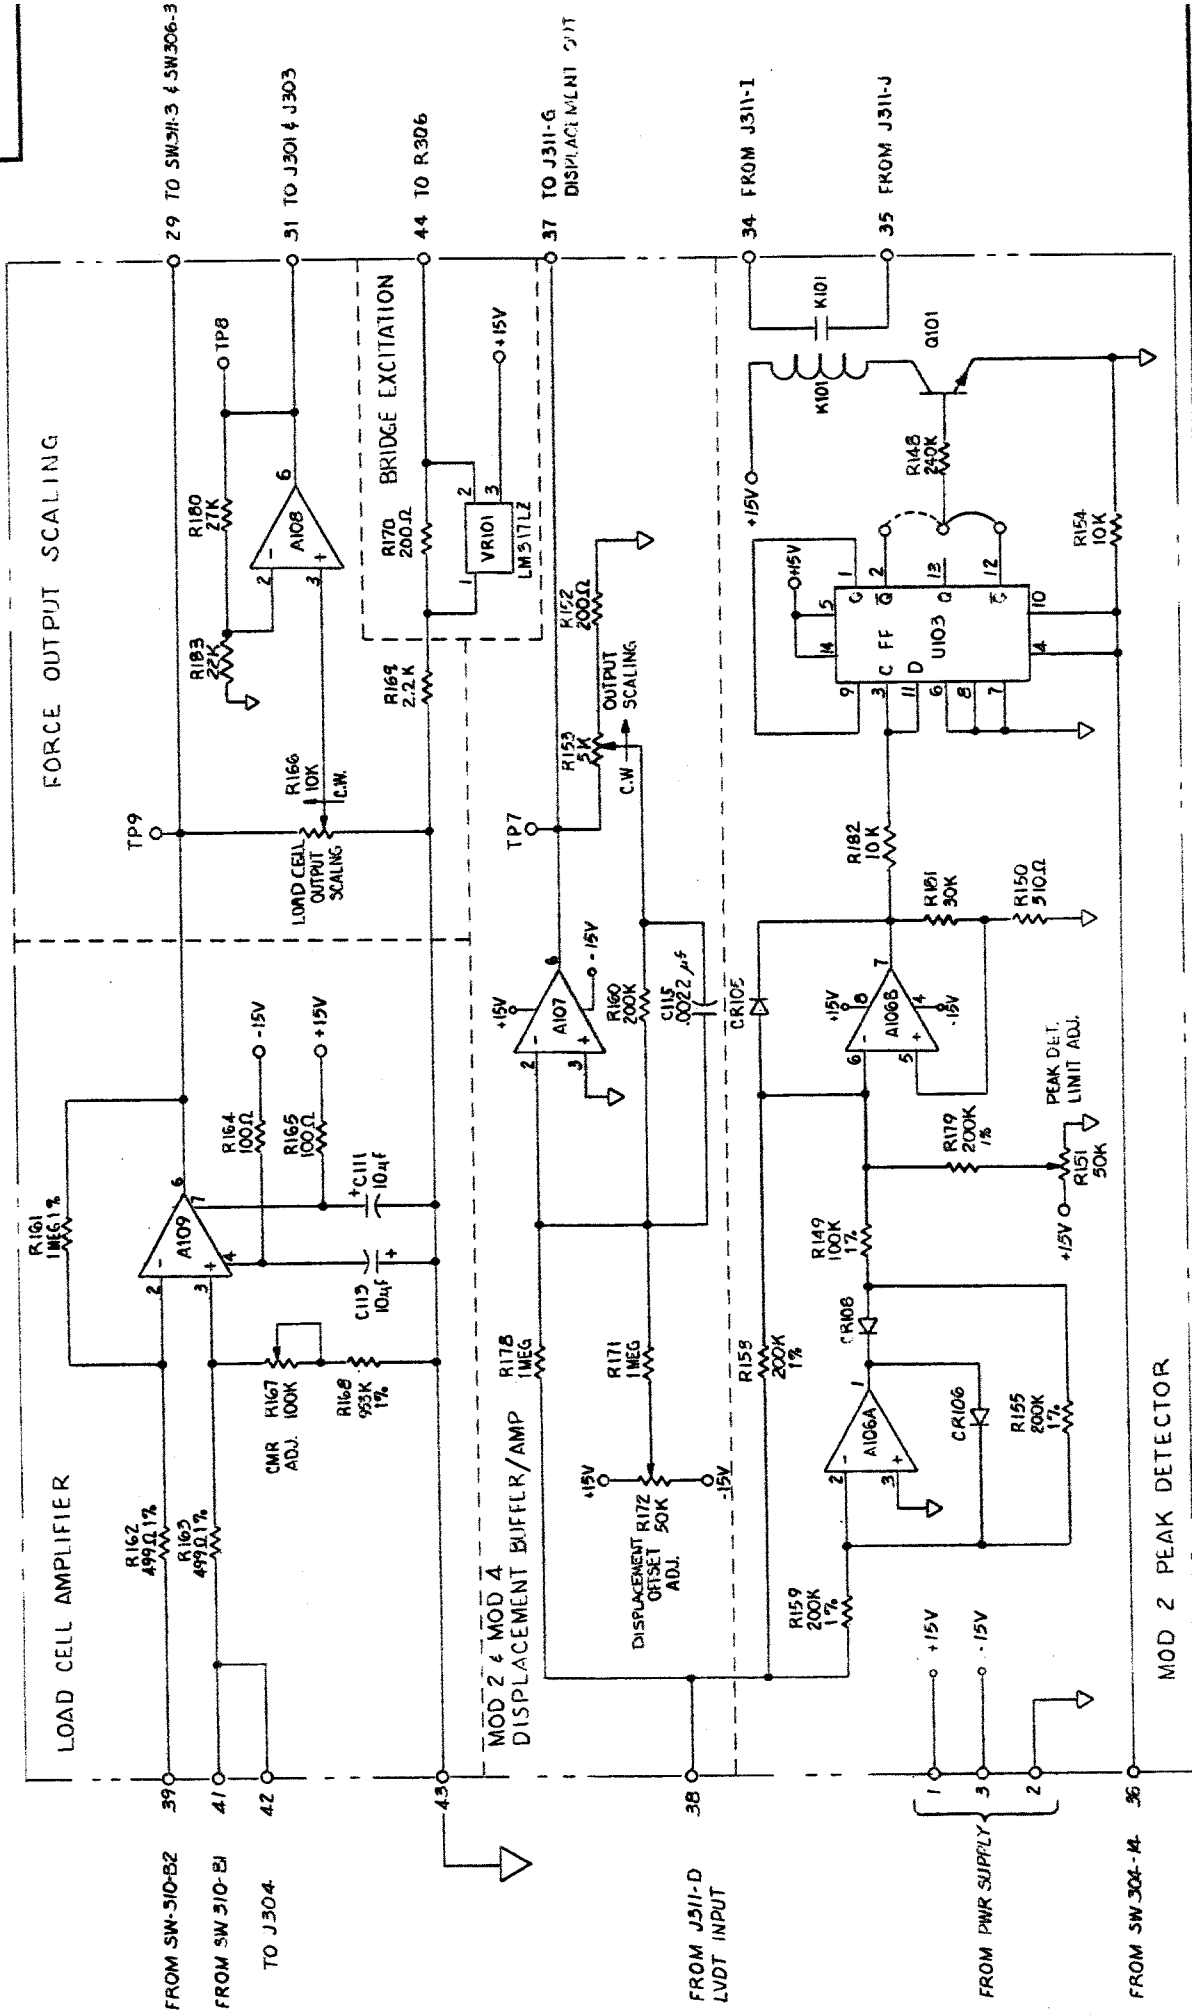


ITEM	QTY	UNITS	PART NO.	DESCRIPTION	MFR.
BILL OF MATERIAL					
THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF XCITE SYSTEMS AND IS TO BE KEPT CONFIDENTIAL. IT IS TO BE REPRODUCED OR COPIED IN WHOLE OR IN PART AND IS NOT TO BE DISTRIBUTED OR USED IN ANY MANNER WITHOUT THE WRITTEN PERMISSION OF XCITE SYSTEMS. XCITE SYSTEMS ACCEPTS NO LIABILITY FOR ANY DAMAGE OR LOSS OF PROFITS OR BUSINESS INTERRUPTIONS THAT MAY BE INCURRED BY THE USER OF THIS DOCUMENT. XCITE SYSTEMS IS NOT RESPONSIBLE FOR ANY DAMAGE OR LOSS OF PROFITS OR BUSINESS INTERRUPTIONS THAT MAY BE INCURRED BY THE USER OF THIS DOCUMENT UNDER AN EXPRESS WRITTEN AGREEMENT WITH XCITE SYSTEMS.					
SCALE	LIMITS: 2 PLACE DECIMALS ±.010 UNLESS OTHERWISE SPECIFIED		XCITE SYSTEMS CORPORATION		
MATERIAL	HEAT TREAT		TITLE SCHEMATIC PCB 110-10		
FINAL FINISH			DRAWN BY HALL 4-80 DRAWING LIST		
USED ON ASSEMBLY			CHECKED BY		
			APPROVED BY		

1. ALL DIODES ARE IN914.
2. ALL RESISTORS SHALL BE 1/4W ±5% UNLESS OTHERWISE SPECIFIED.

REV.	NO.	DATE	BY	DESCRIPTION
01	1	12/88	SM	INITIAL
02	2	12/88	SM	REVISED
03	3	12/88	SM	REVISED
04	4	12/88	SM	REVISED


REV.	NO.	DATE	BY	DESCRIPTION
01	1	12/88	SM	INITIAL
02	2	12/88	SM	REVISED
03	3	12/88	SM	REVISED
04	4	12/88	SM	REVISED

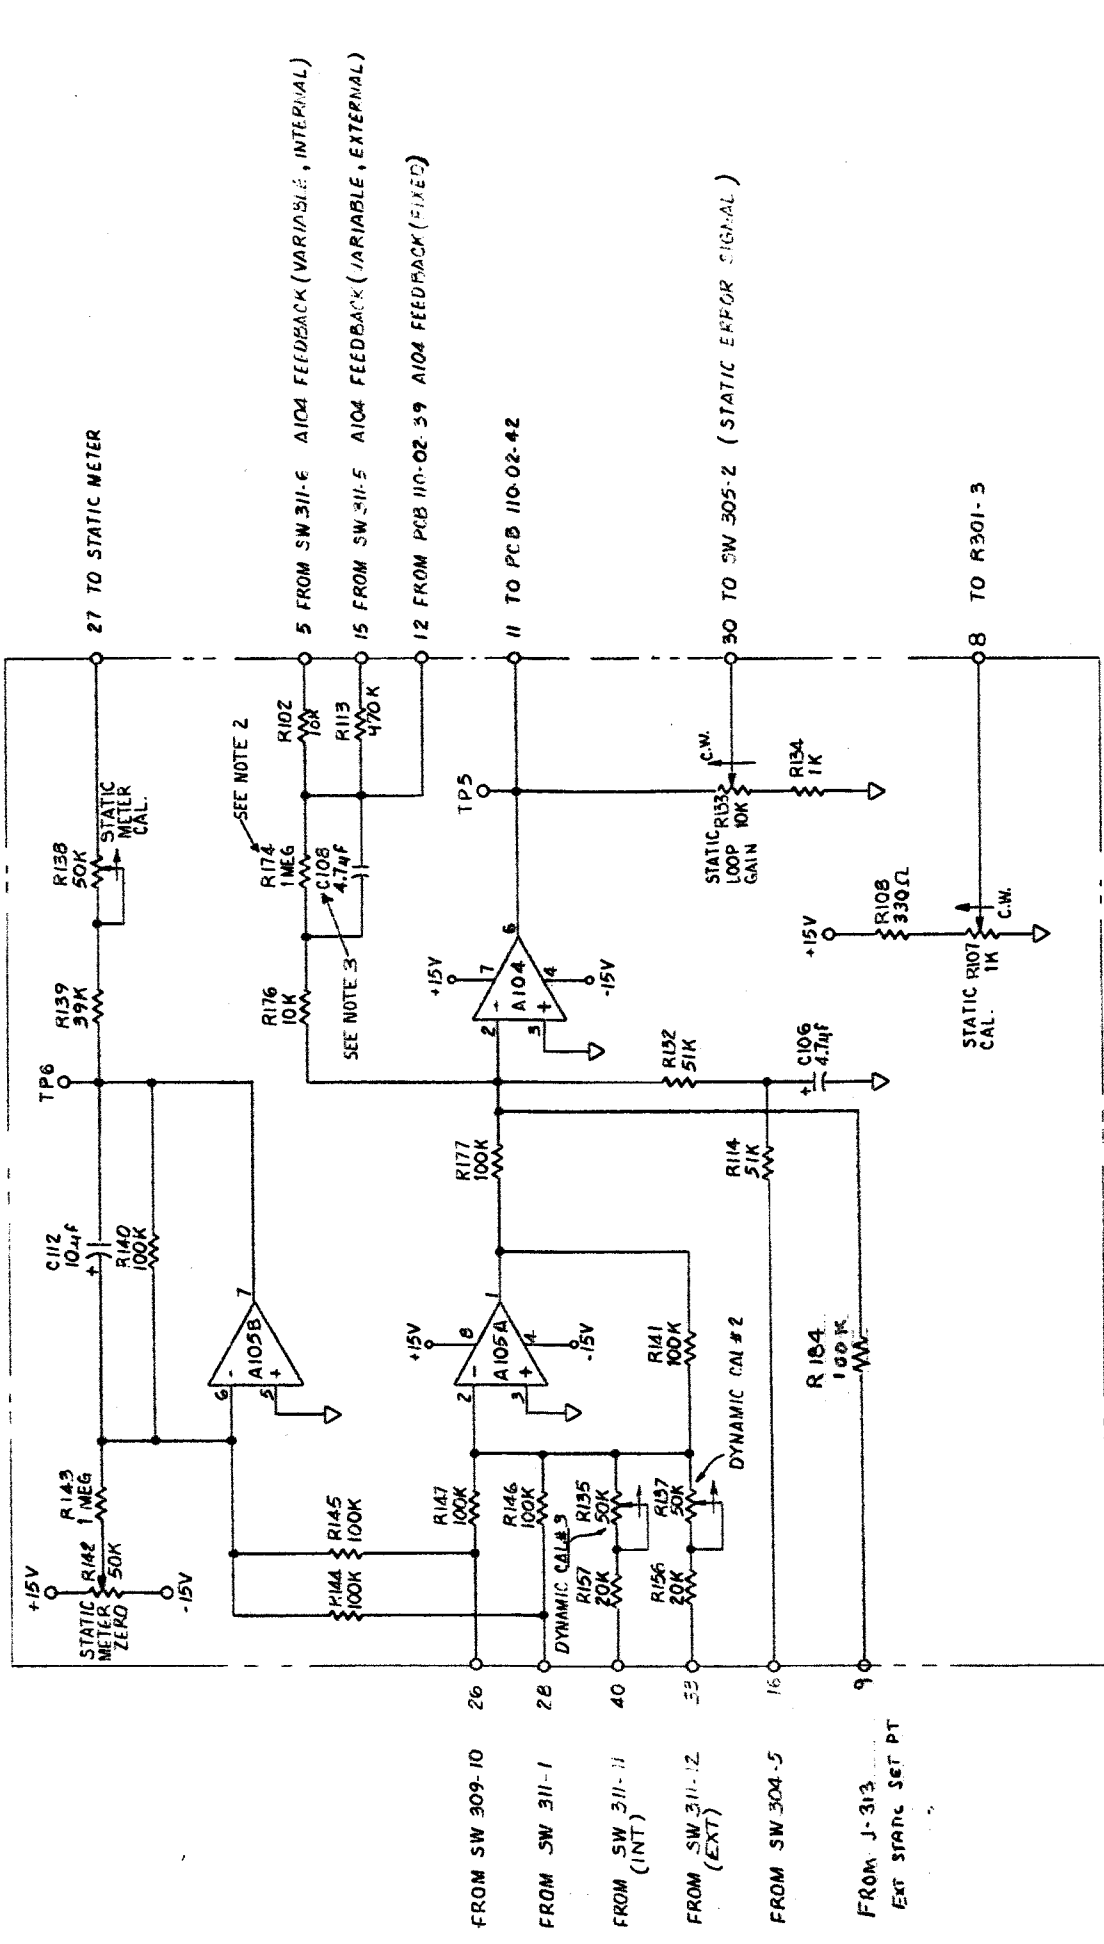

STATIC LOOP


1. ALL RESISTORS SHALL BE $V \pm 5\%$ UNLESS OTHERWISE SPECIFIED.
2. R174 5 100 K ON PCB 110-01 CONFIGURED WITH MOD 2 OPTION.
3. C108 IS REMOVED ON PCB 110-01 CONFIGURED WITH MOD 2 OPTION.

ITEM	QTY	UNITS	PART NO.	DESCRIPTION	MFR.
BILL OF MATERIAL					
<p>THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF Xcite SYSTEMS AND IS TENDERED SUBJECT TO THE CONDITIONS THAT THE INFORMATION IS NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART AND IS NOT BE USED OR INCORPORATED IN ANY PRODUCT EXCEPT UNDER AN EXPRESS WRITTEN AGREEMENT WITH Xcite SYSTEMS</p>					
SCALE		LIMITS: 2 PLACE DECIMALS			
		±.010 UNLESS OTHERWISE SPECIFIED			
MATERIAL - HEAT TREAT				Xcite SYSTEMS CORPORATION	
FINAL FINISH				SCHEMATIC	
USED ON ASSEMBLY				PCB 110-01-	
DRAWN BY		HALL 4-80		DRAWING LIST	
CHKD. BY				DRAWING NUMBER	
				C-15358-1	

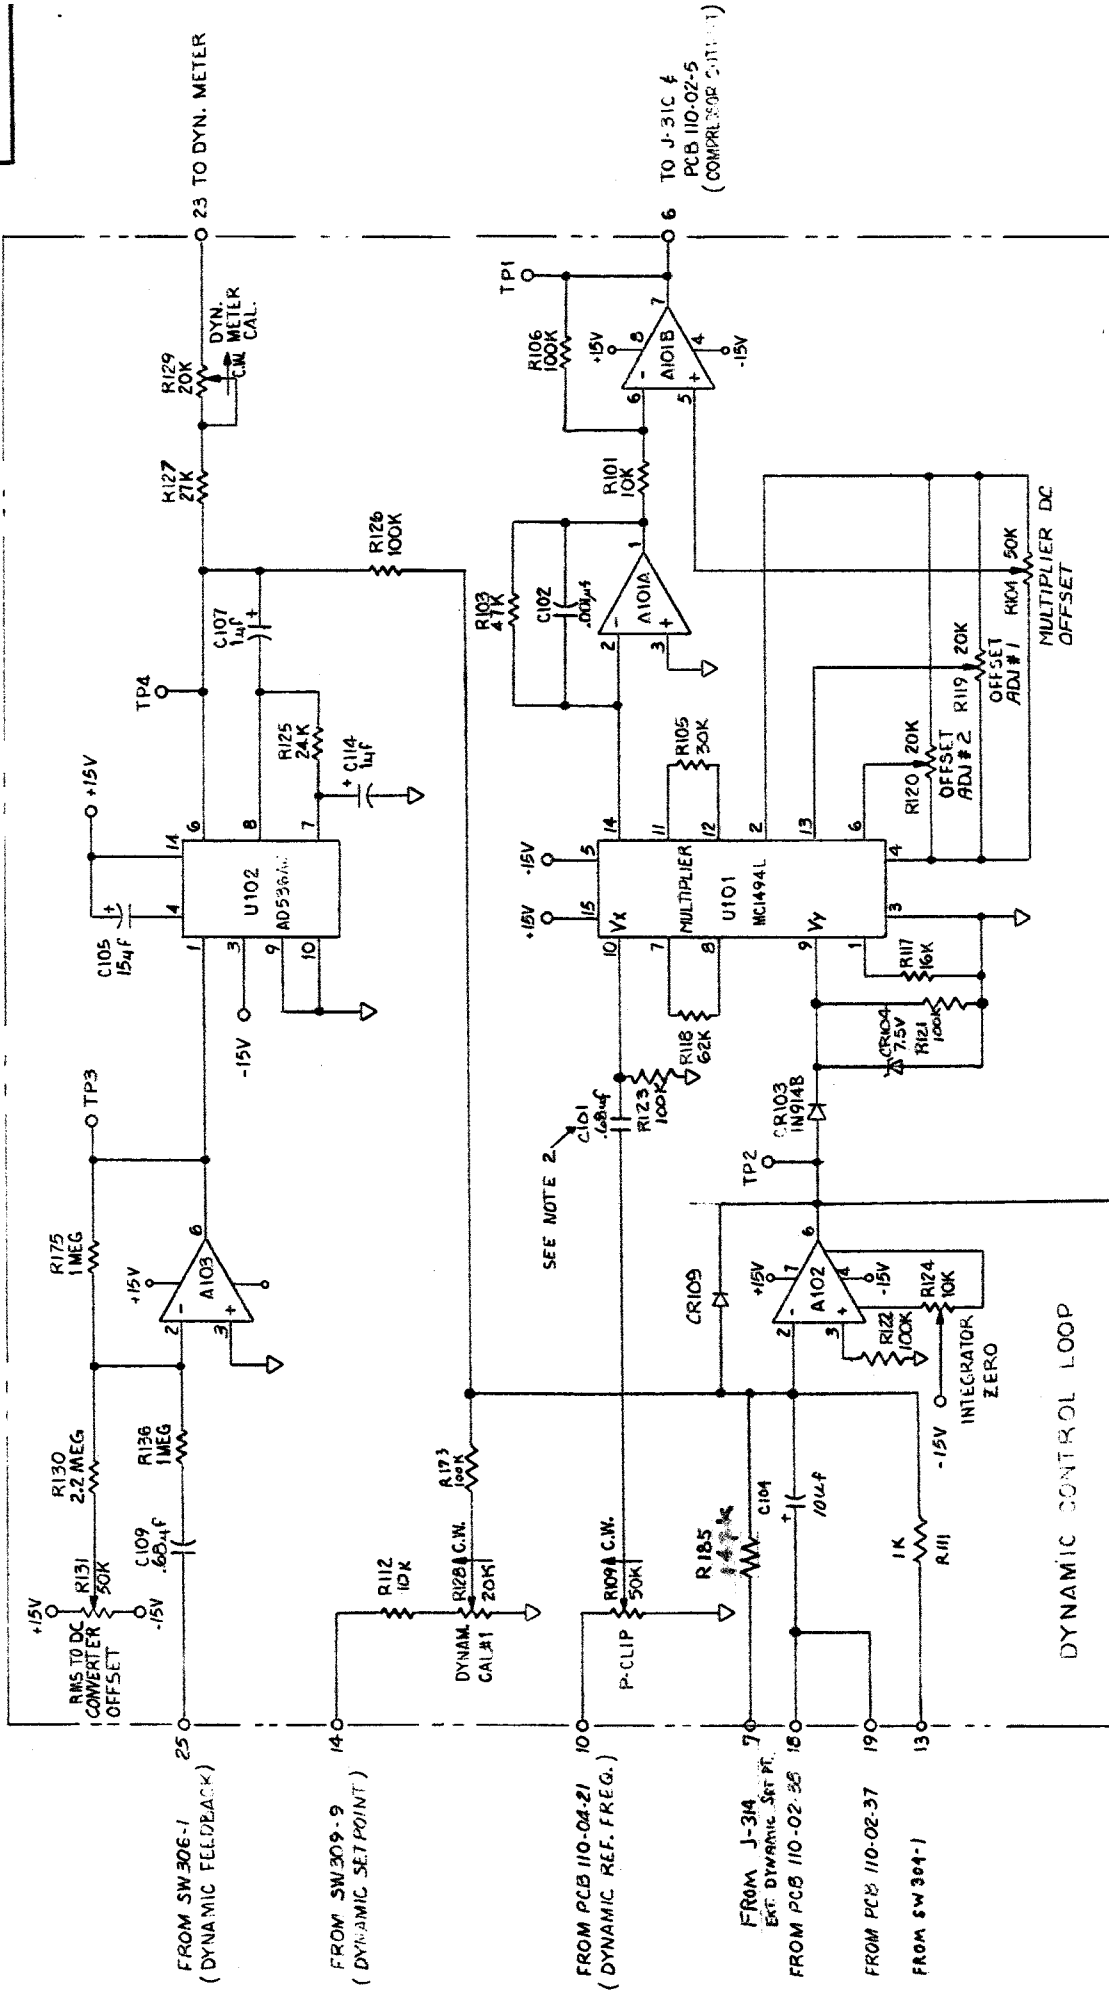

ITEM	QTY	UNITS	PART NO.	DESCRIPTION	MFR.
BILL OF MATERIAL					
THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF XCITE SYSTEMS AND IS TENDERED SUBJECT TO THE CONDITIONS THAT THE INFORMATION IS NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART AND IS NOT BE USED OR INCORPORATED IN ANY PRODUCT EXCEPT UNDER AN EXPRESS WRITTEN AGREEMENT WITH XCITE SYSTEMS					
SCALE	LIMITS: 2 PLACE DECIMALS ±.010 UNLESS OTHERWISE SPECIFIED		XCITE SYSTEMS CORPORATION		
MATERIAL - HEAT TREAT			TITLE		
FINAL FINISH			SCHEMATIC		
USED ON ASSEMBLY			PCB 110-01-		
DRAWN BY	DRAWING LIST		DRAWING NUMBER		
CHKD. BY	DATE		C-15358-009		
APPRD. BY	DATE		SH 2 of 3		

1. ALL RESISTORS SHALL BE 1/4W ±5% UNLESS OTHERWISE SPECIFIED.
2. C101 IS .068µF FOR PCB 110-01 CONFIGURED WITH MOD 2 OPTION.

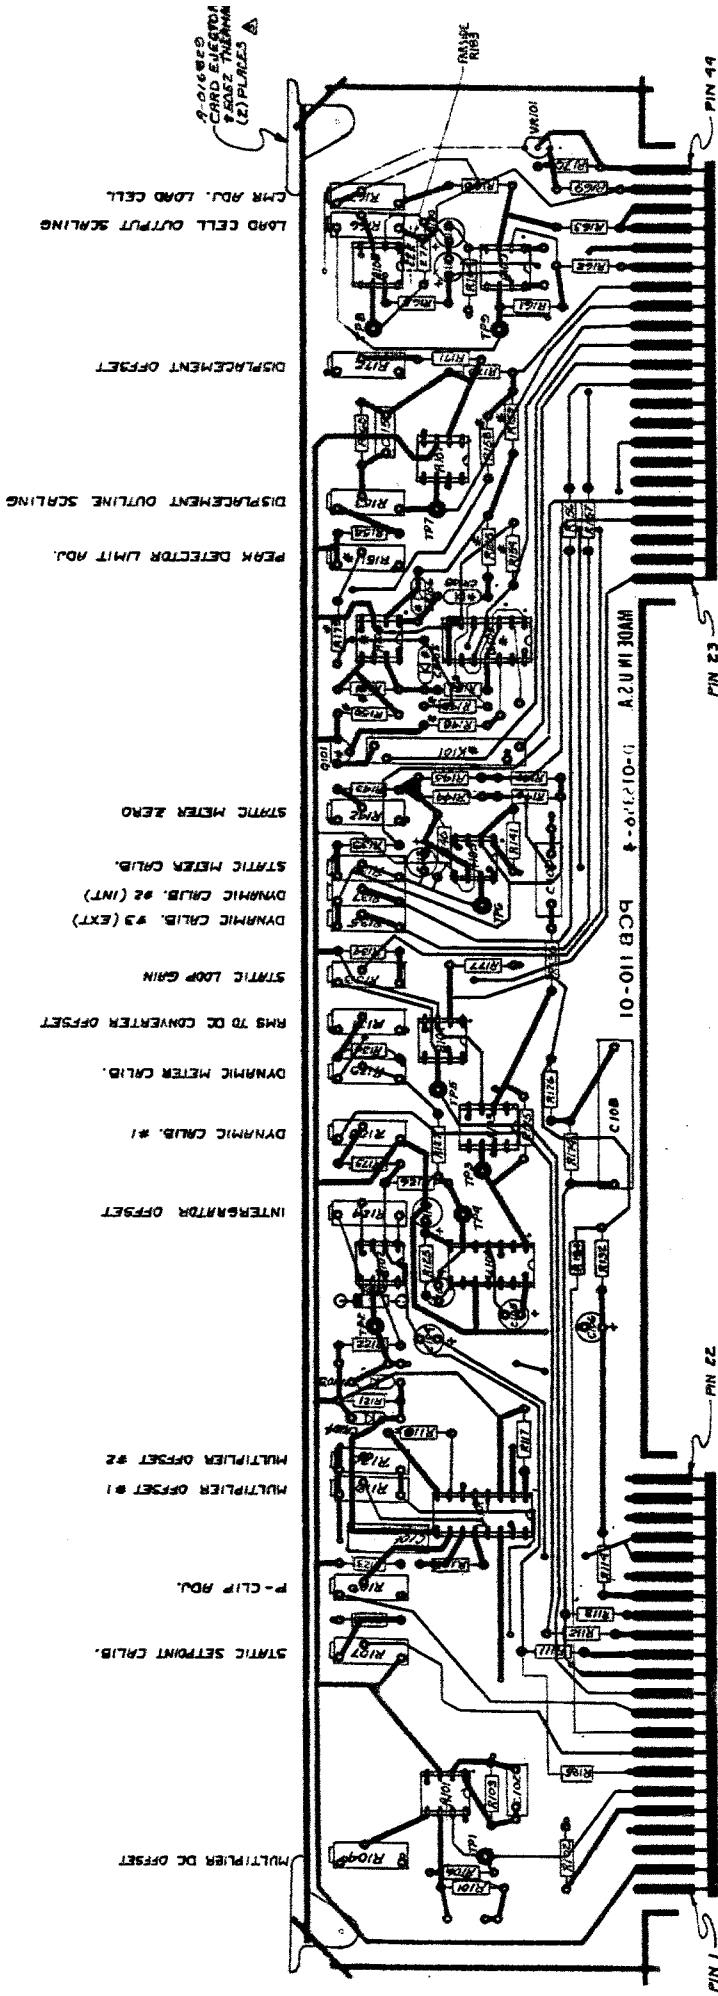

NOTE:

- 1) * THESE ITEMS ARE ONLY REQUIRED WHEN MOD 2 OPTION IS USED.
- 2) THE FOLLOWING ARE REQ'D FOR MOD 2
 DELETE C108
 REPLACE C101 WITH .068M5
 REPLACE R174 WITH 100K.02 5% CC RESISTOR. MW
 ALL SOCKETS TO BE AMP DETENT LOCKING DIPLOMATE SERIES
- 3)


REV	DATE	BY	CHKD	DESCRIPTION
1	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
2	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
3	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
4	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
5	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
6	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
7	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
8	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
9	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
10	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
11	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
12	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
13	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
14	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
15	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
16	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
17	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
18	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
19	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
20	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
21	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
22	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
23	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
24	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
25	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
26	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
27	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
28	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
29	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
30	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
31	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
32	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
33	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
34	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
35	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
36	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
37	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
38	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
39	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
40	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
41	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
42	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
43	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
44	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
45	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
46	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
47	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
48	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
49	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
50	10/1/68	JAL	JAL	ISSUE FOR MATERIAL

PCB 110-01 COMPONENT LOCATION

X K C I T T S
S Y S T E M S
C O R P O R A T I O N

DATE: 10/1/68
BY: JAL
CHECKED BY: JAL
APPROVED BY: JAL


REV	DATE	BY	CHKD	DESCRIPTION
1	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
2	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
3	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
4	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
5	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
6	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
7	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
8	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
9	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
10	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
11	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
12	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
13	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
14	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
15	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
16	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
17	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
18	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
19	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
20	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
21	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
22	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
23	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
24	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
25	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
26	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
27	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
28	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
29	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
30	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
31	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
32	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
33	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
34	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
35	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
36	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
37	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
38	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
39	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
40	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
41	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
42	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
43	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
44	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
45	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
46	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
47	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
48	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
49	10/1/68	JAL	JAL	ISSUE FOR MATERIAL
50	10/1/68	JAL	JAL	ISSUE FOR MATERIAL

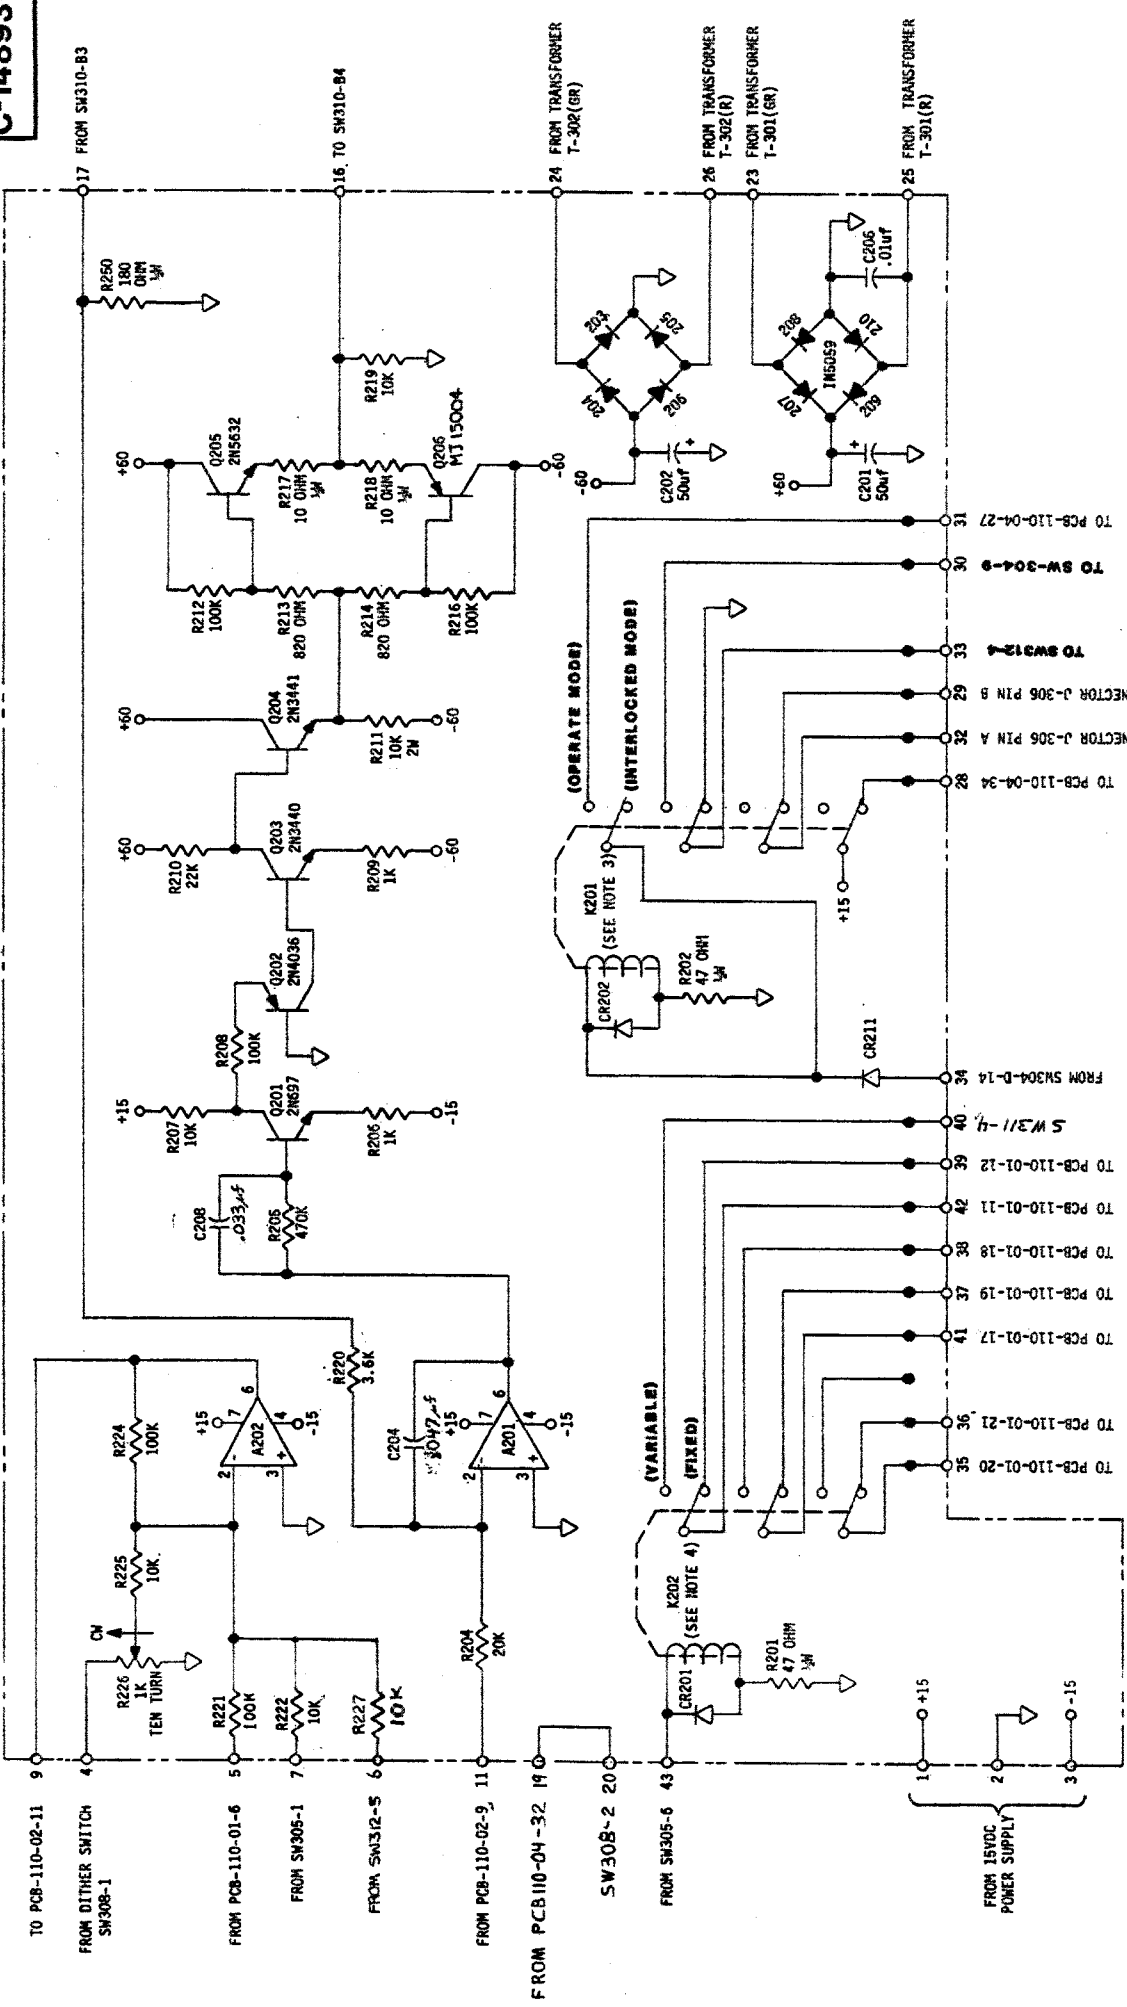

ITEM	QTY	UNITS	PART NO.	DESCRIPTION	MFR.
BILL OF MATERIAL					
THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF XCIITE SYSTEMS AND IS TENDERED SUBJECT TO THE CONDITIONS THAT THE INFORMATION IS BE RETAINED IN CONFIDENCE AND NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART AND IS NOT BE USED OR INCORPORATED IN ANY PRODUCT EXCEPT UNDER AN EXPRESS WRITTEN AGREEMENT WITH XCIITE SYSTEMS					
SCALE		LIMITS: 3 PLACE DECIMALS ±.010 UNLESS OTHERWISE SPECIFIED			
MATERIAL		HEAT TREAT			
FINAL FINISH				SCHEMATIC - PCB - 110 - 02 DRAWING LIST EFFECTIVE 5/11/80 DRAWING NUMBER C-14893	
USED ON ASSEMBLY					

- NOTES:
1. ALL RESISTORS 1/4 WATT, ±5% CARBON COMPOSITION UNLESS OTHERWISE NOTED.
 2. AMPLIFIERS A201 & A202, FAIRCHILD 741C.
 3. K201 IS DE-ENERGIZED WHEN SYSTEM IS INTERLOCKED.
 4. K202 IS ENERGIZED WHEN LOOP GAIN IS IN "VARIABLE" POSITION.
 5. OPTIONAL JUMPER REQ'D FOR CONST. CURRENT MODE OF POWER APP.
 6. REMOVE JUMPER FOR CONST. CURRENT MODE.

A-C16629
CARD EJECTOR
#5052 THERMALLOY
△ (2) PLACE

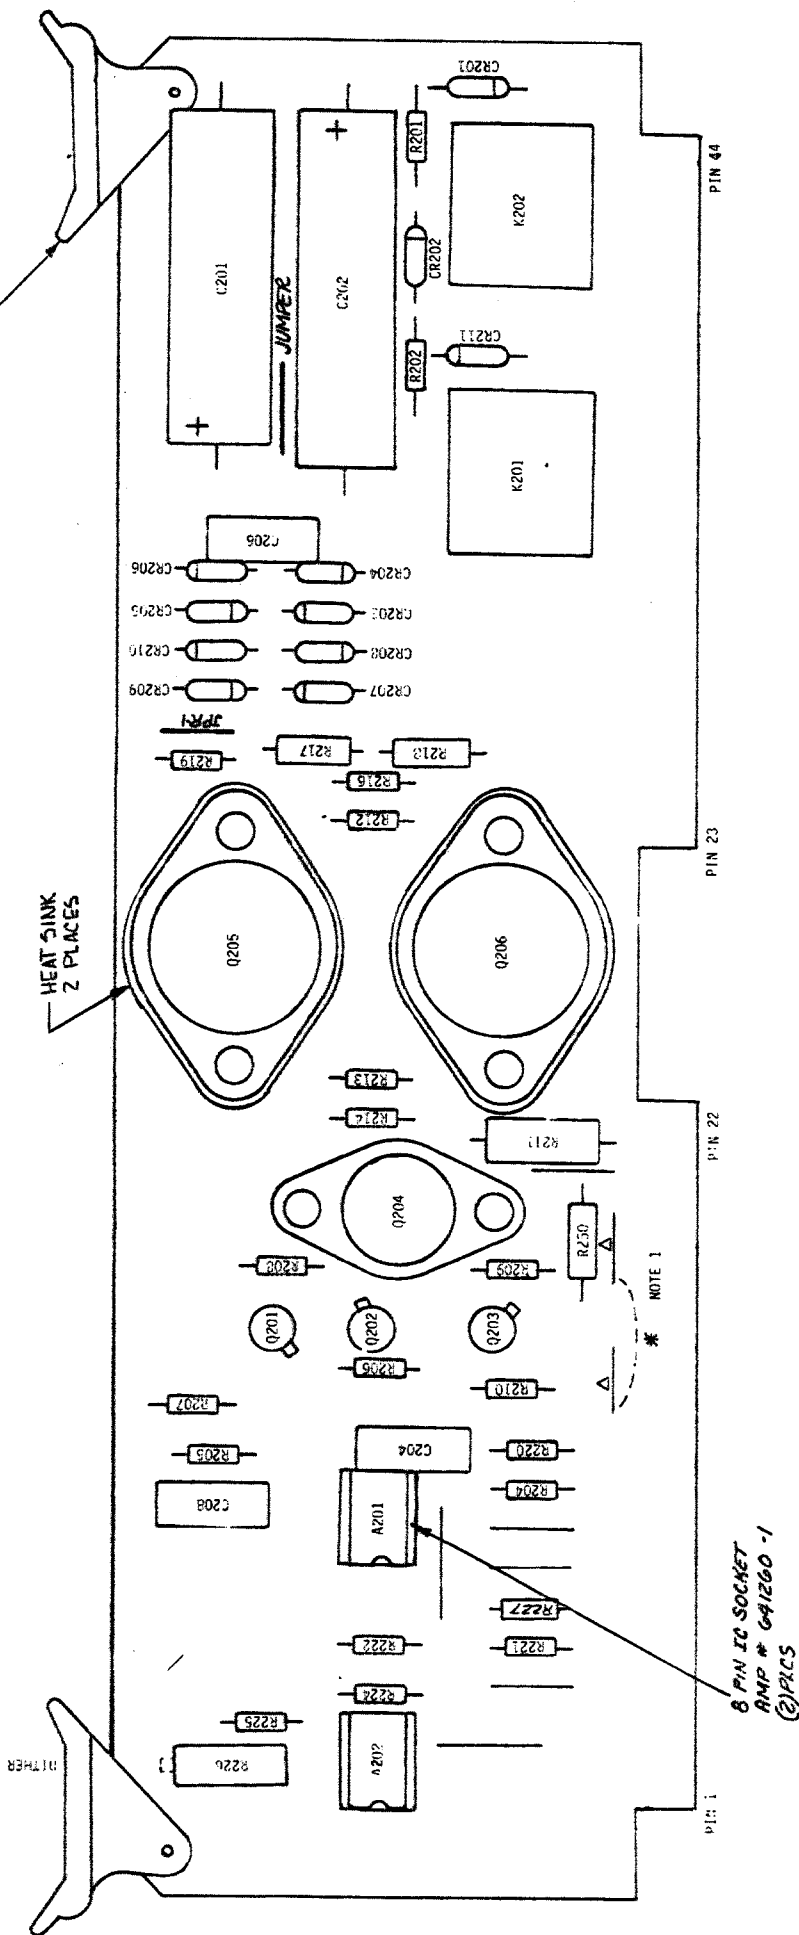

ITEM	QTY	UNITS	PART NO.	DESCRIPTION	MFR.
BILL OF MATERIAL					
THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF XRITE SYSTEMS AND IS LOANED SUBJECT TO THE UNDERSTANDING THAT IT IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS WITHOUT THE WRITTEN PERMISSION OF XRITE SYSTEMS.					
SCALE	LIMITS: 2 PLACE DECIMALS ± .010 UNLESS OTHERWISE SPECIFIED				
MATERIAL	MATERIAL - HEAT TREAT A-01106				
FINAL FINISH	A-01106				
TITLE					
ASSY - PCB - 110 - 02					
DRWN BY	A/JW	DATE	11/15/78	DRAWING LIST	DRAWING NUMBER
CHK'D BY		EFFECTIVE S/N	310	END ABOVE	C-14881-7

- NOTES:
- 2 JUMPERS REQ'D FOR VOLTAGE MODE (2 JUMPERS)
 - R250 & JUMPER REQ'D FOR CURRENT MODE (1 JUMPER)
 - STAMP ASSY NO. AND S/N ON BOARD


REV	DATE	BY	CHK BY	DATE
1	11/15/78	ADW		
2	10/18/78	ADW		
3	10/18/78	ADW		
4	10/18/78	ADW		
5	10/18/78	ADW		
6	10/18/78	ADW		

BE SURE TO INSTALL JUMPERS USING
22 AWG BARE WIRE BEFORE ASSY.

A-016820
CARD EJECTOR
5A55 THERMALLOY
(2) PLACES

DYNAMIC REFERENCE
ZERO ADJUST:
PROGRAM INPUT
ZERO ADJUST:

INSTALL TERMINALS BEFORE ASSY
QUANTITY (4)

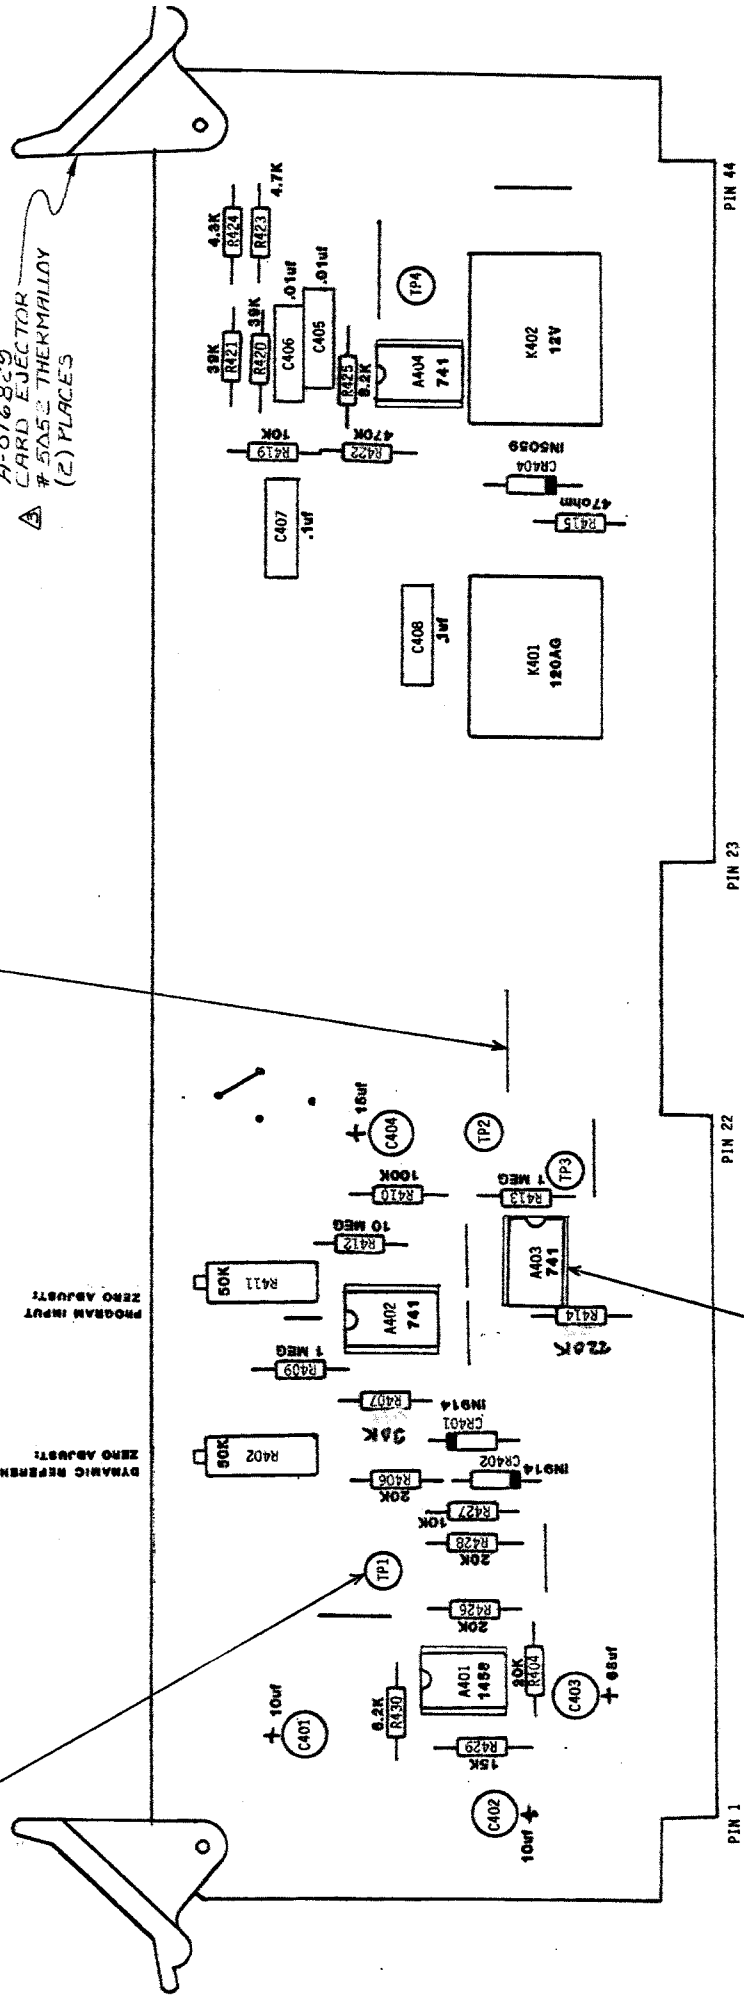

6 PIN IC SOCKET QTY.(4)
A401, A402, A403 & A404
AMP SOCKET G41260-1

ITEM	QTY	UNITS	PART NO.	DESCRIPTION	MFR.
BILL OF MATERIAL					
THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF Xcite SYSTEMS AND IS TENDERED SUBJECT TO THE CONDITIONS THAT THE INFORMATION IS NOT TO BE REPRODUCED OR COPIED IN WHOLE OR IN PART AND IS NOT TO BE USED OR INCORPORATED IN ANY PRODUCT EXCEPT UNDER THE EXPLICIT WRITTEN AGREEMENT WITH Xcite SYSTEMS					
SCALE	LIMITS: 2 PLACE DECIMALS ±.010 UNLESS OTHERWISE SPECIFIED		Xcite SYSTEMS CORPORATION		
MATERIAL	MATERIAL - HEAT TREAT B/M A-11028		TITLE ASSY - PCB-110-04		
FINAL FINISH	USED ON ASSEMBLY		DRAWING LISTS DRAWN BY: A/JW 11-12 EFFECTIVE S/N 310 AND ABOVE		
DRAWING NUMBER C-14882-1					

REV.	ECO. NO.	DATE	CHG. BY
1	02011	1/82	RB
2	02158	1-82	RB
3	02153	1-82	RB
4	06169	10/82	CRK
5	07025	10/82	P.C
6		10/82	RB/PC

NOTES:
1. STAMP ASSY NO. AND S/N ON BOARD.

8. Parts List

Xcite reserves the right to substitute parts without notice.

Component Part Number	Description
<u>Chassis</u>	
R301, 303, 307	1K, 10 Turn 5000 Series Pot
R302	50K, Trim Pot 3059J-1-503-M
R304, 311, 313	10K, Trim Pot 3059J-1-103-M
R305	Load Cell Dependent Phone Jack
R306	500 Ohm, Trim Pot 3059J-1-501-M
R308, 309, 310	47K, 1/2W, 5%
R312	110K, 1/4W, 5%
R314	100 Ohms, 1/4W, 5%
C301	50 MFD, 50V 7121L (39D)
T301, 302	Transformer, F-90X
T303	Supply, HAA-15-8
F301	Fuse, AGC 3, 3 amp
SW301	5A DPDT, 520-101G-51-A1H
SW302, 303	5A SPUT, 518-1016-51-A1H
SW304	Rotary 4P3T, 44A60-04-1-3N
SW305, 309, 311	4PDT Locking Toggle, MTL-406N
SW306, 312	DPDT Locking Toggle, MTL-206N
SW307, 308	SPDT Locking Toggle, MTL-106D
SW310	Rotary 5PDT, 71B30, 01-5-02N
M101, 102	100 Microamp, 4.5", 7045-3602-0000 API
J301, 302, 303	BNC Connector, UG-1094A/U
J304	Phone Jack, 12-B
J305	MS3102A-18-1S
J306	MS3102A-18-4S
J307	MS3102A-18-12P
J311	MS3102A-18-1P
KN301	Knob, DS70-2BD-2 (Rear)
KN302	Knob, DS70-3-2 (Front)

Component Part Number	Description
KN303, 304, 305	Dial, Turns Counting, 2606
L301	515-0012, Lamp, 6.5. Lamp Holder
L302	RA877 Crimp Lug
<u>PCB 110-01</u>	
R101, 102, 112, 176	10K, 1/4W, 5%
R103	47K, 1/4W, 5%
R104, 131, 135, 137, 138, 142, 151, 172	50K, Trim Pot, 784 Series
R105	30K, 1/4W, 5%
R106, 121, 122, 123, 126, 140, 141, 144, 145, 146, 147, 173, 177	100K, 1/4W, 5%
R107	1K, Trim Pot, 784 Series
R108	330 Ohm, 1/4W, 5%
R109	50K, Trim Pot
R110, 115, 116	Not used
R111, 134	1K, 1/4W, 5%
R113	470K, 1/4W, 5%
R114, 132	51K, 1/4W, 5%
R117	16K, 1/4W, 5%
R118	62K, 1/4W, 5%
R119, 120, 128, 129	20K, Trim Pot, 784 Series
R124, 133, 166	10K, Trim Pot, 784 Series
R125	24K, 1/4W, 5%
R127, 180	27K, 1/4W, 5%
R130	2.2M, 1/4W, 5%
R136, 143, 171, 175, 178	1M, 1/4W, 5%
R139	39K, 1/4W, 5%
*R148	240K, 1/4W, 5%
*R149	100K, 1/4W, 1%
*R150	510 Ohm, 1/4W, 5%
R152, 170	200 Ohm, 1/4W, 5%
R153	5K, Trim Pot, 784 Series
*R154, 182	10K, 1/4W, 5%
*R155, *158, *159, 160, 179	200K, 1/4W, 5%
R156, 157	20K, 1/4W, 5%
R161	1M, 1/4W, 1%
R162, 163	499 Ohms, 1/4W, 1%
R164, 165	100 Ohms, 1/4W, 5%
R167	100K, Trim Pot, 784 Series

Component Part Number	Description
R168	953K, 1/4W, 1%
R169	2.2K, 1/4W, 5%
R174	1M, 1/4W, 5%, Mod 4, 100K, 1/4W, 5%, Mod 2
*R181	30K, 1/4W, 5%
*R182	10K, 1/4W, 5%
R183	22K, 1/4W, 5%
R184	100K, 1/4W, 5%
R185	147K, 1/4W, 5%
C101	.68 MF Mod 4, .068 MF Mod 2
C102	.001 MF, 160-.015-20-400-C
C103, 110	Not Used
C104, 111, 112, 113	10 MF, 20V Dipped Tant.
C105	15 MF, 20V Dipped Tant.
C106	4.7 MF, 20V Dipped Tant.
C107, 114	1 MF, 20V Dipped Tant.
C108	4.7 MF, 100V 160-4.7-20-100-H (Mod 4 option only) (Not used for Mod 2)
C109	.68 MF, 100V 160-.68-20-100-D
C115	.0022 MF, 160-.0022-400-C
CR101, 102, 107	Not Used
CR103, *105, *106, *108	IN914
CR104	IN4737A
CR109	
U101	MC1494L
U102	AD536AJD
*U103	MC14013B
VR101	LM317LZ
A101, 105, *106	MC1458CP1
A102, 108	MC1741CP
A103, 104, 107	LF13741N
A109	LM308AN
K101	SPST, 360-12-1A
*Q101	MPSA13

Component Part Number**Description****PCB 110-02**

R201, 202	47 Ohm, 1/2W, 5%
R203	Not Used
R204	20K, 1/4W, 5%
R205	470K, 1/4W, 5%
R206, 209	1K, 1/4W, 5%
R207, 219, 222, 225	10K, 1/4W, 5%
R208, 212, 216, 221, 224	100K, 1/4W, 5%
R210	220K, 1/4W, 5%
R211	10K, 2W, 5%
R213, 214	820 Ohm, 1/4W, 5%
R215, 223	Not Used
R217, 218	10 Ohm, 1/2W, 5%
R220	3.6K, 1/4W, 5%
R226	1K, Trim Pot, 784 Series
R227	10K, 1/4W, 5%
R250	Valve Dependent, 1/4W, 5%
C201, 202	50 MF, 75V TVA-1343
C203, 205, 207	Not Used
C204	.047 MF, 160-.015-400-C
C206	.01 MF, 160-.01-630-C
C208	.033 MF, 160-.033-250-C
CR201 thru 211	IN5059
A201, 202	LF356N
K201, 202	Relay, 4PDT 1315-4C-12VDC
Q201	2N697
Q202	2N4036
Q203	2N3440
Q204	2N3441
Q205	2N5632
Q206	2N6229

Component Part Number**Description****PCB 110-04**

R401, 403, 405, 408, 416, 417, 418	Not Used
R402, 411	50K, Trim Pot, 784 Series
R404, 406, 426, 428	20K, 1/4W, 5%
R407	30K, 1/4W, 5%
R409, 413	1M, 1/4W, 5%
R410	100K, 1/4W, 5%
R412	10M, 1/4W, 5%
R414	140K, 1/4W, 5%
R415	47 Ohm, 1/4W, 5%
R419, 427	10K, 1/4w, 5%
R420, 421	39K, 1/4W, 5%
R422	470K, 1/4W, 5%
R423	4.7K, 1/4W, 5%
R424	4.3K, 1/4W, 5%
R425	8.2K, 1/4W, 5%
R429	15K, 1/4W, 5%
R430	6.2K, 1/4W, 5%
C401, 402	10 MF, 20V, Dipped Tant.
C403	68 MF, 20V, Dipped Tant.
C404	15 MF, 20V, Dipped Tant.
C405, 406	.01 MF, 160-.01-10-630-C
C407, 408	.1 MF, 160-.1-10-100-C
CR401, 402	N914
CR403	Not Used
CR404	IN5059
K401	Relay, 1310-4C-210AG
K402	Relay, 1315-4C-T2VDC
A401	MC1458CP
A402, 403, 404	LF356 or LM741

9. Calibration

The Xcite Master Controller is calibrated at the factory. Recalibration is required only if certain active components are replaced, or if a potentiometer is replaced.


Calibration need not be done in the order listed, nor are all adjustments required if one circuit is to be re-calibrated. Individual calibration may be performed as needed.

- Before beginning calibration, disconnect the head cable from J305.
- With power off, zero the static and dynamic meters, using the adjustment screw beneath each meter face.
- With power on but the pump off, check the following adjustments and readjust as described, if necessary. Place the following switches and controls in the positions given:

DITHER	OFF
STATIC SET POINT	0
DYNAMIC SET POINT	0
MODE CONTROL	STATIC
STATIC CONTROLLED VARIABLE	EXTERNAL
DYNAMIC CONTROLLED VARIABLE	EXTERNAL
TENSION/ COMPRESSION	COMPRESSION/ CCW

9.1. Equipment Needed


- 9.1.1. Stiff Test Structure (capable of w/standing the full rated force of the Exciter Head)
- 9.1.2. A 4 ½ digit Digital Multimeter
- 9.1.3. Oscilloscope
- 9.1.4. Signal Generator (audio frequency range)
- 9.1.5. FFT Spectrum Analyzer (if curves are to be run)
- 9.1.6. Trim pot adjustment tool or a small screwdriver

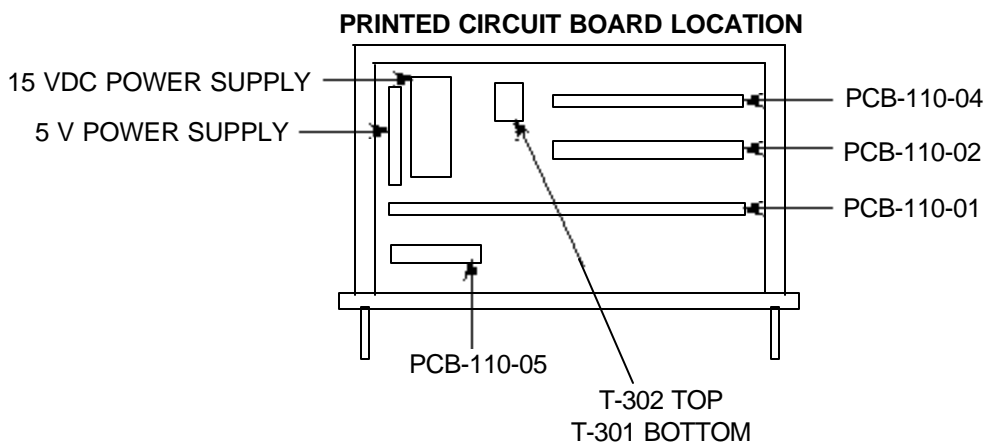

9.2. Master Controller

9.2.1. Meter Zero Adjustments


- Turn the Master Controller off.
- The Static and Dynamic meters should be resting precisely at zero.

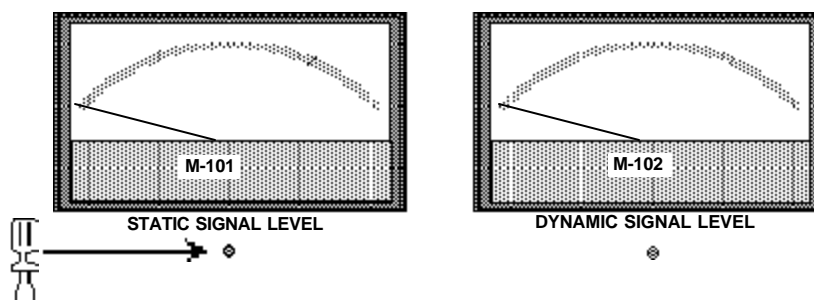

- If necessary, adjust the meters to zero using the small holes centered under each front panel meter.
- Turn the Master Controller on.

9.2.2. +/-15 Volt Supply Check

- Check for +15.00 Volts at 110-01-1 and -15.00 Volts at 110-01-3.
- If necessary adjust the supplies to within +/-10mV using the trim pots located on the power supply (mounted to the left rear of the chassis).

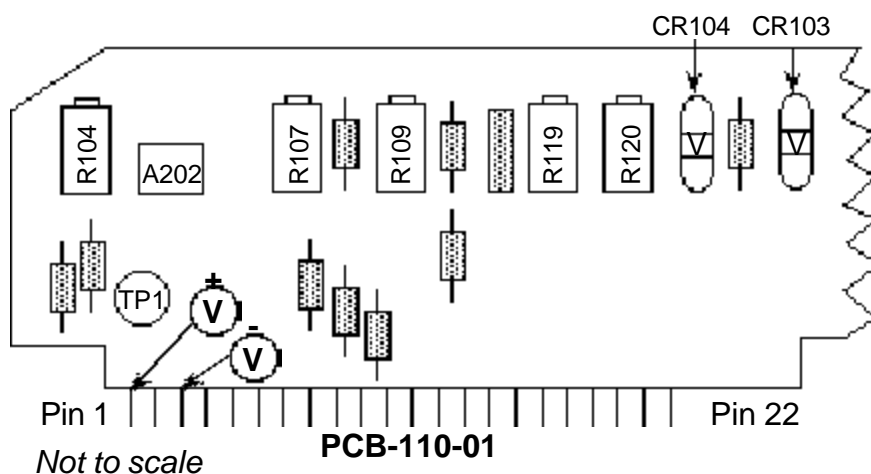

9.2.3. +/-60 Volt Supply Verification

Check for roughly +/-60 Volts at the large capacitors on the upper right corner of the 110-02 board. *No adjustment is possible.*


9.2.4. Load Cell Excitation Voltage Verification

Check for 12.0V +/- .3V at 110-01-44


9.2.5. Master Controller Board 110-04 Calibration Procedure

Initial Setup

Apply a shorted BNC cable or a 50Ω BNC terminator to the Program Input (J308).

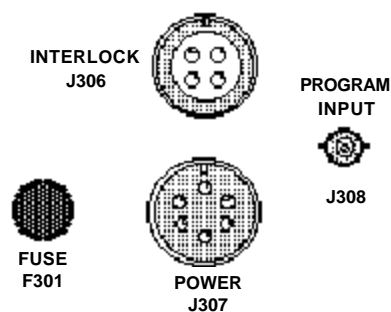


Dynamic Reference AC to DC Level Verification

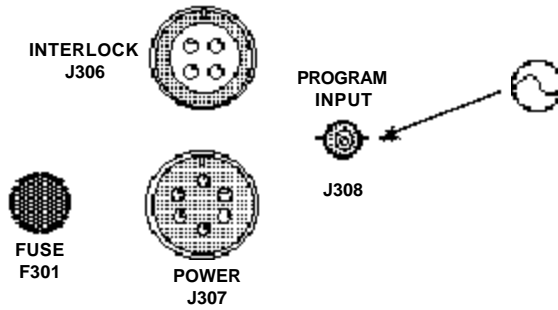

- Apply 1.000V rms to the Program Input (J308).
- Check for roughly -10.8V DC at TP2.
- Remove signal from the Program Input (J308).

Dither Oscillator Verification


Check for a 26V peak to peak, 360 Hz Triangle wave (+/-20 Hz) at TP4.

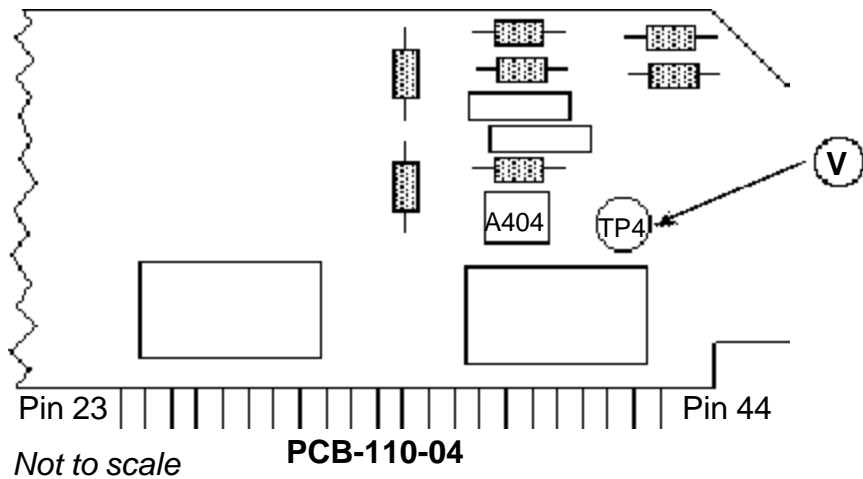

9.2.6. Master Controller Board 110-02 Calibration Procedure

Dither Level Calibration

- Set *DITHER* switch (SW308) to *ON*.
- Adjust R226 for 0.500V rms at 110-02-9.
- Set *DITHER* switch to *OFF*.

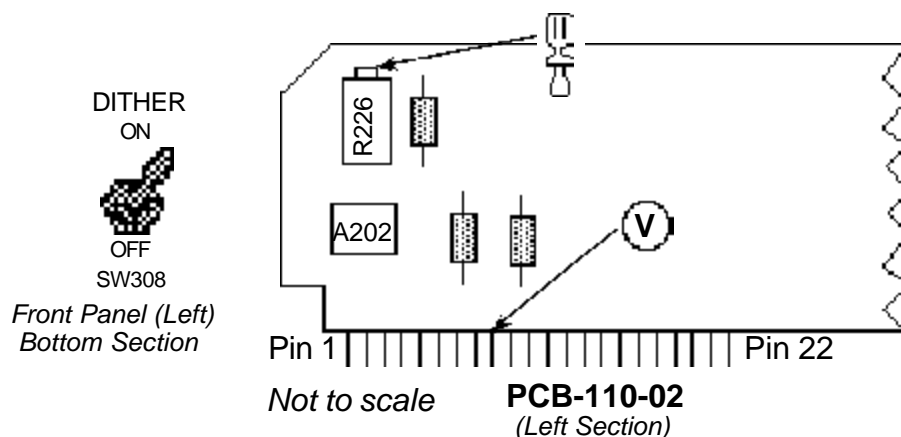


9.2.7. Master Controller Board 110-01 Calibration Procedure

Set front and rear panel switches and adjustments as follows:

Dither	(SW308)	Off
Load Cell Calibrate/ Operate	(SW307)	Operate
Frequency	(SW309)	Low
Power Amp Input	(SW312)	Internal
Static Preload	(SW310)	Compression
Static Controlled Variable	(SW311)	External
Dynamic Controlled Variable	(SW306)	External
Static Gain	(SW305)	Fixed
Standby Level	(R313)	Full CCW
Static Set Point Level	(R301)	0.0
Dynamic Set Point Level	(R303)	0.0
Static Gain Level	(R307)	5.0


External Static and Dynamic Variable Input Calibration

- Apply a 1.000V rms, 100 Hz sine wave to the External Static Variable Input (J309).
- Adjust External Static Cal (R311) for .500V rms at 110-01-28 (WHT/ RED wire).
- Apply a 1.000V rms, 100 Hz sine wave to the External Dynamic Variable Input (J302).
- Adjust External Dynamic Cal (R304) for .500V rms at 110-01-25 (WHT/ BLK wire).
- Remove signal

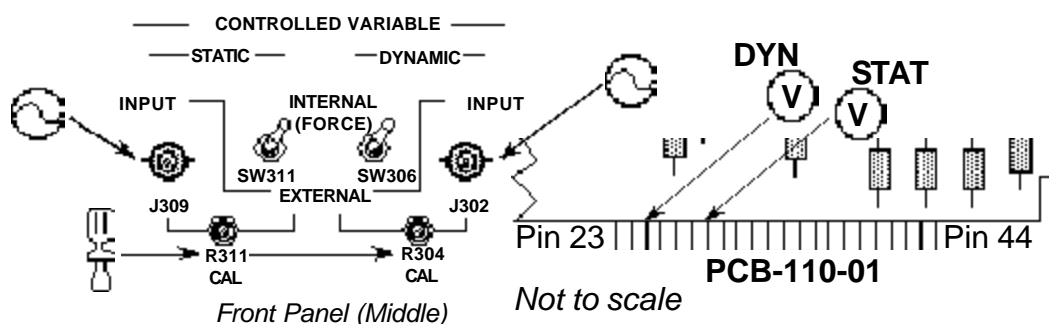

Load Cell Amplifier Common Mode Null Adjustment

- Apply a 1.000V rms, 100 Hz sine wave to 110-01-39 (BLK wire) and 110-01-41(SILVER wire).
- Adjust R167 for minimum 100 Hz signal at TP9.
- Remove signal from 110-01-39 and 110-01-41.

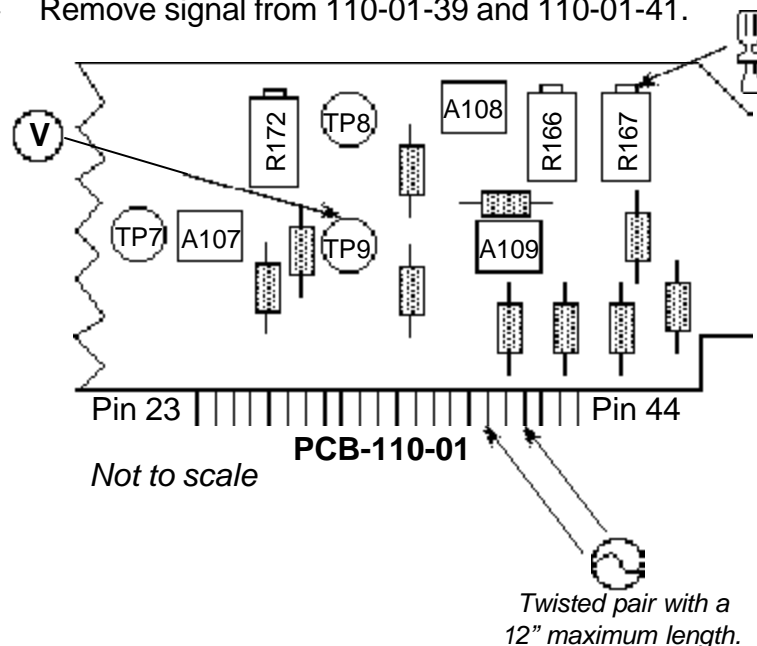


Meter Amplifier Zero Offset Adjustments

With no signals applied, make the following settings:


Static Set Point Level	(R301)	0.0
Dynamic Set Point Level	(R303)	0.0
Static Controlled Variable	(SW311)	External
Dynamic Controlled Variable	(SW306)	External

- Adjust (Static Offset) R142 for 0mV at TP6.
- Adjust (Dynamic Offset) R131 for 0mV at TP3.

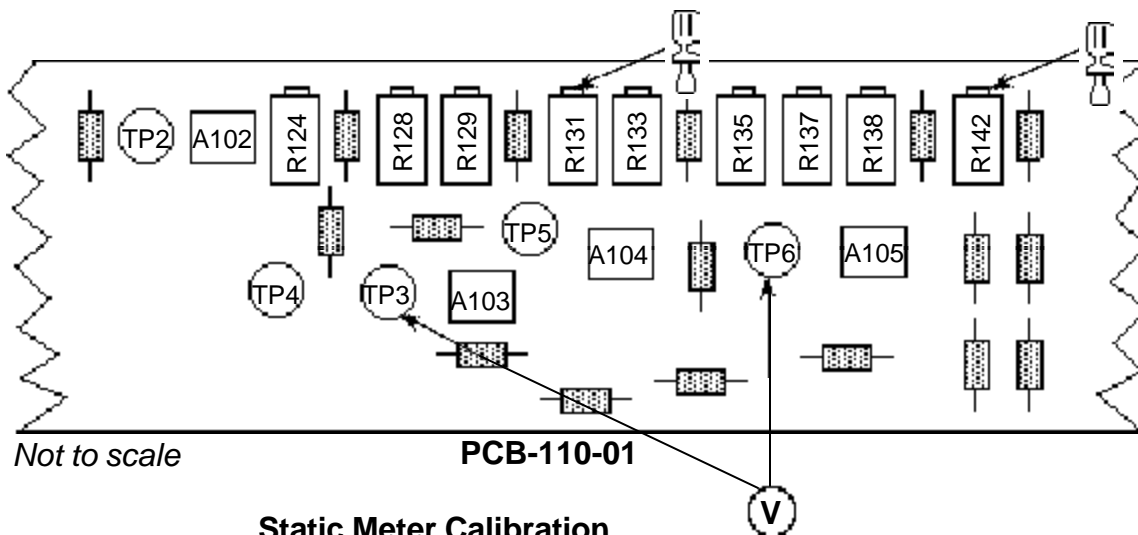

Static Meter Calibration

- Apply 5.000V DC at 110-01-28 (WHT/ RED wire).
- Adjust R138 to set Static Meter deflection at 100%.
- Remove signal from 110-01-28.

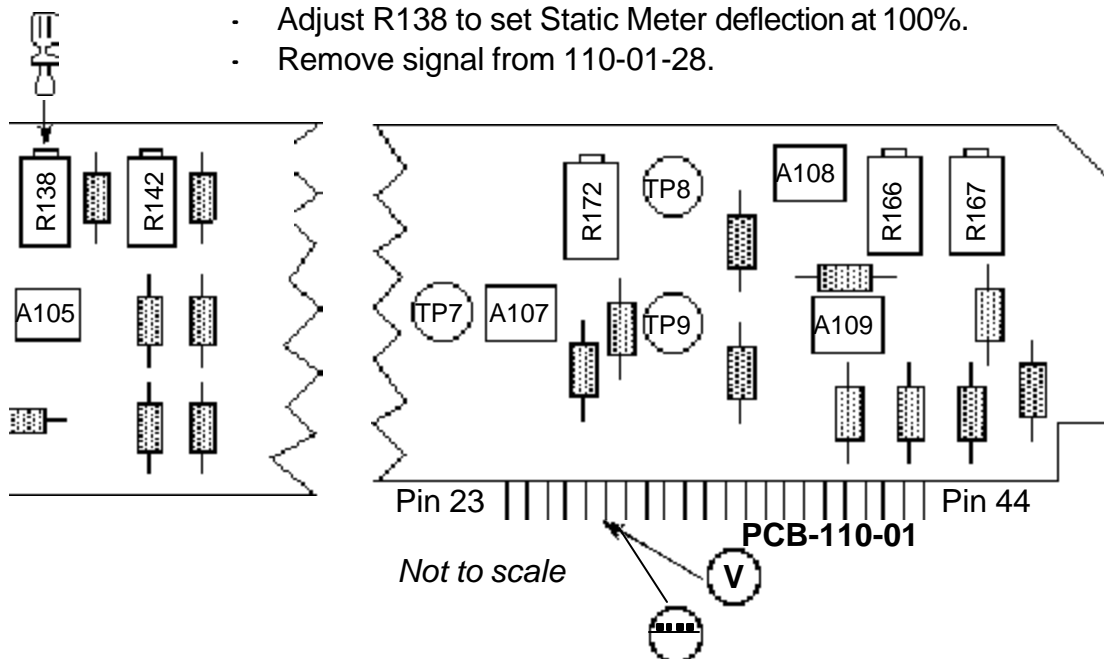

Dynamic Meter Calibration

Pre RMS Converter Check



- Set the Dynamic Control Variable (SW306) to External.
- Apply a 100 Hz sine wave to the Dynamic Variable Input (J302).
- Adjust Signal level for 1.000V rms at 110-01-25 (WHT/ BLK wire).
- Check for an inverted 1.0V rms +/-5% signal at TP3.

RMS Converter Check

Check for 1.00V DC at TP4.

Dynamic Meter Calibration Adjustment


- Adjust the signal level for 1.77V rms at 110-01-25 (WHT/ BLK wire).
- Adjust R129 for 50% full scale deflection of Dynamic Meter.
- Remove signal from Dynamic Variable Input (J302).

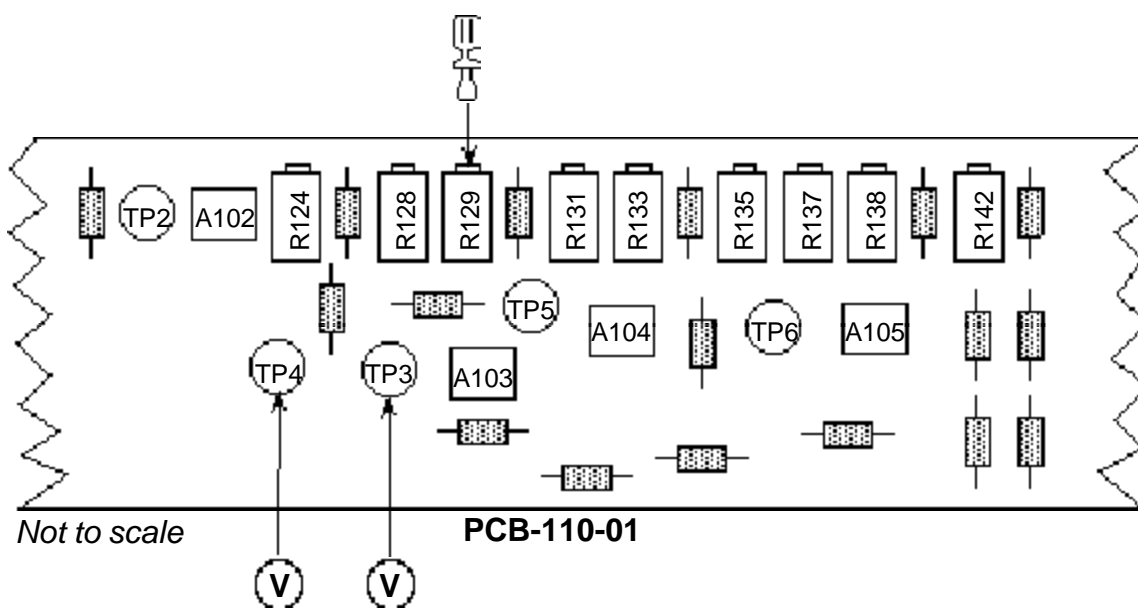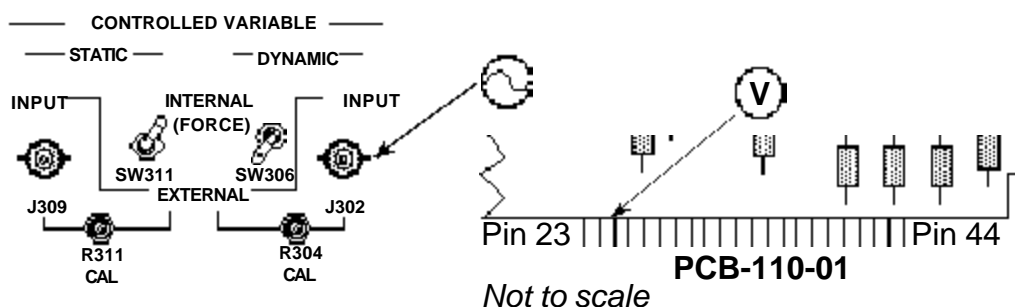

Dynamic Multiplier Calibration


Integrator Bias Calibration

Adjust R124 for -10mV DC at TP2.

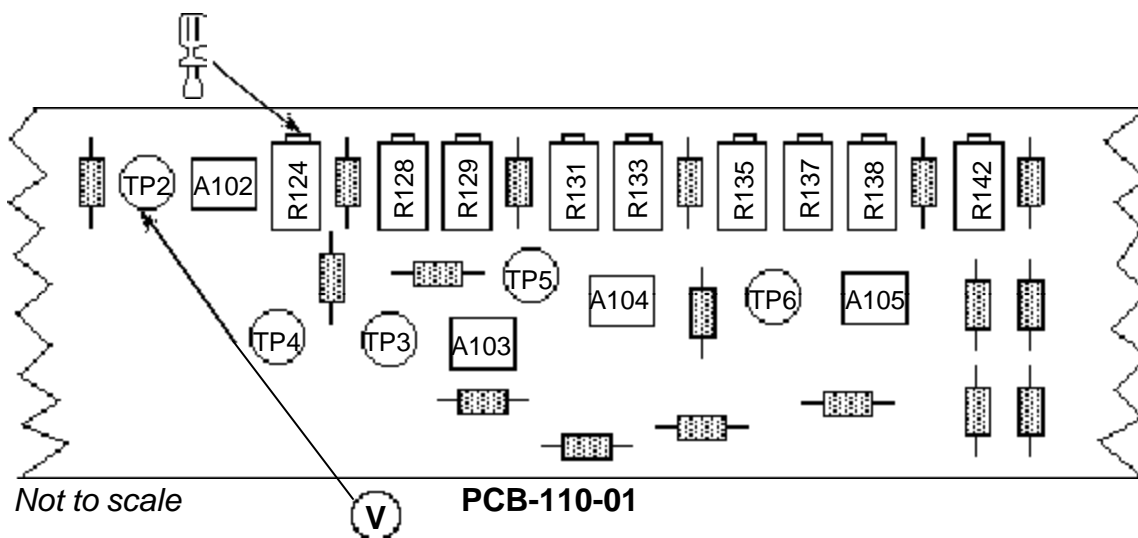


P-Clip Adjustment

Adjust R109 fully clockwise (to Maximum).

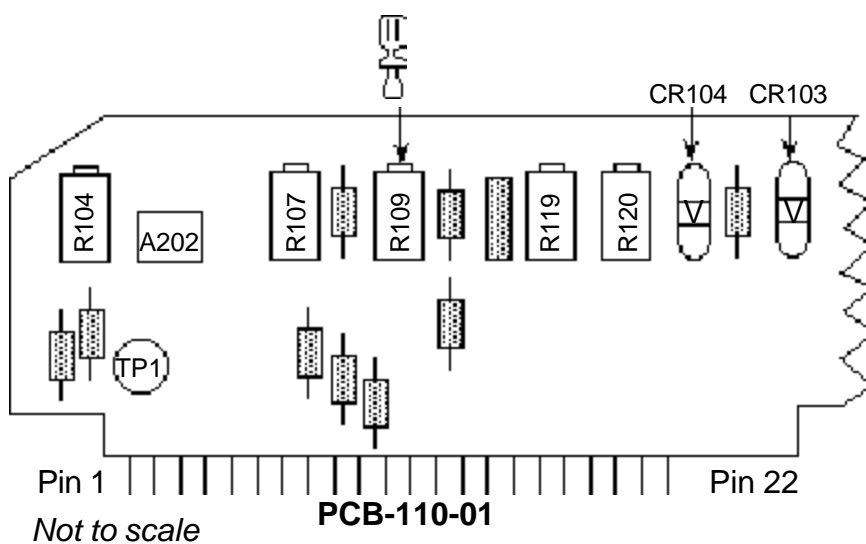


Initial Multiplier Offset Adjustment

Adjust R104 for 0mV DC +/-100mV at TP1.

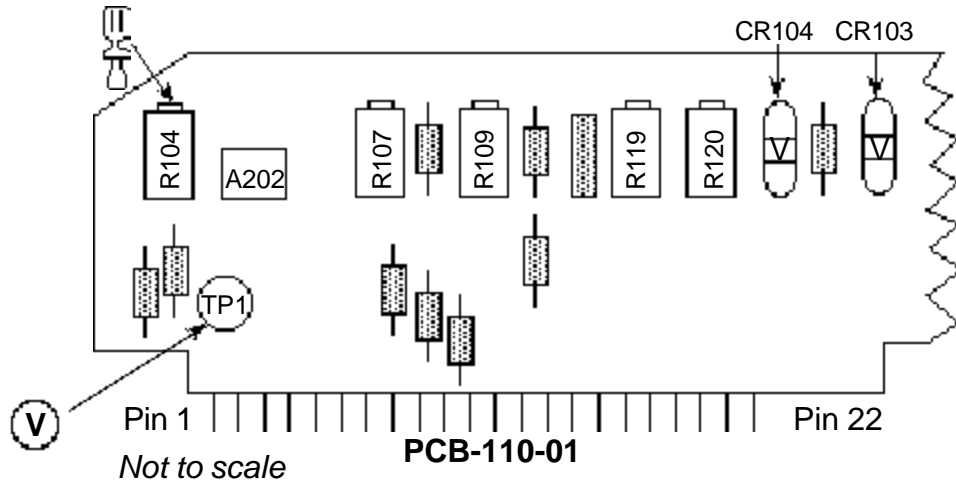


Multiplier X Input Null

- Apply a 1.0V rms, 120 Hz sine wave to the Cathode side of CR104.
- Adjust R119 for minimum 120 Hz signal at TP1.

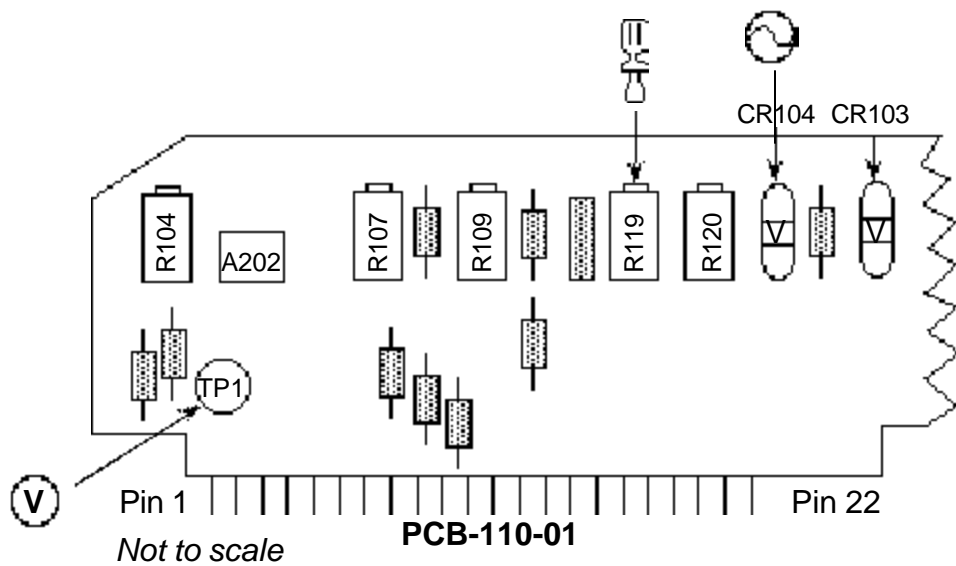

Multiplier Y Input Null


- Remove the signal from CR104.
- Apply a 1.0V rms, 120 Hz sine wave to the Program Input (J308).
- Adjust R120 for minimum 120 Hz signal at TP1.

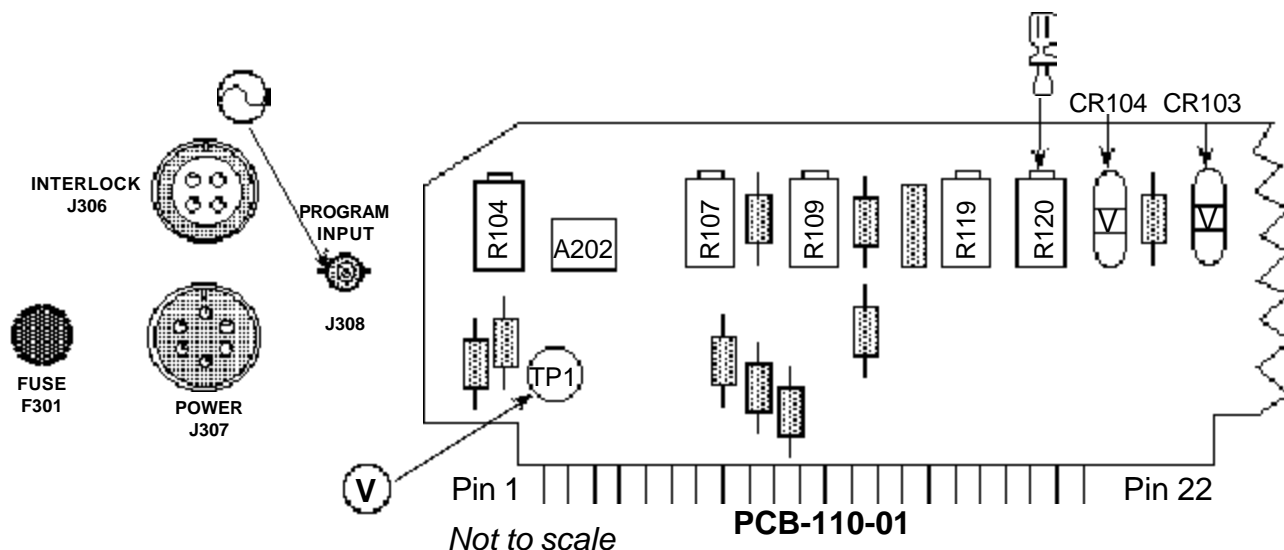

NOTE: Steps 2.4.7.4. and 2.4.7.5. may be slightly interactive. Repeat both adjustments until both inputs are nulled.

Final Multiplier Offset Adjustment

- Remove signal generator.
- Adjust R104 for 0mV +/-10mV at TP1.

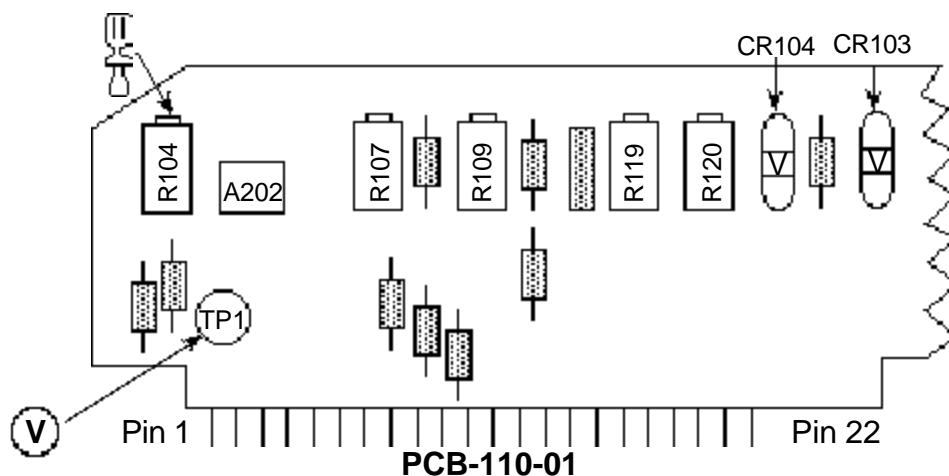

9.3. Exciter Head Calibration Procedure


Set front and rear panel switches and adjustments as follows:

Dither	(SW308)	Off
Load Cell Calibrate/ Operate	(SW307)	Operate
Frequency	(SW309)	Low
Power Amp Input	(SW312)	Internal
Static Preload	(SW310)	Compression
Static Controlled Variable	(SW311)	Internal
Dynamic Controlled Variable	(SW306)	Internal
Static Gain	(SW305)	Variable
Standby Level	(R313)	Full CCW
Static Set Point Level	(R301)	8.0
Dynamic Set Point Level	(R303)	5.0
Static Gain Level	(R307)	5.0

9.3.1. Load Cell Amplifier Calibration

Initial Setup


- Connect P305 end of the Controller Cable to J305 (Rear Panel).
- Connect the 4-pin cable to the load cell.
- Insert the Cal Plug into J304.

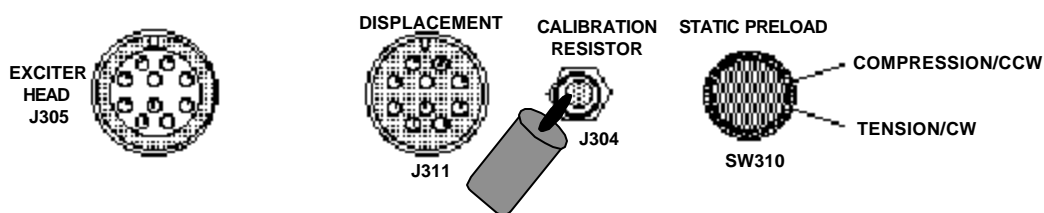

NOTE: The following two adjustments are very interactive; it will be necessary to repeat both adjustments until an acceptable balance is achieved.


Adjust Load Cell Zero Calibration

- Set the Load Cell Operate/ Calibrate Switch (SW307) to *OPERATE*.
- Adjust the Load Cell Zero (R302) for 0mV at TP8 or *LOAD CELL* outputs on Front or Rear Panel (J301 or J303).

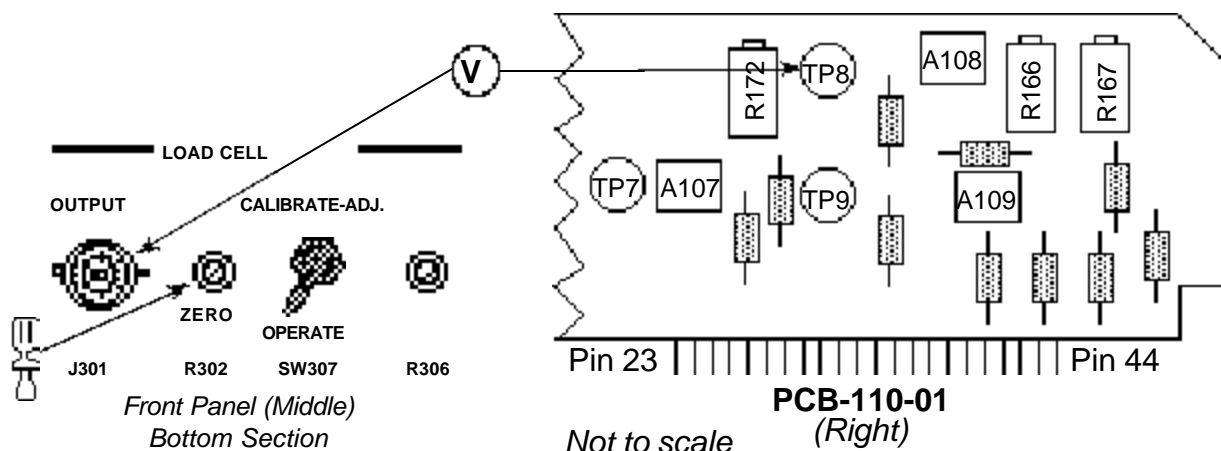


Load Cell Meter Calibration

- Set Load Cell Operate/ Calibrate Switch (SW307) to *CALIBRATE*.
- Adjust the Load Cell Calibration (R306) until the Static Meter reads the Force value (expressed in lbs or Kg) that is supplied on the Load Cell Cal Plug.

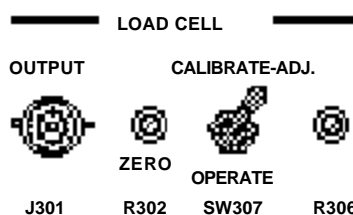

- Repeat Load Cell Zero and Load Cell Meter Calibration until calibration and zero balance is achieved.
- When finished leave the Load Cell Operate/ Calibrate Switch in the *OPERATE* position.

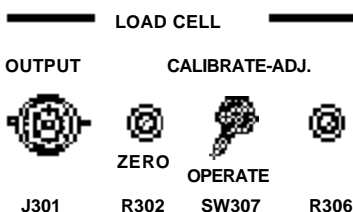

Load Cell Amplifier Scaling


Adjust R166 for Load Cell Calibration voltage at TP8 or *LOAD CELL OUT* using the following formula to determine values:

$$[\text{Calibration Force (on Cal Plug)}/\text{Sens (on Cal Plug)}]$$

Examples:

$$[357\text{lbs per } 300\Omega / 250\text{lbs per Volt}] \\ = 1.428 \text{ Volts per } 300 \text{ K}\Omega$$

$$\frac{2558 \text{ Kg}}{1000 \text{ Kg/V}} = 2.558\text{V}$$

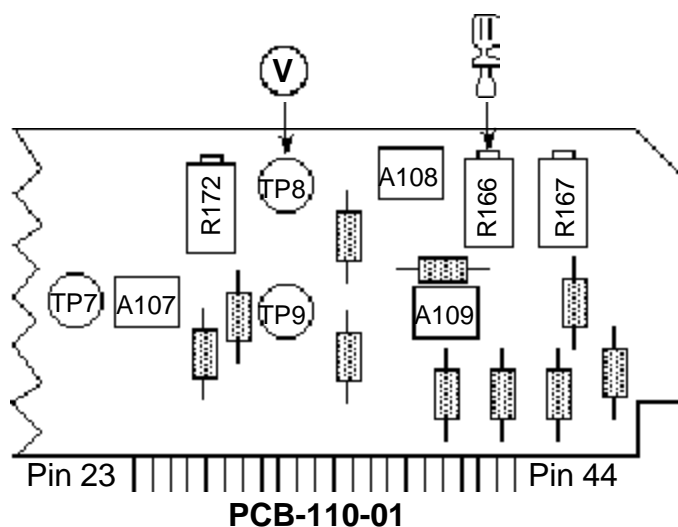


Not to scale

9.3.2. Static Loop Gain Calibration


Set the front and rear panel switches and adjustments as follows:

Excitation Mode Switch	(SW304)	Standby
Load Cell Calibrate/ Operate	(SW307)	Operate
Frequency	(SW309)	Low
Static Preload	(SW310)	Compression
Static Controlled Variable	(SW311)	Internal
Dynamic Controlled Variable	(SW306)	Internal
Static Gain	(SW305)	Variable
Static Set Point Level	(R301)	8.0
Dynamic Set Point Level	(R303)	5.0
Static Gain Level	(R307)	5.0


- Fixture the exciter head for compression into a rigid structure.
- Connect J305, J311, J309 (with BNC Pigtail to static variable input).
- Connect cables to the exciter head.
- Apply a 1.00V peak-peak, 5 Hz square wave to the Program Input (J308).

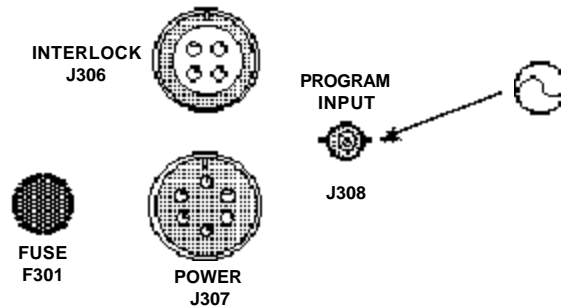

- Start the Hydraulic Supply.
- Set the Excitation Mode Switch (SW304) at *STATIC + DYNAMIC*.
- Adjust Dynamic Setpoint for 1 Volt Plateau to Plateau then adjust (R133) for 20% overshoot (1.2 volts Peak to Peak - as illustrated below). Measure at Load Cell output BNC on Front Panel.

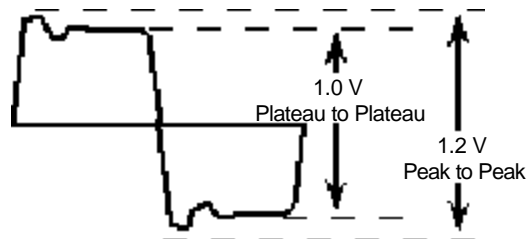

20% overshoot Square wave response for optimum Static Gain Setting.

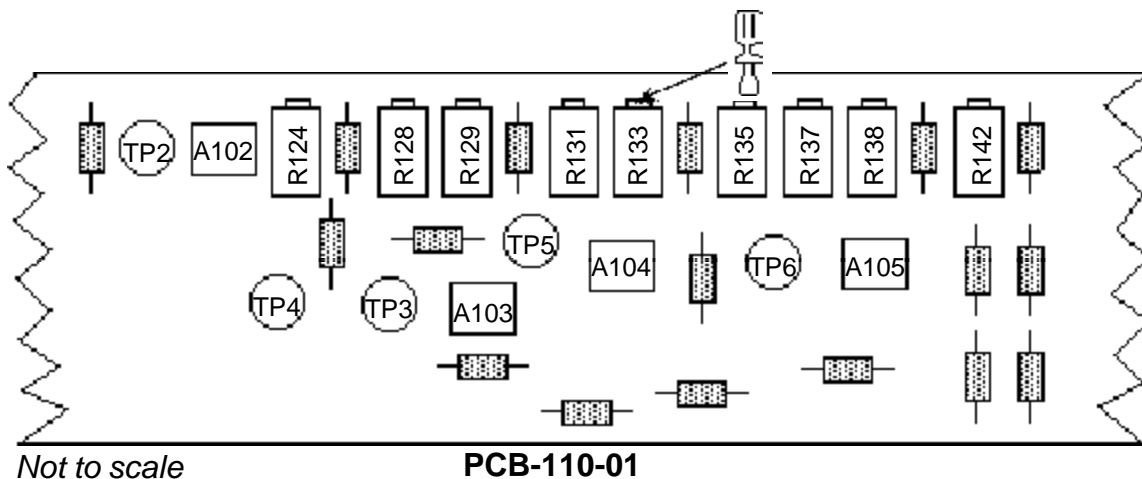

Not to scale


PCB-110-01

9.3.3. Static Set Point Level Calibration

Set front and rear panel switches and adjustments as follows:

Excitation Mode Switch	(SW304)	Static
Static Gain	(SW305)	Fixed
Static Gain Level	(R307)	5.0
Static Set Point Level	(R301)	5.0

- Adjust R107 (Static Cal) for a 50% Static Meter Reading.

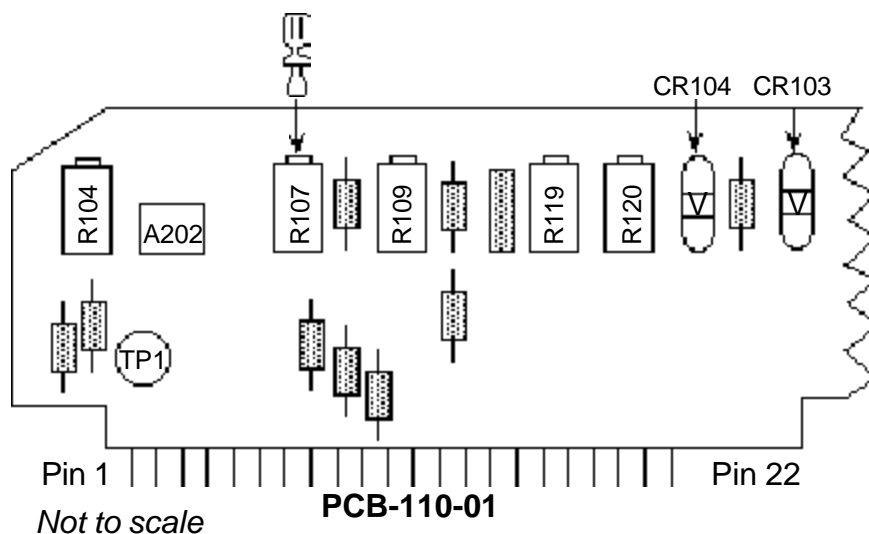


9.3.4. High Frequency Dynamic Level Calibration

Set front and rear panel switches and adjustments as follows:

Load Cell Calibrate/ Operate	(SW307)	Operate
Frequency	(SW309)	High
Static Gain	(SW305)	Fixed
Static Set Point Level	(R301)	8.0
Dynamic Set Point Level	(R303)	5.0

- Apply a 1.000V rms, 60 Hz sine wave to the Program Input (J308).
- Set the Excitation Mode Switch (SW304) to the *STATIC + DYNAMIC* position.
- Adjust R128 for a 50% Dynamic Meter reading (1.77V rms at 110-01-25).

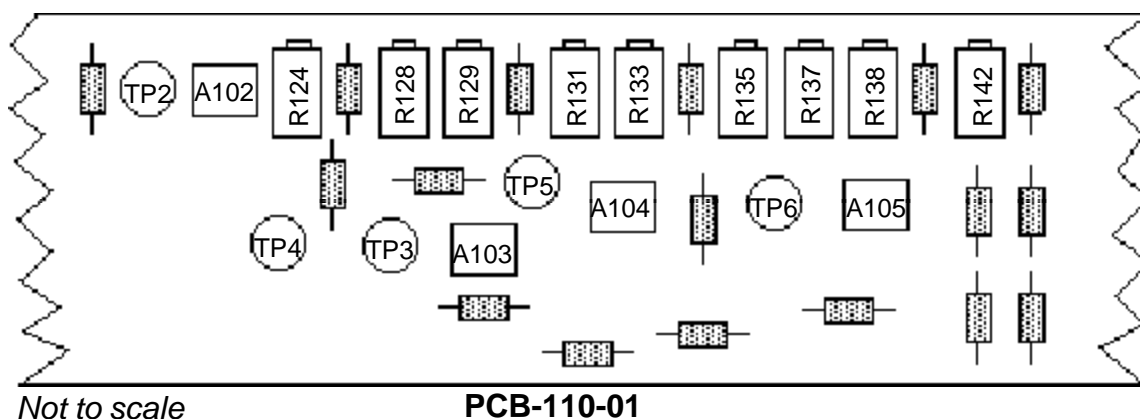



9.3.5. Low Frequency Dynamic Calibration

Set front and rear panel switches and adjustments as follows:

Load Cell Calibrate/ Operate	(SW307)	Operate
Frequency	(SW309)	Low
Static Gain	(SW305)	Fixed
Static Set Point Level	(R301)	8.0
Dynamic Set Point Level	(R303)	5.0

- Apply a 1.000V rms, 10 Hz sine wave to the Program Input (J308).
- Set the Excitation Mode Switch (SW304) to the *STATIC + DYNAMIC* position.
- Adjust R137 for a 50% Dynamic Meter reading (1.77V rms at 110-01-25).

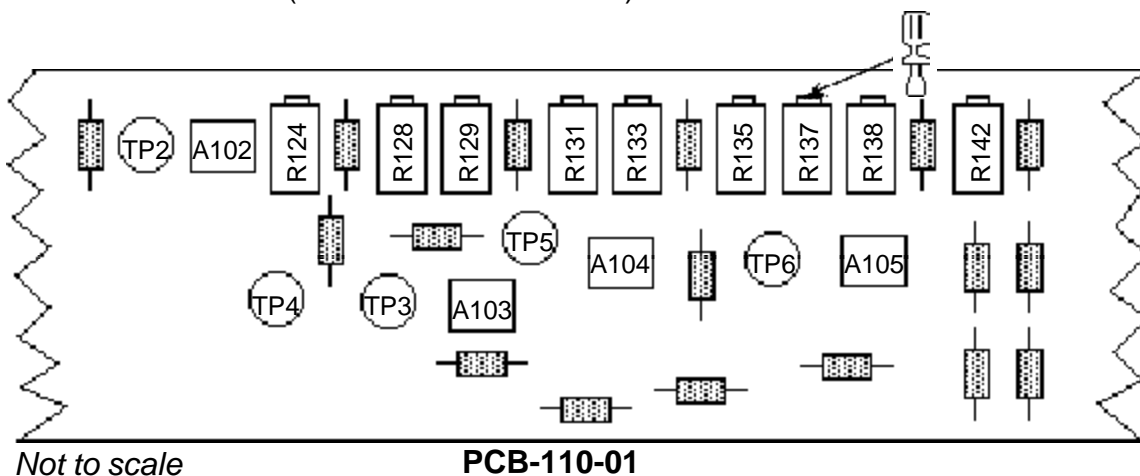

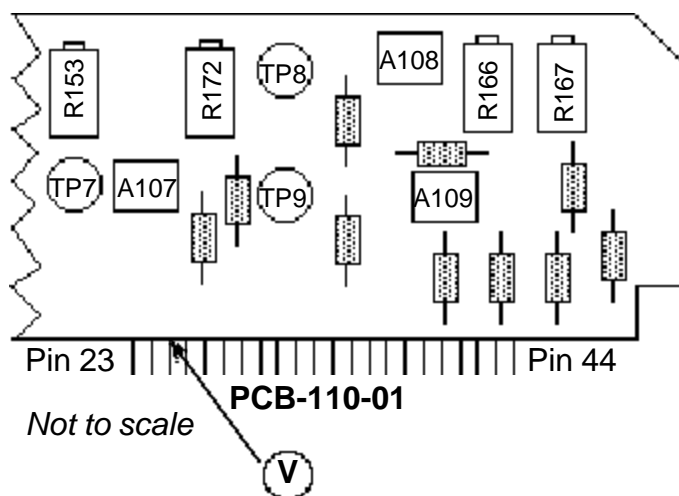

9.4. Displacement Calibration Procedure

Note: Fixture Exciter head for full Stroke.

9.4.1. LVDT Symmetry Verification and Adjustment

Set front and rear panel switches and adjustments as follows:

Excitation Mode	(SW304)	Standby/ Reset
Load Cell Calibrate/ Operate	(SW307)	Operate
Frequency	(SW309)	Low
Static Preload	(SW310)	Compression
Static Controlled Variable (Disconnect Displacement		
Feedback Signal for this set up)	(SW311)	External
Static Gain	(SW305)	Variable
Static Set Point Level	(R301)	10.0
Static Gain Level	(R307)	5.0

- Set the Static Preload Switch (SW310) to *TENSION* (CW).
The head should fully extend.
- Set the Static Preload Switch to *COMPRESSION* (CCW).
The head should fully retract.
- While monitoring 110-01-38 (WHT/ YEL wire) with a DC volt meter, you should observe a **NEGATIVE** voltage when the head is fully extended and a **POSITIVE** voltage when the head is retracted. These two voltages should be equal and opposite in magnitude.

NOTE: The importance is in the equality of the numerical values not in their values. (i.e. +3 and -3 are just as good as +6 and -6)

- If the balance is off by more than 10%, the LVDT Rod or the position of the LVDT on the Exciter Head should be adjusted.

WARNING

Do not make mechanical adjustments to an exciter head while the hydraulic power supply is active. Serious personal injury could result.

9.4.2. Displacement Zero Calibration

- Set the Static Setpoint (R301) to 10.0.
- Set the Excitation Mode switch (SW304) to *STATIC*.
- Set the Static Preload switch (SW310) to *TENSION*. The head should fully retract.
- Adjust R172 for 0mV at TP7.

9.4.3. Displacement Scaling Calibration

- Set the STATIC PRELOAD SWITCH (SW310) to *COMPRESSION*. The head should be fully extended.
- Adjust R153 for 10.000V at TP7.
- The static meter should read 100% full scale deflection.
- Repeat steps 4.2. and 4.3. until balance is achieved.

9.4.4. Final External Static Control Variable Calibration

- Verify 10.000V DC at TP7 (accurate to within 1.0mV)
- If necessary, adjust the Static Variable Cal (R311) for 0.5V DC at 110-01-28

9.4.5. Dynamic Displacement Calibration

Set front and rear panel switches and adjustments as follows:

Frequency	(SW309)	Low
Power Amp Input	(SW312)	Internal
Static Preload	(SW310)	Compression
Static Controlled Variable	(SW311)	External
Dynamic Controlled Variable	(SW306)	Internal
Static Gain	(SW305)	Variable
Static Set Point Level	(R301)	5.0
Dynamic Set Point Level	(R303)	5.0
Static Gain Level	(R307)	5.0

- Set the Excitation Mode Switch (SW304) to the *STATIC + DYNAMIC* position.
- Apply a 1V rms, 5 Hz sine wave to the Program Input (J308).
- Adjust R135 for a 5V peak-peak at TP7.

9.4.6. External Static and Dynamic Set Point Calibration

There are no adjustments or calibrations for the External Static and Dynamic Set Point inputs. Verify that the static controlled variable achieves full scale output with a +5VDC, +/-5% signal and that the dynamic controlled variable achieves full scale output with a -5VDC, +/-5% signal.